



deco X50 Modem Unboxing Router User Guide

[Home](#) » [deco](#) » deco X50 Modem Unboxing Router User Guide 

Contents

- [1 deco X50 Modem Unboxing Router User Guide](#)
- [2 One NZ Deco X50 Modem Quick Start Guide](#)
- [3 Read More About This Manual & Download PDF:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

deco X50 Modem Unboxing Router User Guide



One NZ Deco X50 Modem Quick Start Guide

1. Plug your X50 modem into power.

2. Plug the supplied ethernet cable into the first port on your X50 modem and plug the other end into the ONT (fibre wall box) – this is the unit your local fibre company would have installed in your home, which is connected to the fibre optic cables in the street.
3. The light on the side of your modem will flash yellow while it's starting up, flash blue during set up, and will turn solid green once it's connected to fibre.
4. You can now connect your devices to WiFi using the username SSID and password on the base of your X50 modem OR simply hover your phone camera over the QR code to connect.
5. To add more Deco units, manage your network, prioritise devices and heaps more, download the Deco app and follow the prompts. Make sure you select the X50 as your modem type in the app.

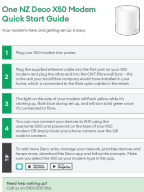


Need help setting up?
Call us on 0800 800 966.

ONZ-DECO X50

Read More About This Manual & Download PDF:

Documents / Resources

	deco X50 Modem Unboxing Router [pdf] User Guide X50, X50 Modem Unboxing Router, Modem Unboxing Router, Unboxing Router, Router
---	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.