

Decor B-0419-0 Plug In Diffuser Starter Set



Decor B-0419-0 Plug In Diffuser Starter Set Instructions

[Home](#) » [decor](#) » Decor B-0419-0 Plug In Diffuser Starter Set Instructions 

Contents

- 1 Decor B-0419-0 Plug In Diffuser Starter Set
- 2 Specifications
- 3 FAQs
- 4 IMPORTANT INSTRUCTION
- 5 PARTS
- 6 GETTING STARTED
- 7 OPERATING INSTRUCTIONS
- 8 CARE AND MAINTENANCE
- 9 Warranty
- 10 CONTACT INFORMATION
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Decor

Decor B-0419-0 Plug In Diffuser Starter Set



Specifications

- Model: B-0419-0
- Dimensions: 14.5cm (L) x 18.5cm (H)
- Power: Electric
- Intended Use: Indoor dry locations

FAQs

Q: Can I use other fragrance oils with this diffuser? A: No, only use Anko fragrance oil with this electric diffuser.

Q: What should I do if the diffuser is damaged? A: Stop using the diffuser if it is damaged or malfunctioning. Contact customer service for assistance.

Q: How often should I clean the diffuser? A: Clean the diffuser as needed when fragrance oil residue accumulates, using a dry cloth.

IMPORTANT INSTRUCTION

IMPORTANT!

Care should be taken with the use of DI users around animals. Do not use in small, conned pet areas without adequate ventilation. FOR FRAGRANCE OIL: KEEP OUT OF REACH OF CHILDREN. NOT TO BE TAKEN.

WARNING-

 
TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS: For fragrance oil replacement, please refer to the "GETTING STARTED INSTALLATION INSTRUCTIONS" section. For cleaning and descaling, please refer to the "CARE AND MAINTENANCE" section.

1. DO NOT touch the air inlet with a singer, do not block up the air inlet on the top of the user.
2. DO NOT use the diffuser on flammable surfaces or near flammable materials, heatsources, or open ames.

3. DO NOT use if the plug-in or diffuser is damaged. If the user malfunctions are damaged or are immersed in water, stop using the diffuser.
4. DO NOT use other fragrance oils with this electric diffuser. Change or renew the scent with anko fragrance oil only. Indoor dry location use only.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. DO NOT immerse the diffuser in water or any other liquid.
8. DO NOT leave the diffuser on or unattended overnight. Please press "OFF" to turn off the diffuser & light when not in use.
9. Unplug the appliance while replacing the fragrance oil bottle and cleaning.
10. The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.
11. The fragrance oil and wick in the plug-in diffuser may turn yellow during usage. This is a normal phenomenon, the product is still usable.

PARTS

1. Air inlet
2. LED light (Inside the diffuser)
3. Plug-in
4. ON/OFF switch
5. Fragrance Oil
6. Decorative part

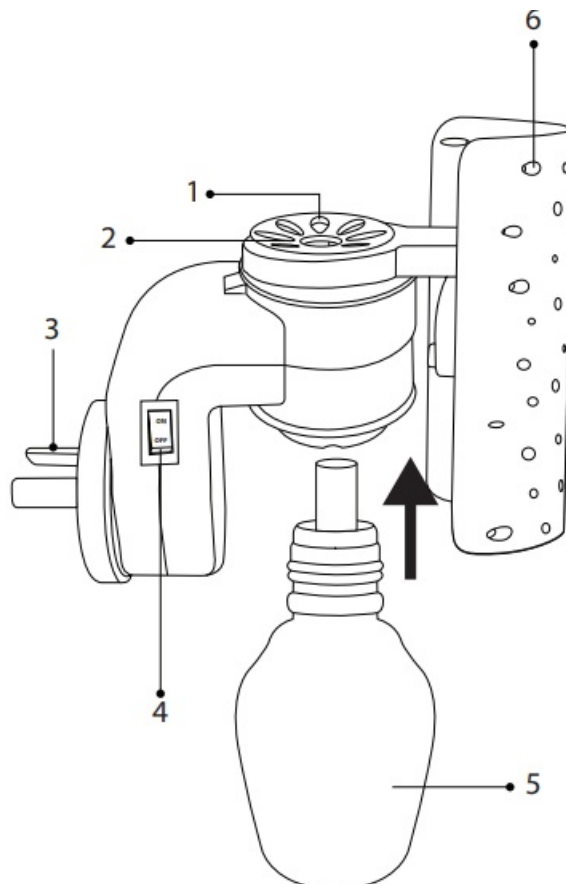

GETTING STARTED

 
GETTING STARTED INSTALLATION INSTRUCTIONS

1. For first-time use, remove the packaging from the electric diffuser & fragrance oil and set it on a level surface.




STEP.1

2. Hold the fragrance oil bottle upright. Twist the cap counterclockwise to open. The wick and wick protector will be revealed. Do not remove or touch the wick and wick protector.

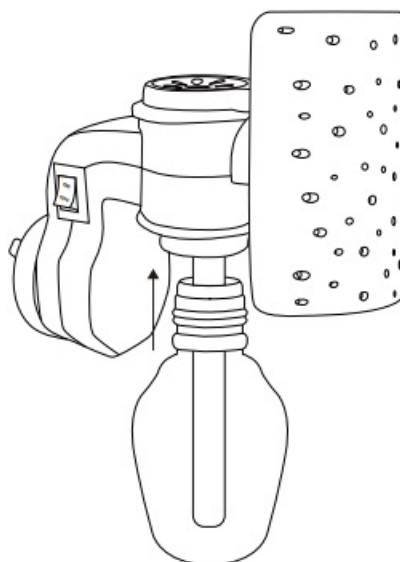

STEP.2

 3. Keeping the wick upright, firmly grip the top of the diffuser unit and insert the fragrance bottle into the bottom of the diffuser. Push up until the neck of the bottle clicks all the way into the body of the diffuser.

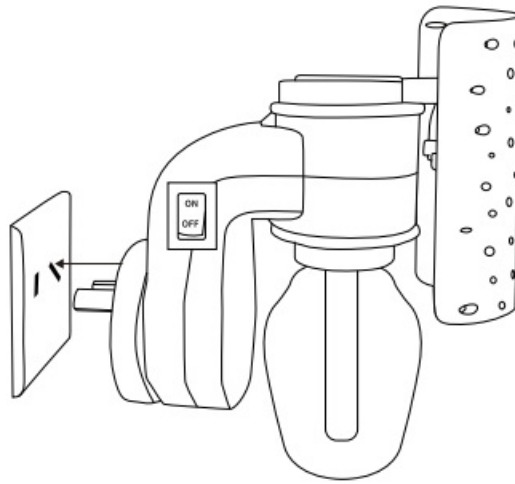

STEP.3

Allow 20 inches of space around the product for air flow and diffusion. Do not position in confined spaces or pet areas without adequate ventilation. Do not place oil bottles or caps on finished surfaces as fragrance oil residue may cause damage. Use only in areas with at least 20-inch clearance above the product to avoid potential discoloration to surrounding surfaces.

OPERATING INSTRUCTIONS

1. Plug product into a wall outlet, and always keep the product upright. Never allow the fragrance oil bottle to remain in a horizontal position as the fragrance oil will spill. If fragrance oil spills, wipe up immediately as oil may cause damage (discoloration or staining) to finished surfaces.
2. Press "ON" button on the side of the product to turn on the diffuser and light function, Press "OFF" to turn off the diffuser and light function.
3. When the fragrance bottle is empty, Press "OFF" to turn off the diffuser function and unplug the product from an outlet by grasping the side edges. Avoid reaching behind unit to remove it from an outlet. Allow the unit to cool before replacing with a new fragrance oil bottle.
4. Firmly hold the top of the diffuser unit and pull the empty fragrance oil bottle downwards with a slight twisting motion. Discard the empty fragrance oil bottle. Note: Never attempt to refill an empty fragrance bottle.

CARE AND MAINTENANCE

1. Always turn OFF and unplug the diffuser for care and maintenance.
2. With use, fragrance oil may collect on the diffuser. To clean, unplug the diffuser and wipe with a dry cloth. No service is required.

MOVING AND STORAGE INSTRUCTIONS:

Store used fragrance oils upright to prevent spilling. When storing the electric fragrance diffuser, first allow to cool. Then place the diffuser on top of a cleaning rag or napkin to absorb any potential fragrance oil residue.

Warranty

12 Month Warranty

Thank you for your purchase. Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation. We will provide you with your choice of a refund, repair

(where possible), or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

WARNING: When using this electric product, please follow all basic precautions including the following: Read all instructions carefully before using this product. To reduce the risk of injury, close supervision is necessary when the product is used near children and pets. Do not put your fingers or hands into the product. Do not immerse in water. Risk of electrical shock. This product is not a toy. For adult use only.

CONTACT INFORMATION

FIRST AID INSTRUCTION

For advice, contact a Poisons Information Centre (e.g. phone Australia 131126; New Zealand (0800 764 766) or a doctor at once. If swallowed, do NOT induce vomiting. Keep away from children.

 
Contact for Kmart purchases

- Kmart Australia Ltd.
C/- Customer Service Centre 690 Springvale
- Road, Mulgrave Vic 3170
Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via
- Customer Help at kmart.com.au

Contact for Target purchases

- Target Australia Pty Ltd
- C/- Customer Service Centre
- 2 Kendall Street, Williams Landing, Vic, 3027
- Customer Service: 1300 753 567 or via
- Customer Help at target.com.au/help/contact-us

Documents / Resources

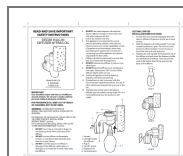

[Decor B-0419-0 Plug In Diffuser Starter Set](#) [pdf] Instructions

B-0419-0 Plug In Diffuser Starter Set, B-0419-0, Plug In Diffuser Starter Set, Diffuser Starter Set , Starter Set, Set

References

- [User Manual](#)