

DEEGO 2 Layer File Box Water Resistant File Organizer User Guide

Home » DEEGO » DEEGO 2 Layer File Box Water Resistant File Organizer User Guide 🖫



Contents


- 1 2 Layer File Box Water Resistant File Organizer
- 2 Documents / Resources
 - 2.1 References

2 Layer File Box Water Resistant File Organizer


How to change the password if you know the old one

Step 1:


Put in the right combination (the original number is 000)

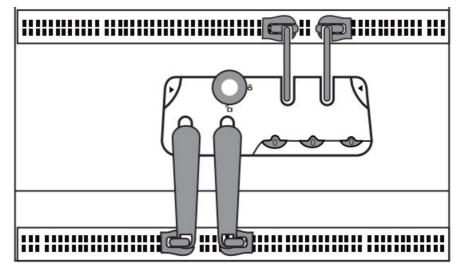


Step 2: Press down the reset button with a tool until a "click" sound

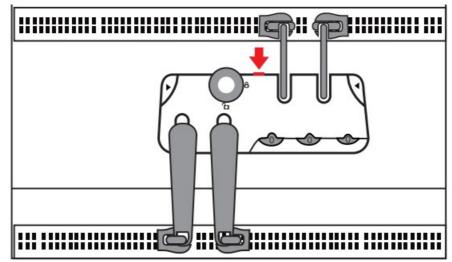

Step 3: Set your new combination

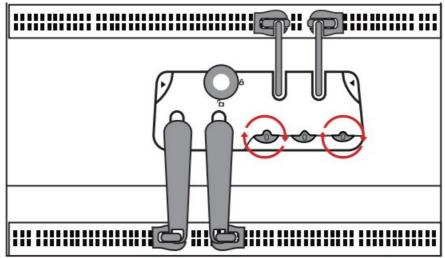



Step 4:
Hole the buttions on both sides, the zipper will be undone and the password will be set

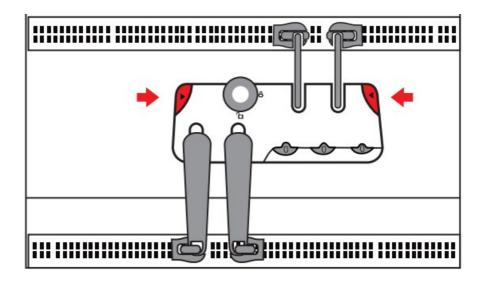

Tips:


- 1. No keys included.
- 2. The TSA lock only allows TSA screeners use key to check the bag without damaging the lock

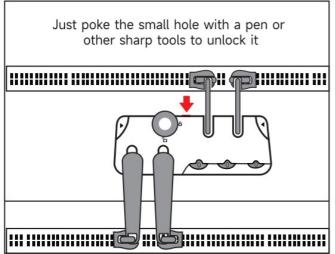

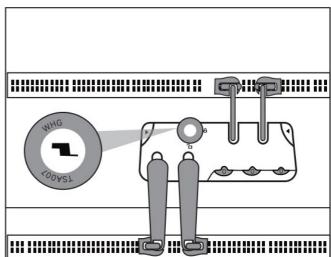



Documents / Resources

 

<u>DEEGO 2 Layer File Box Water Resistant File Organizer</u> [pdf] User Guide 2 Layer File Box Water-Resistant File Organizer, 2 Layer, File Box Water-Resistant File Organizer, Water-Resistant File Organizer, Resistant File Organizer

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.