



DEEGO 983101BLK Fireproof Document Box with Lock Instruction Manual

[Home](#) » [DEEGO](#) » DEEGO 983101BLK Fireproof Document Box with Lock Instruction Manual 

Contents

- [1 DEEGO 983101BLK Fireproof Document Box with Lock](#)
- [2 Diagram Description](#)
- [3 Specifications](#)
- [4 FAQ](#)
- [5 File Box Password Lock Instruction](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

DEEGO®

DEEGO 983101BLK Fireproof Document Box with Lock



How to set a password?

This lock is a dual-control structure, Button1 controls Slot1, Button2 controls Slot2, and they are controlled by the same set of passwords. The initial combination is 0-0-0.

To set your personal combination, follow these steps:

1. Open the lock, pull down the reset button, and turn the dials to the desired combination.
2. Pull the Button1 or Button2 along the arrow, Please confirm the reset button has been reset!
3. Don't forget the new combination!

If you forget the password you set, the lock may no longer be opened and your important items will be locked inside.

Diagram Description

The diagram shows the top view of the File Box Password Lock. It is labeled with the following parts:

- Reset Button located at the top center, labeled as 'Reset Button'
- Two buttons on the right side, labeled as 'Button1' and 'Button2'
- Three dials at the bottom, labeled as 'Dials'
- Two slots on the left side, labeled as 'Slot1' and 'Slot2'

Specifications

Feature	Description
Lock Type	Dual-Control Structure
Initial Combination	0-0-0
Reset Button	Used to set a new combination
Buttons	Two buttons to control corresponding slots
Dials	Three dials to set the combination
Slots	Two slots for lock mechanism

FAQ

What is the initial combination for the File Box Password Lock?

The initial combination is set to 0-0-0.


How do I reset the combination on my File Box Password Lock?

To reset the combination, open the lock, pull down the reset button, and turn the dials to your desired combination. Then, pull the corresponding button along the arrow and confirm the reset button has been reset.

What happens if I forget my combination?

If you forget the password you set, the lock may no longer be opened, and your important items will be locked inside. Therefore, it is critical to remember your new combination.

File Box Password Lock Instruction

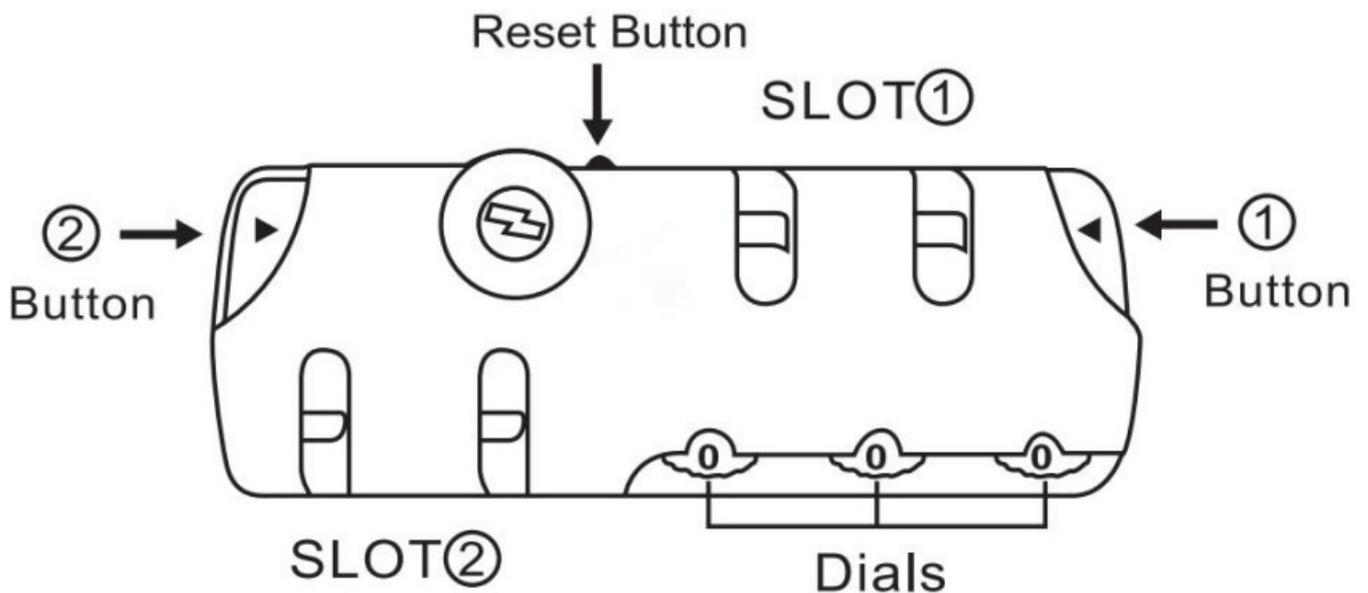

How to set a password?

This lock is a dual-control structure, Button①controls Slot①, Button② controls Slot②, and they are controlled by the same set of passwords.

The initial combination is 0-0-0.

To set your personal combination, follow these steps:

- A. Open the lock, pull down the reset button, and turn the dials to the desired combination.
- B. Pull the Button①② along the arrow, Please confirm the reset button has been reset!
- C. Don't forget the new combination! If you forget the password you set, the lock may no longer be opened and your important items will be locked inside

Documents / Resources

	<p>DEEGO 983101BLK Fireproof Document Box with Lock [pdf] Instruction Manual 983101BLK Fireproof Document Box with Lock, 983101BLK, Fireproof Document Box with Lock, Document Box with Lock, Box with Lock, Lock</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)