


# deep White Noise Machine and Wireless Bluetooth Speaker User Manual

Home » deep white Noise Machine and Wireless Bluetooth Speaker User Manual

#### **Contents**

- 1 deep White Noise Machine and Wireless Bluetooth Speaker
- 2 Introduction
- **3 WHAT'S IN THE BOX**
- **4 AMBIENT SOUND MODE**
- **5 BLUETOOTH PAIRING MODE**
- **6 Automatic Features**
- 7 Resetting to factory settings
- **8 Electrical Specifications**
- 9 Latest version of the User manual & Certifications
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts

deep White Noise Machine and Wireless Bluetooth Speaker

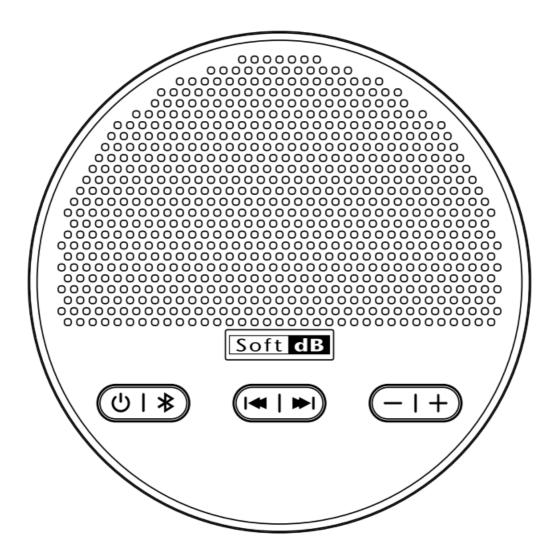



#### Introduction

• Congratulations on getting your DEEP Bluetooth® speaker.Better sleep at night and focus at work await you! But first, please read our simple instructions on how to use it.


#### WHAT'S IN THE BOX

DEEP speaker unit

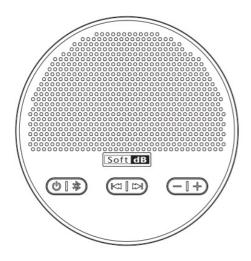


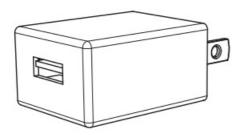


Micro USB charging cable

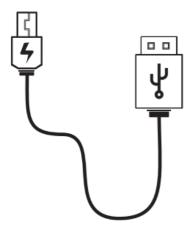


# User manual

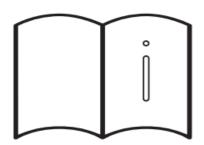

Power/Charge: Connect your speaker to a power source using the included Micro USB cable and wall charger.

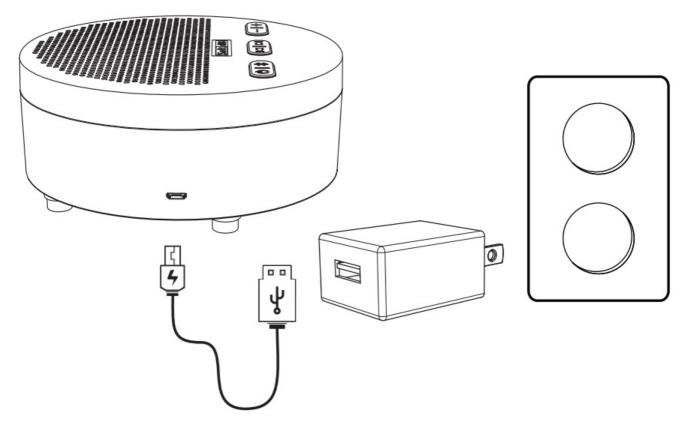

Press the power button for 2 seconds to turn the speaker ON. Press once to turn it OFF.

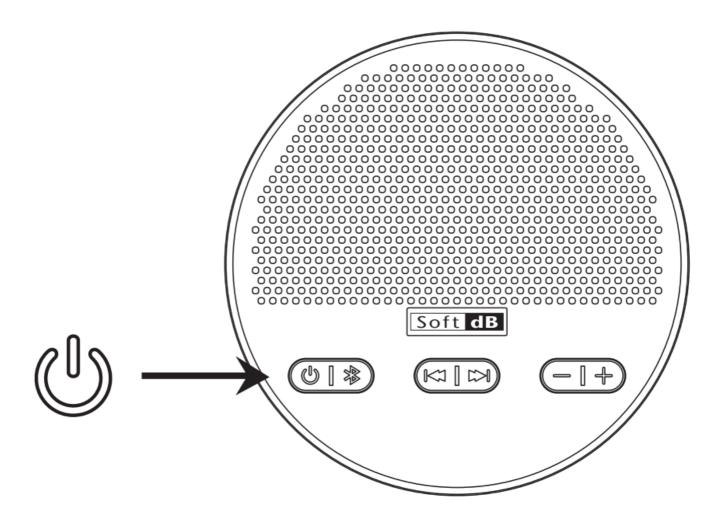


#### **AMBIENT SOUND MODE**

Press the left/right arrow buttons to play different built-in sounds.



10 ambient sounds included in the speaker.

- · Rain & Thunder
- · Campfire Night
- Steady Rainfall
- · Singing Birds
- · Ocean Waves
- Zen New Age
- · Water Stream

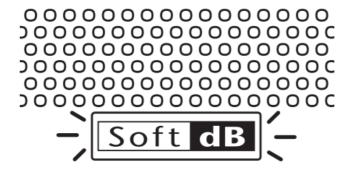


- · Deep White Noise
- Deep Pink Noise
- True Sound Masking

Increase or decrease the volume by pressing the plus/minus buttons.




# **BLUETOOTH PAIRING MODE**

Press the Bluetooth button to activate Bluetooth pairing mode.

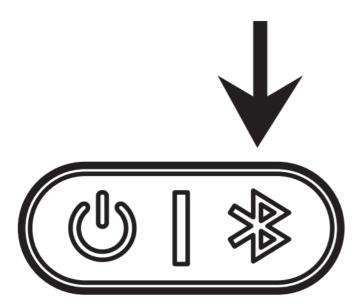

The Bluetooth button light will blink. The speaker is ready to pair.

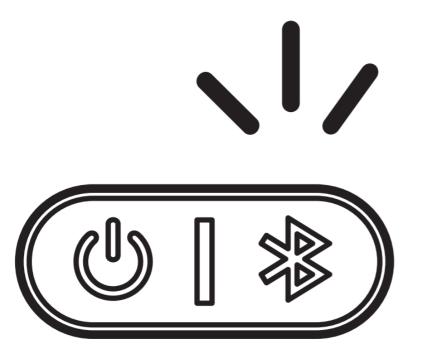


On your audio source device, connect to Soft dB // DEEP

Once connected, start playing music from your audio source device.



Press the Bluetooth button for 5 seconds to disconnect Deep from your device. It is now ready to pair with a new device.

Press the Bluetooth button once to disconnect Bluetooth mode and listen to in-built ambient sounds.

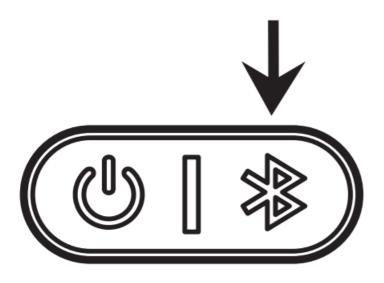

Meaning of different button lights and blinking patterns.

0	\ <b>\</b>	0
Fixed light	Slow blinking	Fast blinking
Full battery	Charging	Low battery
Connected	Ready to pair	

## **Automatic Features**

- Auto Blackout Mode: Button lights and sound masking back-lit indicator shut off automatically after 3 minutes.
- Settings Recall: Playback mode, sound selection, and volume level are remembered when the speaker is turned off and on again.

# Resetting to factory settings

- 1. Connect your speaker to a power source using the included Micro USB cable and wall charger.
- 2. Press and hold the power button for over 5 seconds. The speaker will be restored to original factory settings.

# **Electrical Specifications**

Input voltage: 5V DC

Input current: 1A Standby power: <1mW

#### Latest version of the User manual & Certifications

- For the latest version of the user guide and more information on our certifications, please visit deep.softdb.com
- FCC and ISED Canada Compliance: This device complies with Part 15 of the FCC Rules and ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



deep.softdb.com



#### **Documents / Resources**

#### deep

Comparison on the proposition on the proposition on the proposition on the proposition of the proposition of

deep White Noise Machine and Wireless Bluetooth Speaker [pdf] User Manual White Noise Machine and Wireless Bluetooth Speaker, White Noise, Machine and Wireless Bluetooth Speaker, Wireless Bluetooth Speaker, Speaker

## References

- Sound Machine & Wireless Bluetooth Speaker Combined | Soft dB
- User Manual

Manuals+,