




Deepano AITP04 Face Access Terminal User Guide

[Home](#) » [Deepano](#) » Deepano AITP04 Face Access Terminal User Guide 



Face Access AITP04 Quick Start Guide (Web Operations)

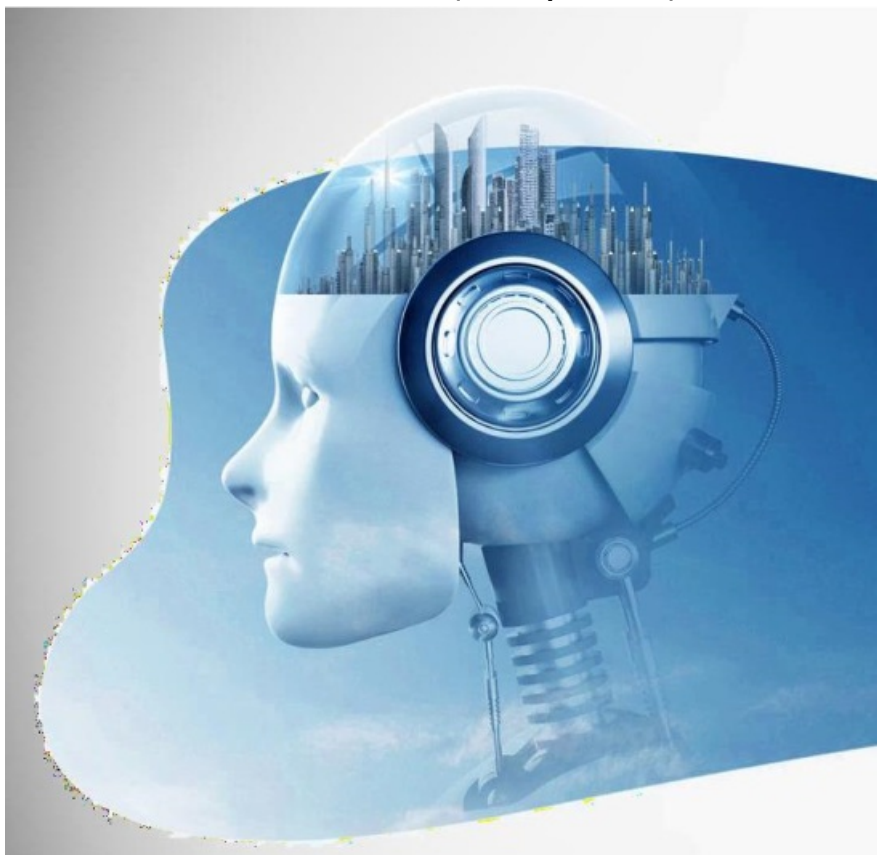

HARDWARE INSTALLATION

Contents

- [1 Plug in the Power Supply and Network Cables](#)
- [2 Choose an AITP04 Mounting Option](#)
- [3 SOFTWARE CONFIGURATION \(Web\)](#)
- [4 FCC Statement](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Plug in the Power Supply and Network Cables







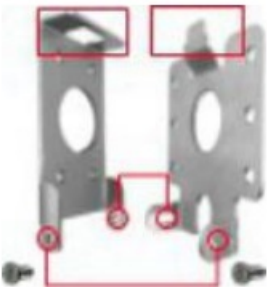
Plug in the RJ-45 Ethernet and power supply cables into the AITP04 unit and power ON the AITP04 unit

Note: The other end of the power supply cable must be connected to the power supply. The other end of the RJ-45 should be connected to a LAN-connected router, bridge or switch.




Choose an AITP04 Mounting Option

- A. Wall Mount (incl. in standard packaging)
- B. Desktop Mount (incl. in standard packaging)
- C. Gate Mount (incl. in custom packaging only)

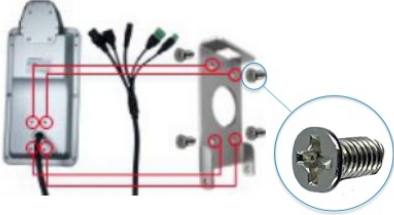
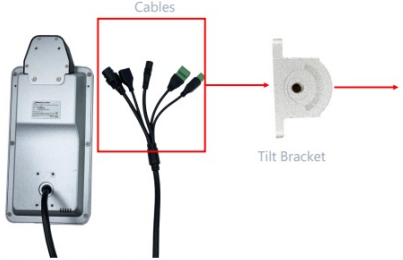
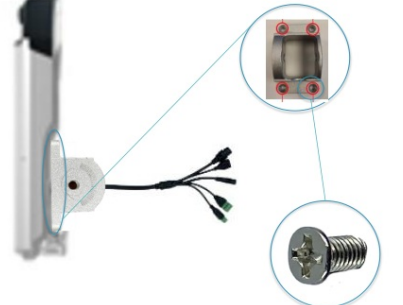
2A Wall-mount the Face Access AITP04 Unit

 <p>Wall-mounted AITP04</p>	 <p>Cables AITP04 Wall Mount Holder</p>	<p>Push all cables through the center hole of the provided AITP04 Wall Mount Holder</p>
		<p>Fasten the AITP04 to the AITP04 Wall Mount Holder with the 4 screws</p>
	 <p>Wall Bracket</p>	<p>Fix the provided wall bracket on the wall</p>
		<p>Attach the combined AITP04 & AITP04 Wall Mount Holder unit to the wall bracket fixed to the wall</p>

2B Desktop-mount the Face Access AITP04 Unit

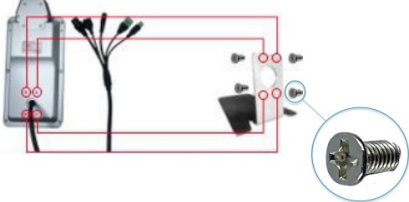 <p>Desktop-mounted AITP04</p>	 <p>Cables AITP04 Desktop Mount Holder</p>	<p>Push all cables through the center hole of the provided AITP04 Desktop Mount Holder</p>
		<p>Fasten the AITP04 to the AITP04 Desktop Mount Holder with the 4 screws</p>


2C Gate-mount the Face Access AITP04 Unit

 <p>Gate-mounted AITP04</p>	 <p>Cables Tilt Bracket</p>	<p>Push all cables through the center hole of the provided tilt bracket</p>
		<p>Attach the tilt bracket (with cables passing through it) to the AITP04</p>

 <p>Gate-mounted AITP04</p>	 <p>Short Pipe Shaft Gate Mount Long Pipe Shaft Gate Mount</p>	<p>Attach the combined AITP04 and tilt bracket unit (with cables passing through it) to the provided pipe of the gate-mount using the 2 screws provided</p>
--	---	---


SOFTWARE CONFIGURATION (Web)

1. Wait for Face Access AITP04 Unit's I.P Address

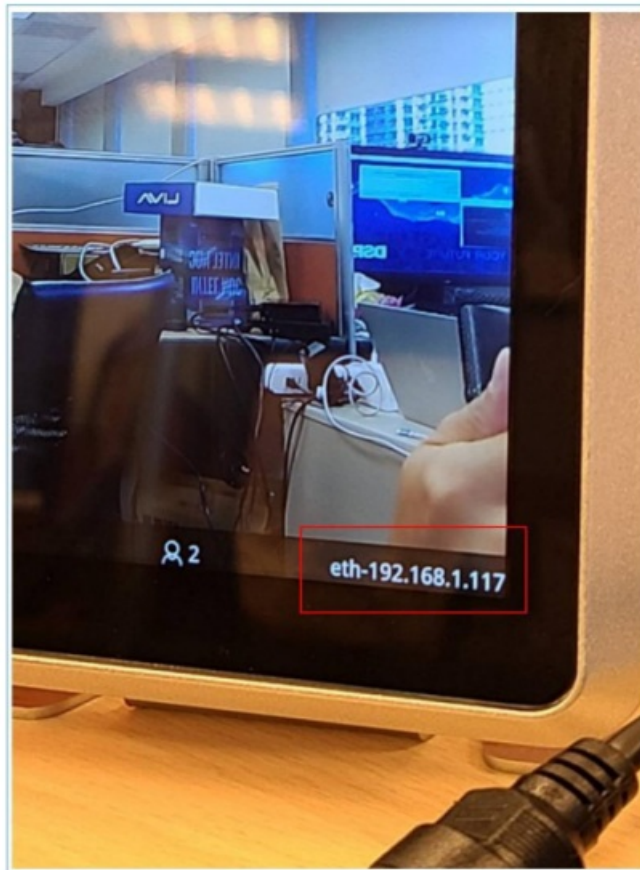


After powering ON the AITP04 unit, wait till the assigned I.P address from the DHCP server shows on the bottom-right side of the AITP04 display screen.


2. Accessing the AITP04 Unit's Device Settings (Any Web Browser)

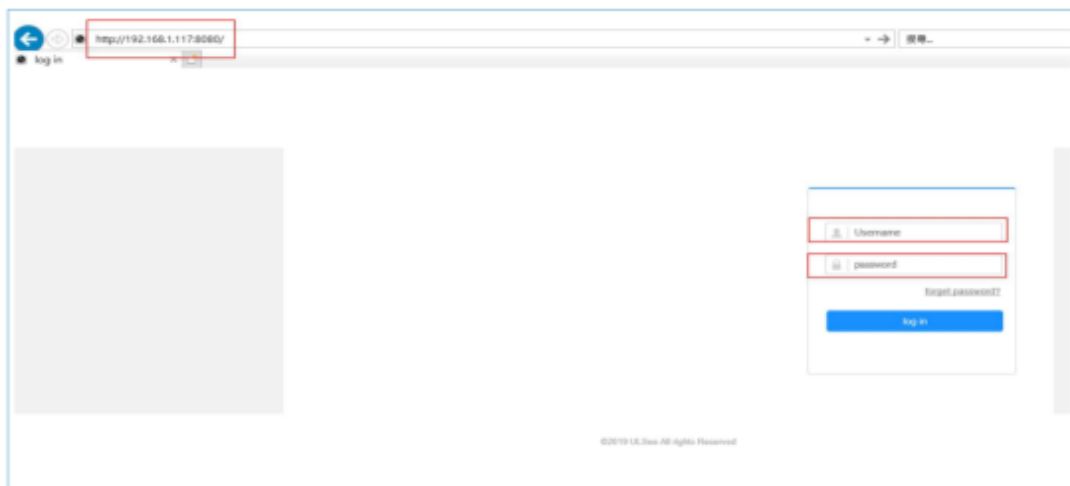


Type in the AITP04's I.P address and port number 8080 into the Internet Explorer Web browser of a Windows PC. Type in username admin, password admin123, and click on log in.

3. Viewing the Live Video Stream of a Face Access AITP04 Unit (Windows' Internet Explorer Web Browser only)

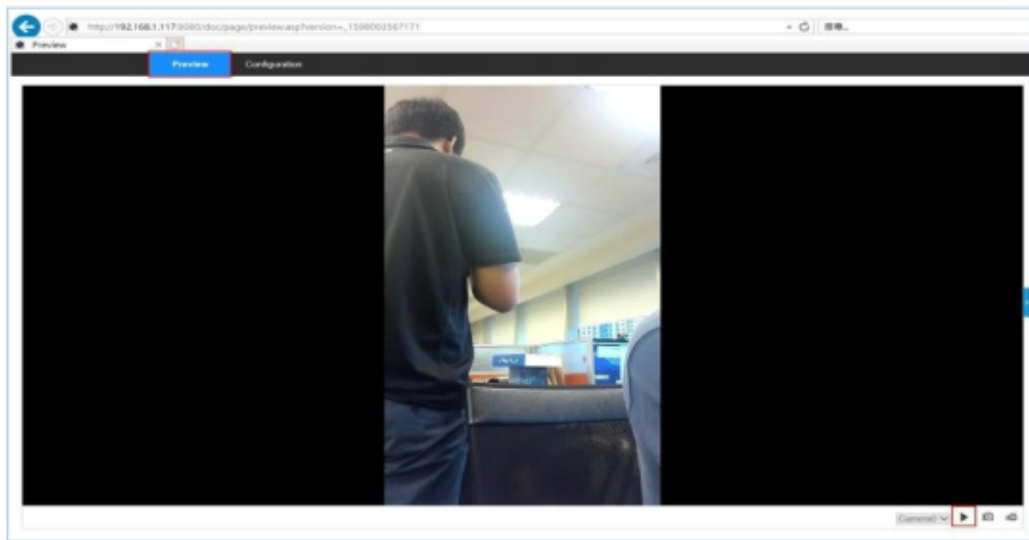


Click on Preview to view the live video stream from a Face Access AITP04 unit's camera, choose the camera from the drop-down menu from the bottom-right set of controls, and click the  button.

4. Accessing All AITP04 Unit's Configuration Settings (Any Web Browser)

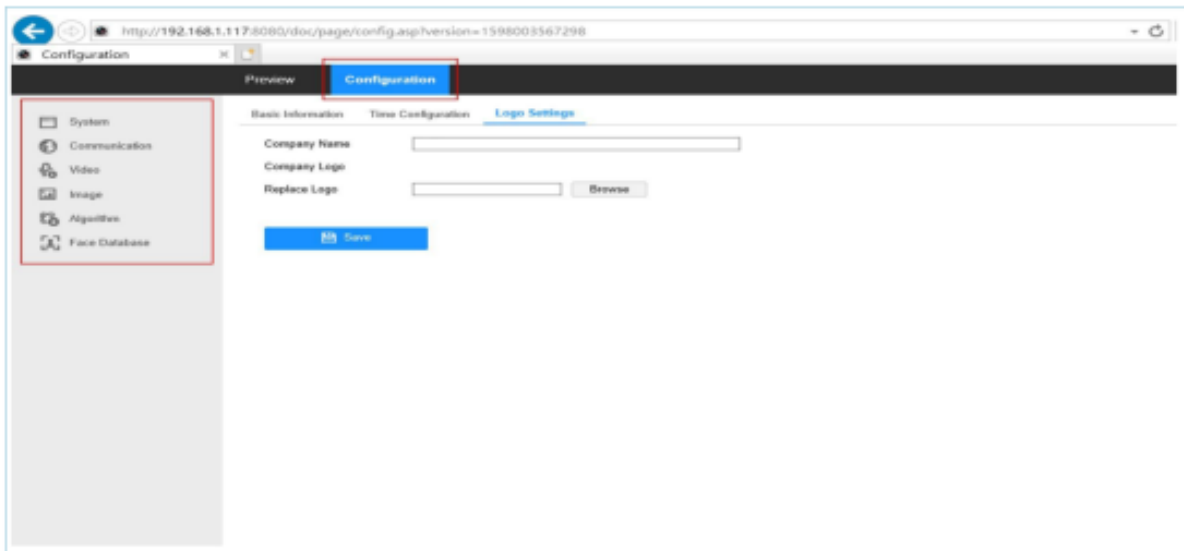


Click on Configuration to access the configuration settings menu. The configuration settings menu can be found on the left-side pane.

5. Configuring the AITP04 Unit's Panel Display Settings

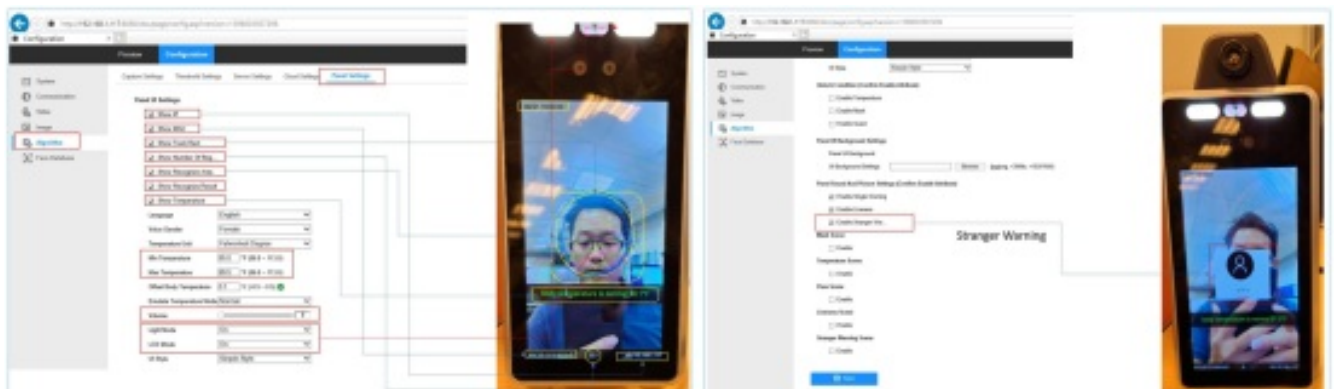

Click on Configuration → Algorithm → Panel Settings to configure the panel U.I.settings as well as panel sound-picture settings for stranger warning alerts

6. Configuring the AITP04 Unit's Body Temperature and Protective Face Mask Temperature Detection Settings

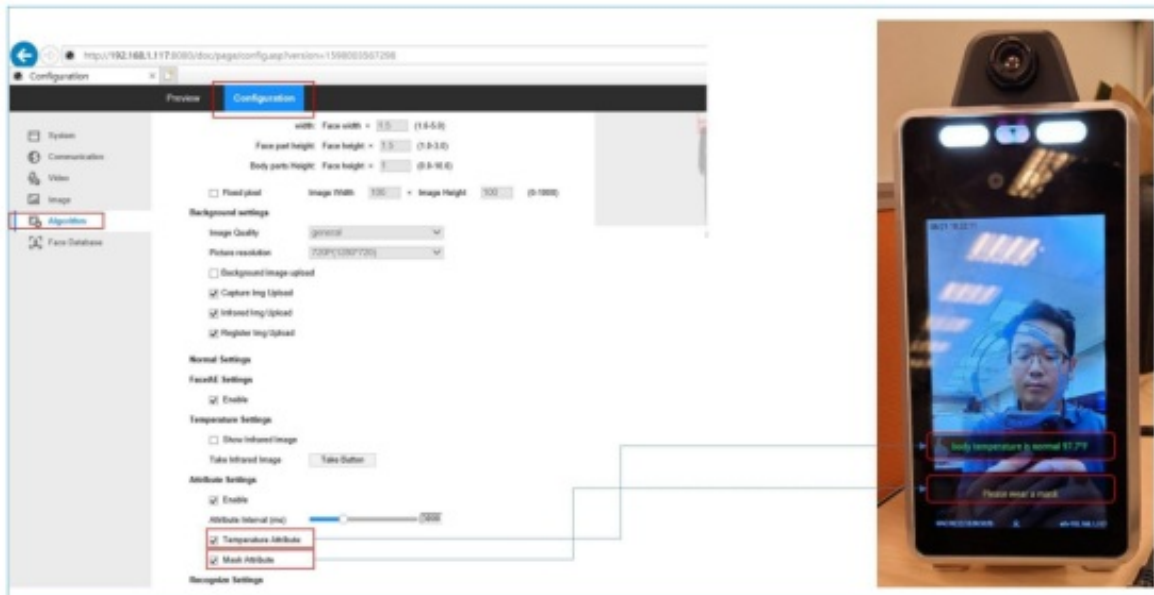

Click on Configuration → Algorithm → Capture Settings to configure the Body Temperature and Protective Face Mask detection settings

7. Adding the Users' Data into the Face Database (Any Web Browser)

Serial Number	Name	Gender	Age	Work ID	Card Type	Card Number	Card Number	Phone	Email	Address	Operation

- Click on Configuration → Face Database to add users' data to the face database
- Enter a user's personal ID data, work ID data, contact data, personal ID certification data and work ID certification data
- Click on Add Person

Upon successful addition of user data, the user's record appears as shown below –

Serial Number	Name	Gender	Age	Work ID	Card Type	Card Number	Card Number	Phone	Email	Address	Operation
C1J08U788E4C83C9CU112F801	Romas	Female	35	1234	ID Card						

Read Page: 1 / 1 Tail Page: 1 Count / Page: 1 Total 1 Page: 1 Count

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The distance between user and device should be no less than 20cm.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Documents / Resources



[Deepano AITP04 Face Access Terminal \[pdf\] User Guide](#)
AITP04, 2AXPT-AITP04, 2AXPTAITP04, AITP04 Face Access Terminal, Face Access Terminal