

DEEPCOOL WIND PAL FS Notebook Cooler User Guide

Home » DEEPCOOL » DEEPCOOL WIND PAL FS Notebook Cooler User Guide 🖺



WIND PAL FS Notebook Cooler User Guide



www.deepcoolglobal.com

Contents

- 1 Pre-Use Note
- 2 Specifications
- **3 Components List**
- 4 Features
- 5 How to Use
- 6 Documents /

Resources

- 6.1 References
- **7 Related Posts**


Pre-Use Note

- 1. Check the product condition before use. In case of any problem, please contact your retailer.
- 2. To ensure product lifespan, please do not use on uneven or vibrating surfaces.
- 3. To ensure fan performance, please do not interrupt the air inlets or obstruct the fan rotation.
- 4. All specifications subject to change without notice.
- 5. Under no condition shall Deepcool be liable for any indirect, incidental or consequential damages arising from any defect or error in this manual or product.
- 6. For more information for this product, please visit our website: www.deepcoolglobal.com.

Specifications


Overall Dimension	382X262X24mm
Fan Dimension	140X140X15mm
Weight	793g
Rated Voltage	5VDC
Operating Voltage	4.5~5VDC
Rated Current	0.26±10%~0.40±10%A
Power Input	1.3~2.0W
Fan Speed	700±150~1200±10%RPM
Max. Air Flow	115CFM
Noise Level	21.5~26.5dB(A)
Bearing Type	Hydro Bearing

Components List

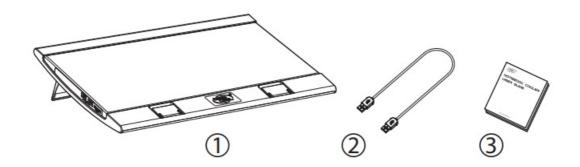


- 1. WIND PAL FS
- 2. USB Power Cable
- 3. User Guide

Features

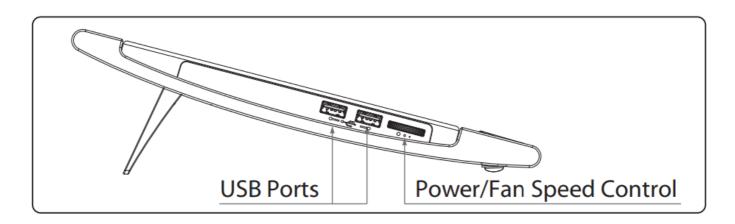

How to Use

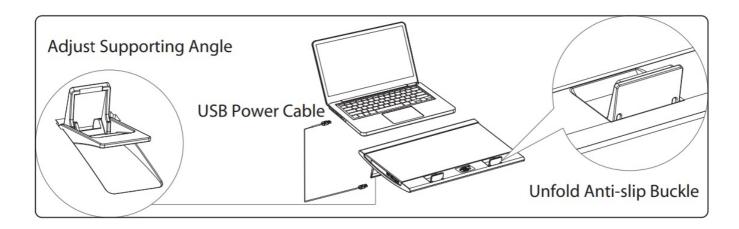

- 1. Connect WIND PAL FS with Notebook using the USB power cable.
- 2. Turn the knob in clockwise direction to switch on the fan and adjust the fan speed accordingly. And turn the knob in unclockwise direction to switch off the fan.
- 3. Use either one USB port for power input, and the other USB port for your USB device.

Documents / Resources



DEEPCOOL WIND PAL FS Notebook Cooler [pdf] User Guide WIND PAL FS, Notebook Cooler, WIND PAL FS Notebook Cooler, Cooler

References

• O DeepCool

Manuals+,