



## DEEPIKA Buttons and LED Indicators User Guide

[Home](#) » [DEEPIKA](#) » DEEPIKA Buttons and LED Indicators User Guide 

### DEEPIKA Buttons and LED Indicators



#### Contents

- 1 Quick Start Guide
  - 1.1 Buttons and LED Indicators
- 2 Bluetooth Controllers Set Up
- 3 Wired Controllers Set UP
- 4 Update the Software
- 5 Buttons Table
- 6 Documents / Resources
- 7 Related Posts

## Quick Start Guide

### Buttons and LED Indicators

1. USB A-Male: Connect the adapter to the Nintendo Switch, PS3 or PC system.
2. USB A-Female: Connect the wired PS4, PS3, Nintendo Switch Pro, Xbox One, Xbox One S, Xbox 360 controllers and fight sticks, and standard wired USB controllers to the adapter.
3. LED Indicators
  - LED Indicator in Blue: PS3 or PC Dinput System mode
  - LED Indicator blinks slowly: The Bluetooth is not connected yet
  - LED Indicator blinks quickly: The Bluetooth is syncing
  - LED Indicator lights up: The Bluetooth has been paired- LED Indicator in Red: Nintendo Switch System mode
  - LED Indicator blinks slowly: The Bluetooth is not connected yet
  - LED Indicator blinks quickly: The Bluetooth is syncing
  - LED Indicator lights up: The Bluetooth has been paired
  
  - LED Indicator in Green: PC Xinput System mode
  - LED Indicator blinks slowly: The Bluetooth is not connected yet
  - LED Indicator blinks quickly: The Bluetooth is syncing
  - LED Indicator lights up: The Bluetooth has been paired
  
  - LED Indicator in Purple: Switch Pro mode
  - LED Indicator blinks slowly: The Bluetooth is not connected yet
  - LED Indicator blinks quickly: The Bluetooth is syncing
  - LED Indicator lights up: The Bluetooth has been paired
  
  - LED Indicator in Yellow: NEOGEO mini mode
  - LED Indicator blinks slowly: The Bluetooth is not connected yet
  - LED Indicator blinks quickly: The Bluetooth is syncing
  - LED Indicator lights up: The Bluetooth has been paired

#### **Note:**

**The Bluetooth is not connected yet if LED Indicators blink slowly (around 2 times/second)**

4. Button on the side of the adapter: Used for the modes switch and Bluetooth pairing.
  - Press the button shortly to SYNC the controllers and the adapter. The indicator blinks quickly.
  - To switch the modes, press and hold the button on the side of the adapter for 3-5 seconds. The LED indicator blinks slowly in blue for the PS3 or PC Dinput system mode, the Nintendo Switch mode is red, the PC Xinput mode is green, and the Switch Pro mode is purple.

### Bluetooth Controllers Set Up

1. Firstly connect the Nintendo Switch system to a TV. Just turn on your PC if you use the adapter on your PC system.

2. Connect the adapter into any spare USB port on your Nintendo Switch or PC system.
3. To switch the modes, press and hold the button on the side of the adapter for 3-5 seconds. The LED indicator blinks slowly in blue for the PS3 or PC Dinput system mode, the Nintendo Switch mode is red and the PC Xinput mode is green.
4. Turn on the Bluetooth controllers
5. To sync the Bluetooth controller and the adapter, press the Button on the side of the adapter, and then press the SYNC button on your Bluetooth controller. The LED indicator blinks quickly

**Note:**

If the Bluetooth syncing failed, please connect the Bluetooth controller to the adapter using a USB cable (not included in the packaging, you can purchase it separately). As soon as the controller is identified by the system, you can disconnect the USB cable and start to SYNC it again.

6. The Bluetooth has been paired if the LED indicator lights up.
7. Your controller is now ready to use.

## **Wired Controllers Set UP**

1. Firstly connect the Nintendo Switch system to a TV. Just turn on your PC if you use the adapter on your PC system.
2. Connect the adapter into any spare USB port on your Nintendo Switch or PC system.
3. Connect the wired controllers to the adapter.

**Note:** Connect the wireless PS4, PS3, Nintendo Switch Pro, Xbox One S Controller to the adapter using a USB cable (coming with your game console system or you can purchase it separately) Xbox 360 controller must be a wired one, not a wireless controller plus a USB cable.

4. Your controller is now ready to use.

## **Update the Software**

If you are having problems with the adapter, you can follow the below instructions to update the software.

1. Download the software from <http://www.mayflash.com/Support/Download/> and install it on your Windows system.
2. Double click on the updater and leave the updater window open on your screen.
3. Connect the USB from your adapter into any spare USB port on your PC.
4. Please make sure your adapter is in the Nintendo Switch or PS3/Dinput mode (The LED indicator is in Red or Blue). If not, please switch the adapter to the Nintendo Switch or PS3/Dinput mode by pressing and holding the button located at the side of the adapter for 3-5 seconds.
5. As soon as the adapter has been recognized (LED indicator turns off), select "Update".
6. Do not disconnect the device until you are informed that the updated was completed successfully.





**Note:**

1. Only one Bluetooth controller is supported for one adapter.
2. A wired USB controller and a wireless Bluetooth controller can be connected at the same time, but both of them have the same functions and can only play one game character.

- To switch A-B, B-A, X-Y, Y-X, press and hold the button “START” and “A” for 3 seconds.  
To switch A-A, B-B, X-X, Y-Y, press and hold the button “START” and “B” for 3 seconds. This works only when you connect your Switch Pro, Switch Joy-Con and Wii U Pro controllers to a PC Xinput system.
- The A-B X-Y can be switched once you connect your Xbox 360 or Xbox One/S controller to the Switch system.  
To switch A=B B=A X=Y Y=X, press the button “START” and “B” for 3 seconds; to switch A=A B=B X=X Y=Y, press the button “START” and “A” for 3 seconds.
- The Switch Pro mode supports the controller vibration.
- When you connect your PS4 controller to the Switch system through the adapter, the Touch Pad button on the PS4 controller works as the Capture button of Switch system. Please see more details about the other controllers on the “Buttons Table”
- If you connect up to 4 Bluetooth controllers to the adapter, you can disconnect the first controller by pressing the button located on the side of the adapter, and disconnect the second one by pressing the button, and then the third and fourth controller using the same way.
- To use the Nintendo Joy-Con controllers, please connect the Nintendo Joy-Con (R) firstly, then connect the Joy-Con (L).
- Logitech wireless gamepad F710 is supported. Please make sure you connect the emitter to the adapter before using.
- To make sure the system can identify the adapter easily, please turn on the “Pro Controller Wired Communication” of the Nintendo Switch system once you switch the adapter to the Switch Pro mode (the LED indicator is purple).

**Tips:** System Settings – Controllers and Sensors – Pro Controller Wired Communication – ON

## Buttons Table

Controllers Buttons Table																	
PS4	X	○	□	△	L1	R1	SHARE	OPTIONS	L3	R3	LS	RS	POV	L2	R2	PS	Pressing Tpad
PS3	X	○	□	△	L1	R1	SELECT	START	L3	R3	LS	RS	POV	L2	R2	PS	SELECT + START
Switch Pro	B	A	Y	X	L	R	—	+	L3	R3	LS	RS	POV	ZL	ZR	HOME	“.” + “.” + “.” or 
Joy-Con	B	A	Y	X	L	R	—	+	L3	R3	LS	RS	POV	ZL	ZR	HOME	“.” + “.” + “.” or 
Xbox One	A	B	X	Y	LB	RB	VIEW	MENU	L3	R3	LS	RS	POV	LT	RT	HOME	VIEW + MENU
Xbox 360	A	B	X	Y	LB	RB	BACK	START	L3	R3	LS	RS	POV	LT	RT	HOME	BACK + START
PC-Xinput	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X/Y Axis	X/Y Circle	POV	Z-	Z+	HOME	
PC-Dinput	③	②	④	①	⑤	⑥	⑨	⑧	⑩	⑪	X/Y Axis	Z Axis Circle	POV	⑦	⑧	⑫	
Wii U Pro	B	A	Y	X	L	R	—	+	L3	R3	LS	RS	POV	ZL	ZR	HOME	“.” + “.” + “.”
Wii Classic Pro	B	A	Y	X	L	R	—	+			LS	RS	POV	ZL	ZR	HOME	“.” + “.” + “.”
Wii mote + Nunchuck	②	A	①	B	C		—	+			LS		POV	Z+		HOME	“.” + “.” + “.”
NEO GEO mini	B	D	A	C			SELECT	START			Joystick		Joystick				
Genesis Mini Controller	B	A				C		START			POV		POV				
MEGA DRIVE Controller	B	A	Y	X	Z	C	MODE	START			POV		POV				
PS4 Taiko Drum	X	○	□	△	L1	R1	SHARE	OPTIONS	Beat the Drum Left	Beat the Drum Right			POV	Beat the Drum Left	Beat the Drum Right	PS	
Switch Taiko Drum	B	A	Y	X	L	R	—	+	Beat the Drum Left	Beat the Drum Right			POV	Beat the Drum Left	Beat the Drum Right	HOME	 Capture
PS Classic	X	○	□	△	L1	R1	SELECT	START					POV	L2	R2		
NEO GEO Arcade Stick PRO	B	D	A	C			SELECT	START					Stick			Options	

## Documents / Resources

<div>DEEPIKA Buttons and LED Indicators [pdf] User Guide</div> <div>Buttons and LED Indicators</div>	
--	--