



Home » DEGEN » Degen DE23 FM/MW/SW DSP Digital Receiver With MP3 and Speaker Function Instruction Manual ₹

Contents [hide]


- 1 Degen DE23 FM/MW/SW DSP Digital Receiver With MP3 and Speaker Function
- 2 CONTENTS
- **3 POWER SUPPLY**
- **4 CHARGING FUNCTION**
- **5 KEY LOCK FUNCTION**
- **6 KEY STROKES DEFINE**
- 7 RADIO MODE
- 8 CLOCK MODE
- 9 SPEAKER MODE
- 10 CARE AND MAINTENANCE
- 11 BATTERY SAFETY INFORMATION
- 12 TROUBLESHOOTING
- 13 SPECIFICATION
- 14 Documents / Resources
 - 14.1 References



Degen DE23 FM/MW/SW DSP Digital Receiver With MP3 and Speaker Function



CONTENTS

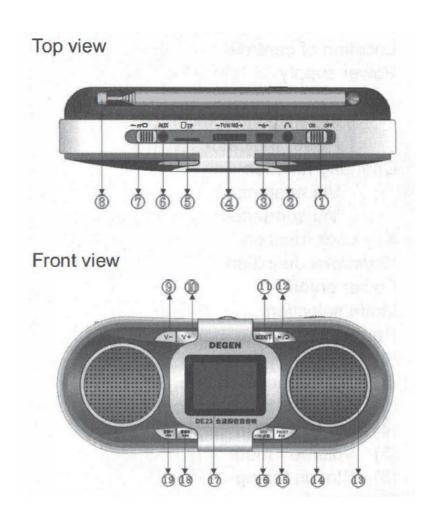

- 1. Power On/Off switch
- 2. Earphone jack
- 3. USB jack
- 4. Tuning dial
- 5. Micro SD/TF card slot
- 6. AUX-in jack

- 7. Lock switch
- 8. Telescopic antenna
- 9. Volume –
- 10. Volume +
- 11. Mode/T button to switch modes (Radio, io/M Music/Speaker/Clock).
- 12. Pause button

Radio mode: Press to mute

Music mode: Press to pause; press and hold for single repeat/All repeat

- 13. Speaker
- 14. Battery compartment
- 15. FM/ST/+10 button

Radio mode: press to select FM; press and hold to select FM frequency 87-108 or 64-87 MHz.

Music mode: press and hold to go forward 10 songs.

16. MW/-10 button

Radio mode: press to select MW; press and hold to select 9K/1 OK MW tuning step. Music mode: press and hold to go back 10 songs.

- 17. LCD
- 18. SW+/>>I

Radio mode: press for upward tuning of the SW band.

Music mode: press to select the next song; press and hold for fast forward play.

19. SW-/I<<

Radio mode: press for downward tuning of the SW band.

Music mode: press to select the previous song; press and hold for fast reverse play.

POWER SUPPLY


Please use the included lithium battery for this device. If you use any other unqualified battery, this may lead to voltage instability and increase fire or explosion hazards.

When the battery's operating time is shortened or the battery expands or is deformed, replace the battery with a new one immediately. Lithium Battery Installation/Replacement:

1. Turn off the device and remove the battery cover.

- 2. Install the provided lithium battery according to the battery's polarity.
- 3. Close the battery compartment.

Power Indicator:

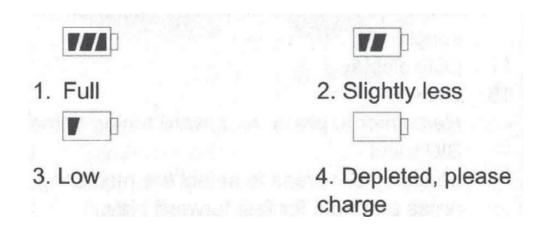

CHARGING FUNCTION

Via Adapter:

After installing the battery, you may charge it by using an external adapter. Connect the device through the mini-USB port to the power source (5V DC/500mA). You can buy an adapter from our company online.

Via Computer:

A computer with a USB jack can also be used as a power source to charge the battery. After installing the lithium battery, connect the device to a computer with the provided USB cable.

When charging, the display shows the power symbol " moving from left to right, and stops when the battery is fully charged. Please disconnect the external power source when charging is complete.

NOTE:

- When charging, the <ON/OFF> button is disabled. If the radio or music mode is not required, please switch to the clock mode.
- When using the battery for the first time, please charge it continuously for more than 6
 hours, but not more than 12 hours. After charging the battery for the first time, you
 can fully charge it within 3-5 hours.
- When not using the device for a long time, please remove the battery

- AC can interfere with the reception of radio signals; do not charge the battery while listening to the radio.
- While charging through a computer, "PC" is shown on the display. Enter the music or radio mode by long pressing the <MODE/T> button.

KEY LOCK FUNCTION

- Lock: Push the < > button to into the lock position. A key symbol " rr0 " is shown on the display. All key entries are now disabled.
- Unlock: Push the < --- > button into the unlock position. The "rr0" disappears from the display. All key entries are now enabled.

KEY STROKES DEFINE

The device is operated by three operating keystrokes: short press, long press, and press & hold.

Unless specified differently, all keystrokes mentioned in this manual are "short press".


- Short press: press the button to take effect immediately.
- Long press: press and hold for 1-2 seconds.
- Press & hold: press and hold until action commences.

POWER ON/OFF

When the <ON/OFF> button is in the "OFF" position, the radio is turned off. By pushing the <ON/OFF> button to "ON", the machine will boot. When booting, the display shows "LOAD" before entering the last used mode .

MODE SELECTION

Press the <MODE/T> button to switch modes.

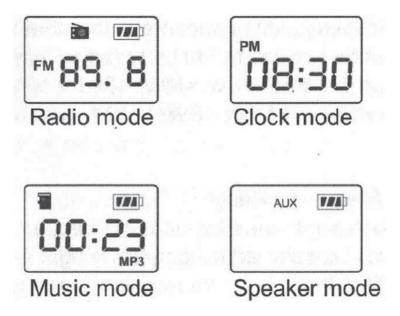

- Radio mode: listen to radio broadcasts. Music mode: Micro SD/TF card music playback.
- Clock mode: time display.
- Speaker mode: connect to an external audio source via audio line-in cable.

RADIO MODE

While turned on, press the <MODE/T> button and select radio mode. The display shows a radio symbol, the band, and the frequency.



Band Selection:

When listening to the radio, press the <FM/ST/ + 10> button to listen to FM band radio ("FM" shows on the display), or <MW/-10> for MW band, or <SW-/ ★ > or <SW+/
▶ for SW band.

FM Frequency Range:

While listening to the FM band, the frequency range can be selected by long pressing <FM/ST/+10>.

"Normal band" frequency range: 87-108MHz "School band" frequency range: 64-87MHz

Mono/Stereo selection:

Mono or stereo can be selected when listening to the FM band. The < (> > symbol on the display indicates stereo listening. Press the

<FM/ST/+1 0> button to change to mono listening, indicated by the $<((^{|}))>$ symbol. If neither symbols are shown on the display, mono/stereo selection is unavailable.

Suggestions:

- When receiving strong FM signals or listening to music, please select stereo.
- When receiving weak FM signals or listening to spoken broadcasts (news broadcasts, for example), please select mono. Stereo decoding may produce noise when listening to spoken broadcasts.

9K/1 OK AM Tuning Steps:

When listening to the AM band, long-press

<MW/-10> to select 9K/10K steps. When the display shows "522", it means 9K steps are selected; when it shows "520", it means 1 OK step is selected.

Volume / Mute:

To increase the volume, press <V+>. To decrease volume, press <V->. The volume adjustment is shown on the display. In radio mode, press < to mute, press again to restore the sound.

Station Tuning:

When tuning into stations, please avoid dense areas of buildings, electrical equipment, and AC power disturbances. Optimal use of the antenna can improve signal reception.

Using the Telescopic Antenna:

By adjusting the length and direction of the antenna, the signal strength of FM and SW broadcasts can be enhanced. Please adjust according to the optimal reception sensitivity in your location.

Using the Internal Ferrite Antenna:

By adjusting the direction of the radio body, AM signal reception can be enhanced. Please slowly adjust ?he position of the entire radio according to the optimal reception


sensitivity in your location.

Radio Tuning Methods:

When the radio is turned on with an appropriate volume level, choose the desired band and gently rotate the < – Tuning + > dial. Stop rotating the dial when a satisfactory station is found.

CLOCK MODE

When the radio is on, press the <MODE/T> button to choose clock mode.

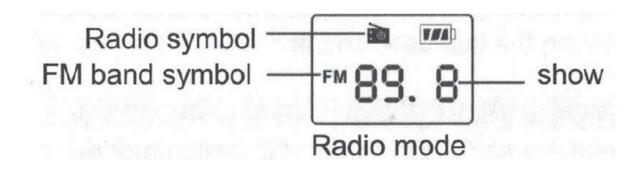

In the clock mode, long-press <MODE/T> to enter the time setting. Long-press <MODE/T> again to move the cursor between the hours and minutes indicators. Press <V+> or <V-> to adjust the hours and minutes. After setting the time, press <MODE/T> to save the setting.

NOTE:

The clock has a 12-hour format, using "PM" to indicate the afternoon.

MUSIC MOD

Correctly insert the Micro SD/TF card with the music files into the appropriate slot. Turn on the device and press <MODE/T> to select music mode. The device immediately starts playing the songs and displays the playback time.

1. Functional Operations:

Pause: When playing music, press <SW-/M-> to pause.

Resume Play: When paused, press <SW+/▶▶ to resume playing.

Previous: Press <SW-/K-> to select the previous song; press and hold for fast reverse play. Press and hold <MW /-1 O> to go back 10 songs.

Next: Press < <SW/▶>> to select the next song; press and hold for fast forward play.

Press and hold <FM/ST/+10> to go forward 10 songs.

2. Song Selection:

In Music mode, press <MW/-1 O> to activate the cursor, and press again to move the cursor to another position.

Press <SW-/M > or <SW / > to select a track number. After selecting the right track, press > to play the song.

3. Repeat All / Single Repeat:

Repeat all: The device will play all the files on the Micro SD/TF card continuously. After playing all the files, it will automatically start playing from the beginning.

4. Single repeat: Press and hold to repeat the track currently playing; the symbol shows in the display.

NOTE:

Only insert or remove the Micro SD/TF card when the device is turned off.

Suggestions:

- While tuning for stations indoors, try the balcony or go near a window for better reception.
- While tuning or listening to the radio, disconnect the USB connection.
- AC can interfere with the reception of radio signals; do not charge the battery while listening to the radio.

SPEAKER MODE

When connected by an audio cable, this device can function as a speaker for an external audio source (for example: laptops, MP3 players, or other small audio players). Insert one end of the audio cable into the earphone jack of the external audio source; insert the other end into the AUX jack of the device. When properly connected, the display shows "AUX". Press the play button on the external audio source to play the audio. The device can also be used as a computer speaker. Use the provided USB cable to connect the computer and the device.

CARE AND MAINTENANCE

- 1. Keep it dry. Rain, humidity, and other types of liquids or moisture can contain minerals that may cause corrosion to components. If the device does accidentally get wet, remove the battery and wait for the radio to dry completely before placing it back.
- 2. Do not use or store in dusty or dirty areas. This may damage the moving parts and electronic components.
- 3. Do not store the device in hot areas. High temperatures can shorten the life span of certain components.
- 4. Do not place or store the device in cold environments. Otherwise, when the surrounding temperature rises to room temperature, internal moisture may develop and damage the circuit board.
- 5. Do not drop, hit, or smash the device.
- 6. Do not use harsh chemicals, cleaning solvents, or strong detergents to wash the device. Use a clean, soft, dry cloth to clean the screen.

BATTERY SAFETY INFORMATION

- 1. Use the battery under normal conditions; temperature: (20 + 5) ° C, relative humidity: 65 + 20%. Under normal circumstances, the battery can be charged and discharged about 300 times.
- 2. Do not expose the battery to heat or high pressure, do not drop the battery, and prevent children from playing with electric currents.
- 3. Do not short-circuit the battery, do not open or amend, do not expose to damp environments.
- 4. If not using for an extended period of time, remove the battery and store it safely.

 Please use a non-conductive material to wrap the battery in order to avoid direct contact with metal. You can avoid damage by keeping the battery in a cool, dry place.
- 5. Dispose of the battery properly; do not put it into fire or water.
- 6. Do not expose to direct sunlight for a prolonged period, to avoid heat, deformation, or smoldering. This will reduce the performance and life span of the battery.

TROUBLESHOOTING

(1) Cannot turn on the device:
The battery may be exhausted; charge it in time.
(2) Cannot connect to a computer:
TI 110D 11 1 1 1 DI
The USB cable may be damaged. Please use a new cable and try again.
The USB port on the computer may be damaged.
Please try another port or another computer.
(3) There is no sound:
Check if the volume level is too low; turn up the volume if necessary.
(4) Cannot play audio from the Micro-SD card:
The format of the audio file may be incorrect, or the
file may be corrupted. Make sure the file is in MP3, WMA, or WAV format.
(5) Cannot charge the device:
Check that the USB cable is connected.
Check if the power adapter or USB cable is damaged.

(6) How to reset the device:

Misuse may lead to errors in the firmware. Remove

The battery for a few minutes before turning on the device again.

SPECIFICATION

Memory support	Micro SD / TF card 64M-8G
Audio-supported formats	MP3, WMA, WAV
Bitrates	MP3: 16-320Kbps WMA: 8-384Kbps
FM frequency	87.0-108 MHz 64.0-87.0 MHz
MW(AM) frequency SW frequency	522-1710 KHz 3.20-21.85 MHz
Earphone output power	s;1omw*2
USB connection	USB 2.0 (high speed)
Speaker Maximum Output Power	about 350mW
Maximum current consumption	about 300mA

Power supply: Built-in battery	Lithium 3.7V SV ::-:-:: S00mA
External supply	
Lithium playback time (volume level 2 2)	MP3: about 8 hours Radio: about 8 hours
Charging time	3-Shours
Built-in speaker	040mm
Earphone jack	03.5mm
Dimensions	Approx. 160 x 65 x 40 mm
Weight	Approx. 239 grams (with battery)

Documents / Resources



<u>Degen DE23 FM/MW/SW DSP Digital Receiver With MP3 and Speaker F</u> <u>unction [pdf] Instruction Manual</u>

DE23, DE23 FM MW SW DSP Digital Receiver With MP3 and Speaker Fu nction, DE23, FM MW SW DSP Digital Receiver With MP3 and Speaker F unction, DSP Digital Receiver With MP3 and Speaker Function, Receiver With MP3 and Speaker Function, Speaker Function, Function

References

- User Manual
- DEGEN
- ▶ DE23, DE23 FM MW SW DSP Digital Receiver With MP3 and Speaker Function, DEGEN, DSP Digital Receiver With MP3 and Speaker Function, FM MW SW DSP Digital Receiver With MP3 and Speaker Function, Receiver With MP3 and Speaker Function, Speaker Function

Leave a comment

Your email address will not be published. Required fields are marked *

Comment * Name Email Website Save my name, email, and website in this browser for the next time I comment. **Post Comment** Search: e.g. whirlpool wrf535swhz Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.