

**DEKO COP30006
Wicker Sofa,
Ottoman and
Dining Table Set**



DEKO COP30006 Wicker Sofa, Ottoman and Dining Table Set Owner's Manual

[Home](#) » [DEKO](#) » DEKO COP30006 Wicker Sofa, Ottoman and Dining Table Set Owner's Manual 

Contents

- [1 DEKO COP30006 Wicker Sofa, Ottoman and Dining Table Set](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Features](#)
- [6 Specifications](#)
- [7 Product Dimensions](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



DEKO COP30006 Wicker Sofa, Ottoman and Dining Table Set



Product Information

Specifications:

- Model: COP30006
- Brand: Deko Living
- Set Includes: Sectional Sofa, Ottoman, Dining Table
- Material: Outdoor Wicker
- Color: Neutral
- Product Dimensions:
 - Left Side Sofa: 64.96" W x 25.98" D x 32.28" H
 - Right Side Sofa: 68.9" W x 25.98" D x 32.28" H
 - Ottoman: 16.14" W x 16.14" D x 15.35" H
 - Dining Table: 56.69" W x 28.74" D x 26.38" H
- Weight: 174.16 lbs

Product Usage Instructions

Assembly:

1. Lay out all the components and hardware.
2. Follow the assembly instructions provided in the manual.
3. Assemble the left and right side sofas first, then add the ottoman and dining table.

Cleaning and Maintenance:

1. Regularly clean the wicker furniture with a mild soap and water solution.
2. Avoid using abrasive cleaners or chemicals that may damage the wicker material.
3. Store the set in a covered area during harsh weather conditions to prolong its lifespan.

Usage Tips:

1. Use cushions for added comfort when sitting on the sofa.
2. Avoid dragging the furniture to prevent damage to the wicker legs.

Storage:

1. When not in use, store the set in a dry and well-ventilated area.
2. Cover the furniture with a protective cover to shield it from dust and debris.

FAQ

- **Q: Can the cushions be left outside in the rain?**

- A: It is recommended to store the cushions indoors or in a waterproof container when not in use to prevent damage from rain or moisture.

- **Q: How do I clean spills on the wicker material?**

- A: Wipe spills immediately with a damp cloth and mild soap. Allow the area to air dry completely.

Deko Living outdoor wicker sectional sofa set with ottoman and dining table will make a great addition to your patio, deck, or garden, providing a comfortable and stylish seating area for outdoor relaxation and entertainment. Whether your outdoor retreat is located in the mountains, on the coast, or your backyard, this sofa dining set will add to your enjoyable time with friends and family.

Features

- 7 seats, for 10' x 8' area patio
- Included with 7 cushions, and a coffee table.
- Durable Powder Coated Structure
- The cushions are conveniently designed with zippers for a quick and easy wash.
- Easy assembly



Specifications

- 1 x right arm three seat sofa
- 1 x left arm three seat sofa
- 2 x ottoman seats

- 1 x Coffee table
- 4 x Polyester Fabric Cover Cushions
- 7 x Polyester Fabric Cover Cushions

Product Dimensions

- Left Side Sofa: 64.96" W x 25.98" D x 32.28" H
- Right Side Sofa: 68.9" W x 25.98" D x 32.28" H
- Ottoman: 16.14" W x 16.14" D x 15.35" H
- Dining Table: 56.69" W x 28.74" D x 26.38" H
- Weight: 174.16 lbs

Documents / Resources



[DEKO COP30006 Wicker Sofa, Ottoman and Dining Table Set](#) [pdf] Owner's Manual
COP30006, COP30006 Wicker Sofa Ottoman and Dining Table Set, Wicker Sofa, Sofa, Ottoman, Dining Table Set, Table Set

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.