



[Home](#) » [DELI](#) » **deli ET520 Digital Safe Box with Keypad and Key User Manual** 

Contents [[hide](#)]

- 1 deli ET520 Digital Safe Box with Keypad and Key
- 2 INTRODUCTION
- 3 Product unpacking
- 4 Product diagram
- 5 Product installation
- 6 Precautions for use
- 7 WARRANTY CARD
- 8 CUSTOMER SERVICE
- 9 Documents / Resources
 - 9.1 References

deli

deli ET520 Digital Safe Box with Keypad and Key

 


INTRODUCTION


Thank you for choosing Deli. Please read these instructions carefully and follow them before operating the safe.

Product unpacking


After unpacking the package, please check whether the product's appearance is intact and check all accessories. If there is any defect, please contact the dealer.

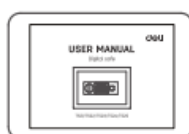

Manual 1 copy

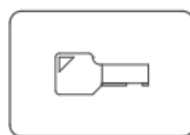 

2 emergency keys

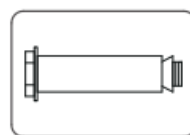 


Expansion bolts 2 sets




4*AA Battery

 
Product diagram

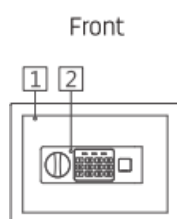

Front

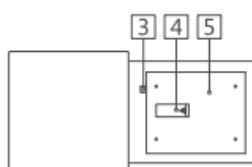 

Side (open)

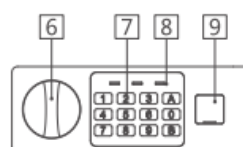 

Panel diagram

NO.	NAME
1	Box
2	Panel
3	Reset button
4	Battery Box
5	Rear cover
6	Knob

NO.	NAME
7	Keypad
8	Indicator light
9	Emergency lock cover

First opening

- Push up the small cover plate on the right of the electronic panel to expose the emergency keyhole. Insert the emergency key and turn it counterclockwise. Then turn the knob clockwise to open the door.
- **Note:** Please keep the emergency key and user manual in a safe place, but not in the safe.

Battery installation

- The battery case is located behind the door. Remove the battery box cover and place the batteries (4*1.5V, type AA) correctly according to the polarity. Always ensure you are using new batteries with a full charge.

Password setting

- The factory password is 159. For safety, please set your personal password in time.
- Press the reset button located on the back cover of the door. The system will beep once, and the yellow indicator light will turn on.
- Input the new code(3-8 digits) and Press “A” or “B” on the electronic keypad to confirm, then the yellow indicator light will turn off.
- The new passcode is successfully set with a beep.
- **Note:** Test the new passcode with the door open before locking the door.

Opening the safe

- Input the correct password, press the “A” or “B” key to confirm, the buzzer beeps once, and the green indicator light turns on. Please ensure turn the knob to open the door within 5 seconds.
- The safe will enter a 20-second lockout if the wrong passcode is entered 3 consecutive times. After the 20-second lockdown, it will automatically unlock.
- **Attention:** Entering the wrong passcode 3 more times will lock the safe for 5 minutes.

Locking the safe

- Simply close the door and turn the knob counterclockwise.

Replace the battery

 
- Press “A” or” B” key after pthe asscode input if the red indicator lights up when the green indicator light blinks, which indicates low voltage. Please replace the batteries.

Emergency opening

- The emergency keys allow you to open the safe at all times, even when the batteries are run out or you have forgotten the codes. The operation method is the same as “first opening”.

Product installation

- The product with predrilled mounting holes for easy fixing to a floor or wall with included expansion bolts.

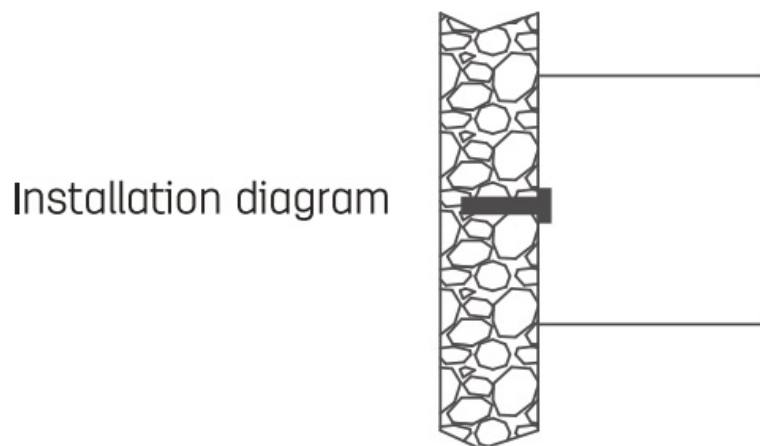

Precautions for use

- Keep away from direct sunlight and heat sources, and prevent the product from falling from a high altitude. Keep it in a safe place.
- If you do not use the product for a long time, please take out the battery to prevent leakage from damaging the electronic system.

WARRANTY CARD

- Thank you for your purchase of our products. The interests of customers who purchase our products will be protected.
- For any malfunction due to product quality problems. Please contact authorised local dealers or service centres with this receipt and the warranty card.

Warranty terms:

- For product failures that occur under normal operating circumstances, free-of-charge repair and spare parts replacement service shall be provided by our company within one year commencing from the date of purchase.
 - Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service.
 - This warranty card shall be valid only after the following form is filled out in detail and affixed with the official seal of the dealer.
 - No free-of-charge repair service shall be provided in the event of any of the following circumstances:
 - Expiration of the warranty period.
 - Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
 - Failure or damage resulting from unauthorised disassembly, repair or modification;
 - Failure or damage caused by force majeure;
 - Wear parts or accessories.
 - This warranty card is being delivered with the product, one card for one product.
- Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase:- Y-M-D

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

- Item number:_____
- Number:_____


CUSTOMER SERVICE

- DELI GROUP CO., LTD.
- 301 Xuxiake Ave. Ninghai County
- Ningbo 315600 China Made in China
- info@nbdeli.com
- www.deliworld.com

KEEP FOR FUTURE USE

- Version: 1.0
- Date: 02-2023

Documents / Resources

	deli ET520 Digital Safe Box with Keypad and Key [pdf] User Manual ET520 Digital Safe Box with Keypad and Key, ET520, Digital Safe Box with Keypad and Key, Safe Box with Keypad and Key, with Keypad and Key, Keypad and Key
---	---

References

- [User Manual](#)

DELI

DELI, Digital Safe Box with Keypad and Key, ET520, ET520 Digital Safe Box with Keypad and Key, Keypad and Key, Safe Box with Keypad and Key, with Keypad and Key

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.