

delight 20461WH Pop Up Socket with USB User Guide

Home » delight » delight 20461WH Pop Up Socket with USB User Guide



20461WH Pop Up Socket with USB User Guide



Pop up socket - built in socket + USB

Contents

- 1 20461WH Pop Up Socket with USB
- 2 Technical details:
- 3 Documents / Resources
- **4 Related Posts**

20461WH Pop Up Socket with USB

Dear Customer!

Thank you for choosing our product! Thanks to this hidden socket, your desk will remain aesthetic yet functional. Folding up the cover, you will find a conventional 230 V socket, which is excellent for charging a notebook, as well as you will find a USB connector, which is suitable for charging your mobile phone or tablet.

User's Guide:

- 1. Select a suitable location for the device, making sure that the device is not exposed to direct sunlight. Also take into account the installation depth of 90 mm and the drainage of the power cable.
- 2. Cut a 60 mm diameter hole in the furniture. Draw and then use a drill with a suitable cutting head or a jigsaw to cut.
- 3. Unscrew the retaining ring from the product and thread the cable throught the hole and try to insert the product into the hole.
- 4. If the product fits properly (does not jam, does not fall through the hole), secure it from below with the ring, making sure to rotate the product int he desired direction.
- 5. Finally, plug in the power cord and try the product.

Technical details:

- 1 pc 230 V socket
- 1 pc high-power USB port

Operation voltage:	AC230V
Max. amperage:	16A
USB amperage:	DC 5 V, max. 2 A
	DC 9 V, max 1.2 A
	DC 12 V, max. 1 A
Max. power:	3680 W
Cable length:	1.5 m

- Do not use the product in direct sunlight or in humid places.
- Do not use the appliance with wet hands!
- Handle the product carefully, grasp the product while inserting the plugs.
- · Do not insert an extension cord.
- · Do not operate covered!

- For indoor use only!
- Do not expose to direct sunlight or heat!
- The safety pin on the bottom of the product must not be removed!
- Do not use the product if you experience any damage to the housing or cable insulation!
- It is strictly forbidden to disassemble or modify the product! Int he event of any malfunctions, contact a specialist!



Documents / Resources



delight 20461WH Pop Up Socket with USB [pdf] User Guide
20461WH Pop Up Socket with USB, 20461WH, Pop Up Socket with USB, Pop Up Socket, Socket

Manuals+,