



**KB3322Wt
Wireless
Keyboard
and Mouse**



DELL KB3322Wt Wireless Keyboard and Mouse User Guide

[Home](#) » [Dell](#) » DELL KB3322Wt Wireless Keyboard and Mouse User Guide 

Contents

- [1 DELL KB3322Wt Wireless Keyboard and Mouse](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 What's in the box](#)
- [5 Features](#)
- [6 Setting](#)
- [7 Connecting your wireless keyboard and mouse](#)
- [8 SPECIFICATIONS](#)
- [9 TROUBLESHOOTING](#)
- [10 Statutory Information](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)



DELL KB3322Wt Wireless Keyboard and Mouse



Product Information

Specifications

Keyboard Specifications

- **General:** Dell Wireless Keyboard KM3322W
- **Electrical:** Input: 1.5V, Battery Type: AA
- **Physical Characteristics:** Standard keyboard size
- **Environmental:** Operating Temperature: 0°C to 40°C
- **Wireless:** 2.4GHz wireless technology

Mouse Specifications

- **General:** Dell Wireless Mouse KM3322W
- **Electrical:** Input: 1.5V, Battery Type: AA
- **Physical Characteristics:** Standard mouse size
- **Environmental:** Operating Temperature: 0°C to 40°C
- **Wireless:** 2.4GHz wireless technology

Product Usage Instructions

Setting up your Wireless Keyboard

1. Insert the AA-type battery into the keyboard.
2. Find the USB receiver in the box and insert it into an available USB port on your computer.
3. The keyboard should automatically connect to the receiver.

Setting up your Wireless Mouse

1. Insert the AA-type battery into the mouse.
2. Find the USB receiver in the box and insert it into an available USB port on your computer.

3. The mouse should automatically connect to the receiver.

Connecting your Wireless Keyboard and Mouse

If the keyboard and mouse do not automatically connect to the USB receiver, press the connect button on each device and hold it until the LED light flashes.

Troubleshooting

If you experience connection issues, try replacing the batteries in both the keyboard and mouse. Ensure that there are no obstructions blocking the signal between the devices and the USB receiver.

Statutory Information

Refer to the warranty information provided for details on limited warranty and return policies for different regions.

Notes, Cautions, and Warnings

 
NOTE: A NOTE indicates important information that helps you make better use of your computer.

CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2021 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.


What's in the box

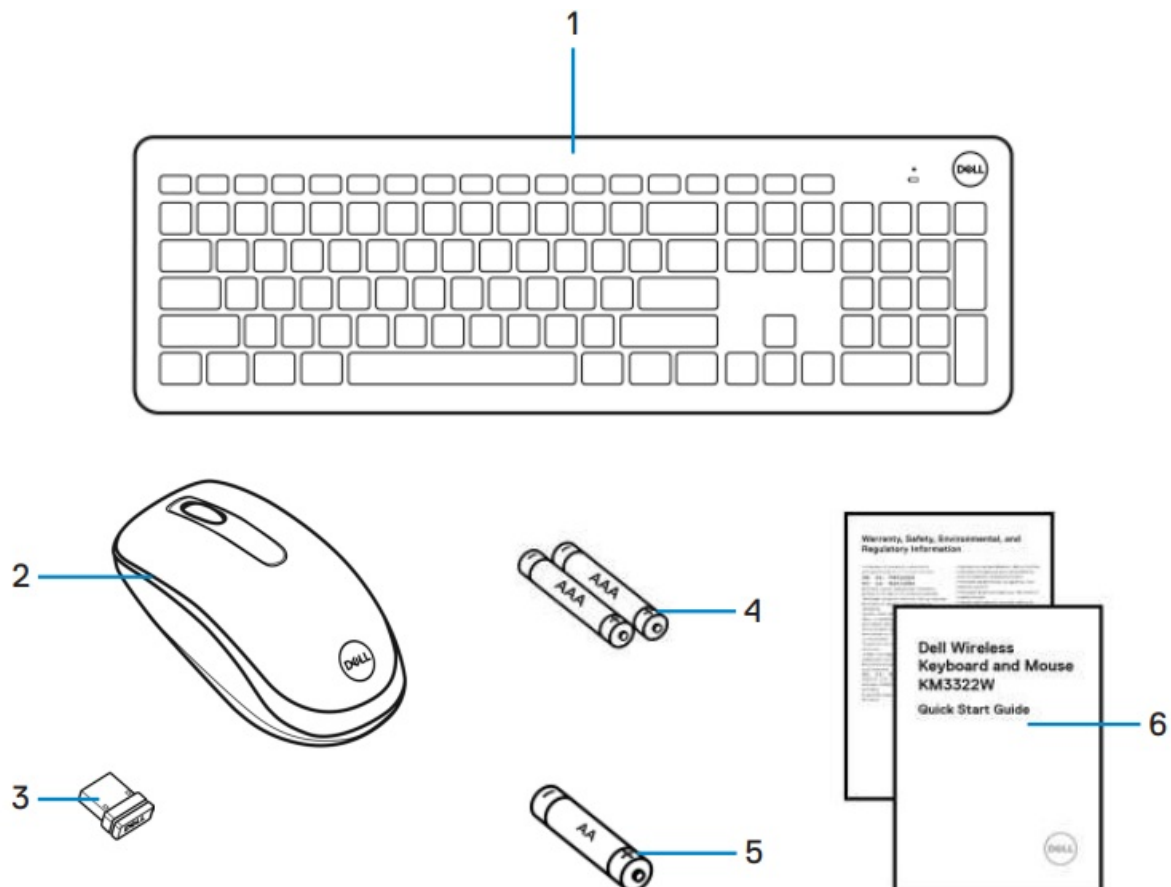

1. Keyboard
2. Mouse
3. USB receiver
4. AAA-type Batteries (for keyboard)
5. AA-type Battery (for mouse)
6. Documents

Features

 
Keyboard

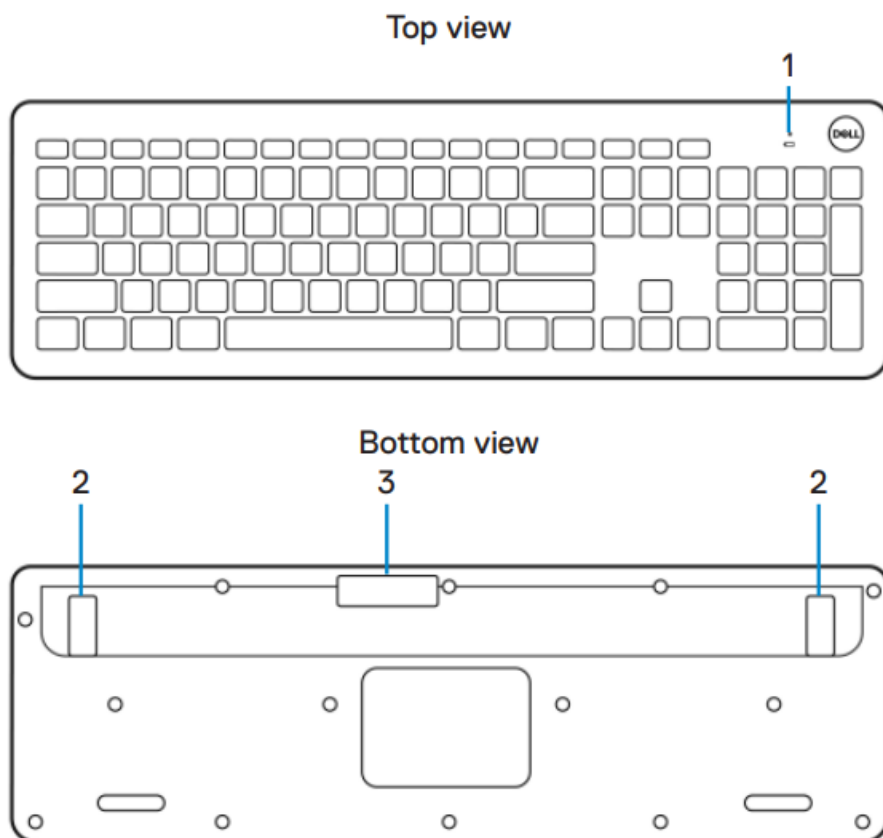

1. Low battery status LED
2. Keyboard feet
3. Battery cover


NOTE:

 1. Keyboard will enter into auto power save mode if not used.
2. Low battery status LED will blink in amber colour when battery capacity is low.

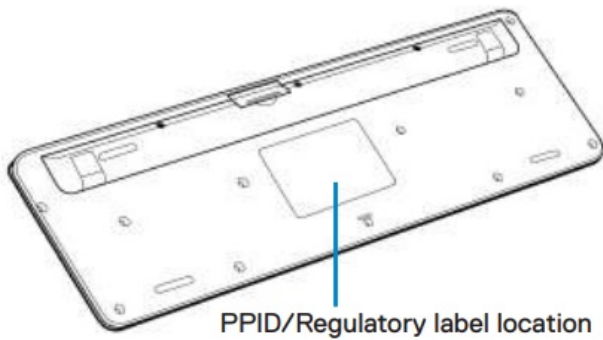

Mouse

 Top view

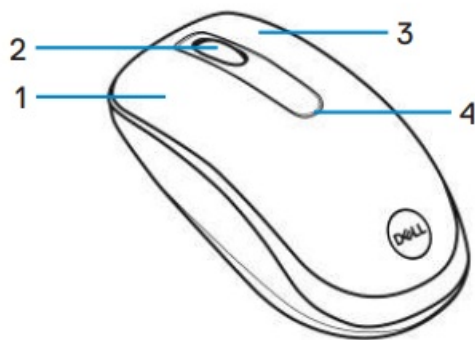

Bottom view



1. Left button 2. Scroll wheel
2. Right button 4. Low battery status LED
3. Optical sensor 6. Power switch

NOTE:

 
1. Mouse will enter into auto power save mode if not used.
2. Low battery status LED will blink in amber colour when battery capacity is low.
3. Turn off the power switch when the mouse is not used to improve battery life.





Setting

Setting up your wireless keyboard

1. Using your fingertip, pry open the battery cover.

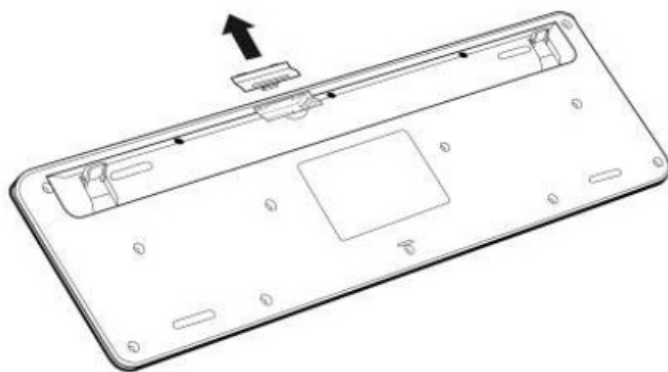

  2. Install the AAA batteries into the battery compartment. Then close the battery cover.

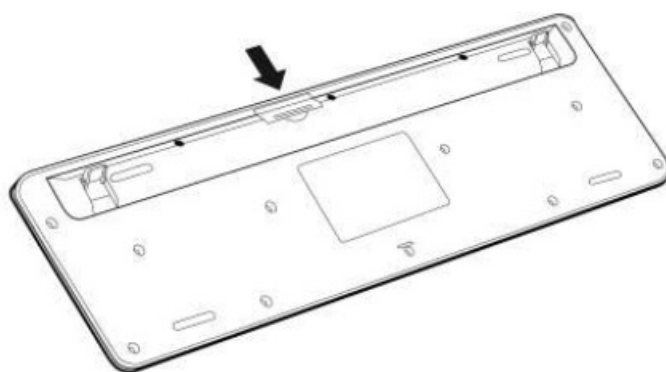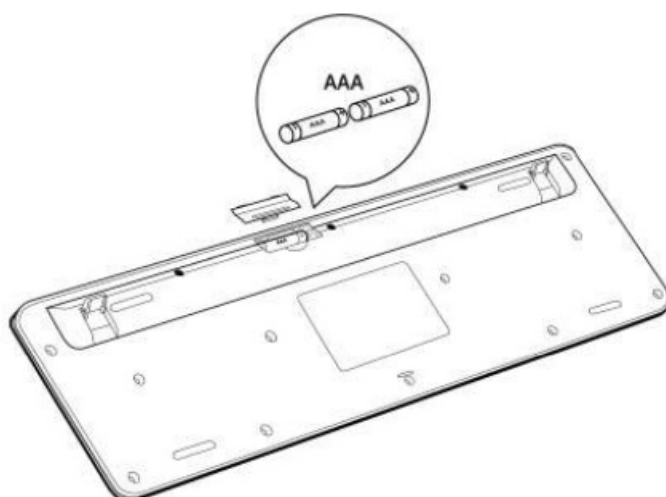

Setting up your wireless mouse

 
1. Locate the slot on the side of the mouse cover. Using your fingertip, pry open the cover.



2. Install the AA battery into the battery compartment.



3. Close the mouse cover.

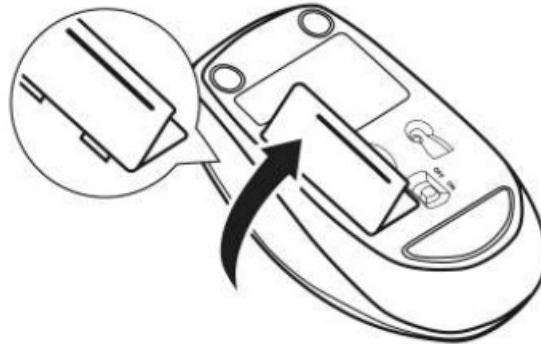


4. Slide the power switch down to turn on the mouse.




Connecting your wireless keyboard and mouse

 1. Detach the receiver tag from the USB receiver

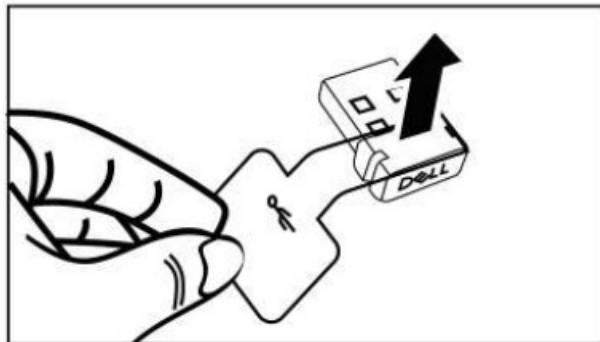


2. Install the USB receiver to the USB port on your computer.

 Laptop

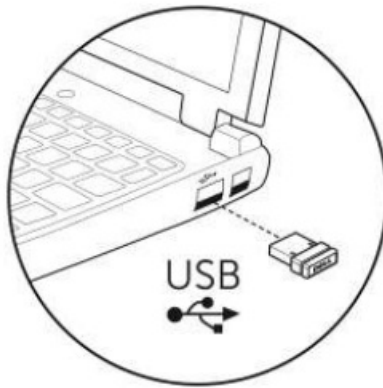


Desktop

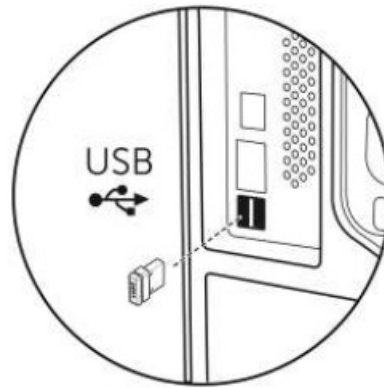 

3. Slide the power switch down to turn on the mouse.



 The keyboard and mouse are paired with your USB device.

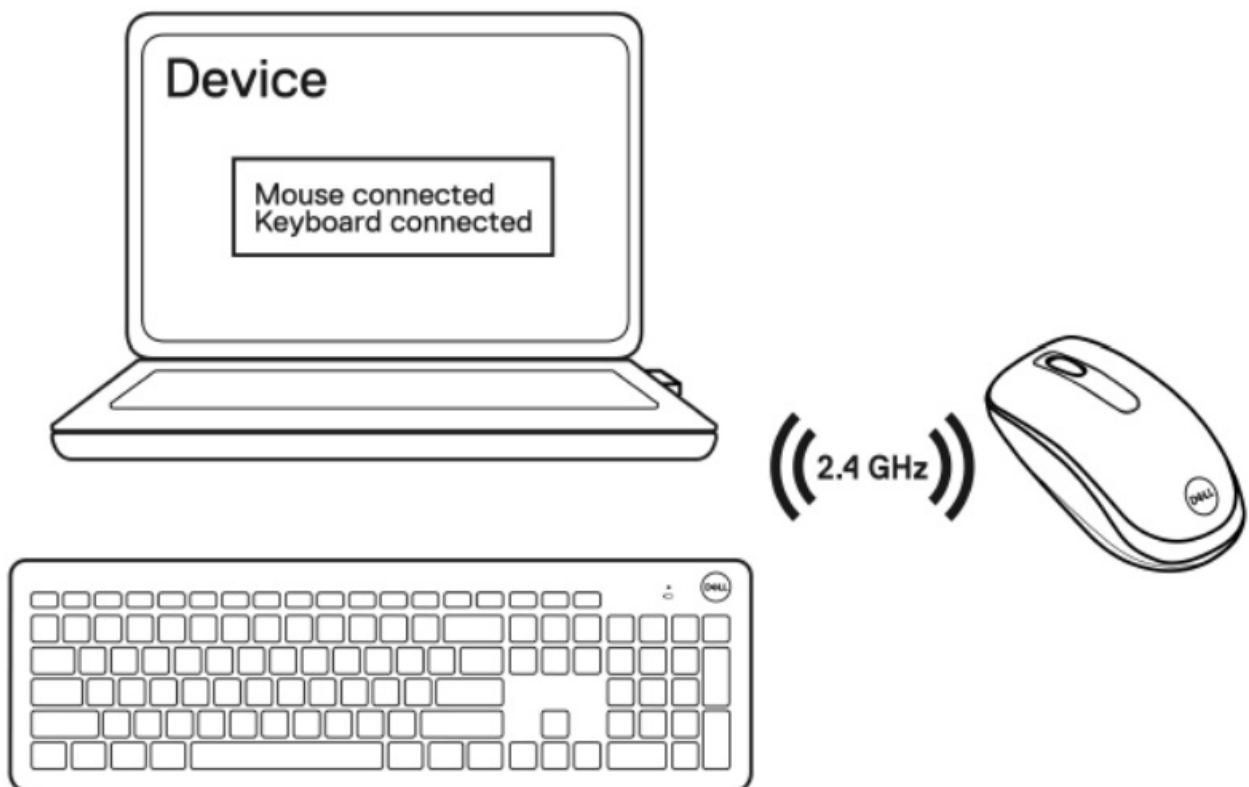

SPECIFICATIONS

Keyboard Specifications

General

- Regulatory model
KB3322Wt
- Connection type Wireless
(2.4 GHz with nano receiver)
- System requirement
 - Windows Server 2012; 2012 R2, 2016 (RF receiver only)
 - Windows 8, 32/64-bit
 - Windows 10, 32/64-bit
 - Windows 11, 32/64-bit
 - Android
 - Chrome
 - MAC OS
 - Linux 6.x, Ubuntu 18 and Redhat 8 Enterprise
 - Free-DOS (RF receiver only)

Electrical

- Operating voltage 1.9V – 3.0V
- Battery type Two AAA batteries

Physical characteristics

- Weight (with batteries) 497 g (17.53 oz)
- Dimensions:
 - Length 444.9 mm (17.52 inch)
 - Width 141.2 mm (5.56 inch)
 - Height 25.3 mm (1.00 inch)

Environmental

- Temperature:
 - Operating -10°C to 50°C (14°F to 122°F)
 - Storage -40°C to 65°C (-40°F to 149°F)
- Storage humidity 95% maximum relative humidity; non-condensing

Wireless

- RF resolution 2.4 GHz RF
- Operating channel 2405MHz to 2474MHz
- Operation distance Up to 10 meters

Mouse Specifications

General

- Regulatory model WM118t
- Connection type Wireless (2.4 GHz with nano receiver)
- System requirement
 - Windows Server 2012; 2012 R2, 2016 (RF receiver only)
 - Windows 8, 32/64-bit
 - Windows 10, 32/64-bit
 - Windows 11, 32/64-bit
 - Android
 - Chrome
 - Linux 6.x, Ubuntu
 - Free-DOS (RF receiver only)

Electrical

- Operating voltage 0.9V – 1.5V
- Battery type One AA battery

Physical characteristics

- Weight (without battery) 58 g (2.05 oz)
- Dimensions:
 - Length 105.0 mm (4.13 inch)
 - Width 58.3 mm (2.30 inch)
 - Height 38.9 mm (1.53 inch)

Environmental

- Temperature:
 - Operating -10°C to 50°C (14°F to 122°F)
 - Storage -40°C to 65°C (-40°F to 149°F)
 - Storage humidity 95% maximum relative humidity; non-condensing

Wireless

- RF resolution 2.4 GHz RF
- Operating channel 2405MHz to 2474MHz
- Operation distance Up to 10 meters

TROUBLESHOOTING

Problems	Possible solutions
Keyboard/mouse is not functioning	<ol style="list-style-type: none">1. Check if the batteries are inserted in the correct orientation. The batteries “+” and “-” ends should be placed as indicated on the battery compartment.2. Check the battery level.<ul style="list-style-type: none">• If the device uses the rechargeable batteries, ensure that the batteries are fully charged.• If the batteries are exhausted, replace them with a new ones.3. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on.4. Restart your computer.5. Ensure that the USB receiver is directly connected to your computer.<ul style="list-style-type: none">• Avoid using the port replicators, USB hubs, and so on.• Insert the USB receiver to another USB port closer to the keyboard/mouse.

Unable to connect the keyboard/mouse with your computer	<ol style="list-style-type: none"> 1. Check the battery level. <ul style="list-style-type: none"> • If the device uses the rechargeable batteries, ensure that the batteries are fully charged. • If the batteries are exhausted, replace them with a new ones. 2. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on. 3. Restart your computer. 4. Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on. 5. Change the USB port or insert the USB receiver into another USB port on your computer. 6. Ensure that the distance between your computer and keyboard/mouse is within 10 meters.
Mouse pointer does not move	<ol style="list-style-type: none"> 1. Check the battery level. <ul style="list-style-type: none"> • If the device uses the rechargeable batteries, ensure that the batteries are fully charged. • If the batteries are exhausted, replace them with a new ones. 2. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on. 3. Restart your computer. 4. Ensure that the distance between your computer and keyboard/mouse is within 10 meters.
Mouse left/right button does not work	
Keyboard buttons do not work	
Wireless connection is lost	

Troubleshooting a slow moving cursor	<ol style="list-style-type: none"> 1. Ensure that the sensor is not obstructed or dirty. 2. Glass or very smooth glossy surfaces are not suitable for the mouse sensor to capture the mouse movement. Using a dark colored fabric mouse pad can improve the tracking. 3. Change the mouse settings to adjust the pointer speed. Click or tap the tab that matches the Operating System (OS) installed on your laptop/desktop and perform the steps within that section to change the settings. <ul style="list-style-type: none"> • In the Search box, type <code>main.cpl</code>. The Mouse Properties dialog box appears. • Click or tap <code>main.cpl</code> in the list of programs. • Click or tap the Pointer Options tab. In the Motion section, move the slider to adjust the pointer speed to the desired level. • Click or tap OK.
--------------------------------------	--

Statutory Information

Warranty

Limited warranty and return policies

Dell-branded products carry a three-year limited hardware warranty. If purchased together with Dell system, it will follow the system warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [Dell.com/terms](https://www.dell.com/terms). This document contains a binding arbitration clause.

For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to [Dell.com/terms](https://www.dell.com/terms), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link for the end user terms or the “support” link for the warranty terms.

For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms.

Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to [Dell.com](https://www.dell.com), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link or the “support” link for the warranty terms.


FAQ

Q: How do I know if my keyboard and mouse are successfully connected?

A: The LED lights on both the keyboard and mouse should stop flashing and remain solid once they are

successfully connected to the USB receiver.

Documents / Resources

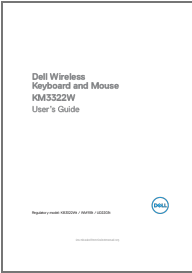	<p>DELL KB3322Wt Wireless Keyboard and Mouse [pdf] User Guide</p> <p>KB3322Wt, WM118t, UD2203t, KB3322Wt Wireless Keyboard and Mouse, KB3322Wt, Wireless Keyboard and Mouse, Keyboard and Mouse, Mouse</p>
---	--

References

-  [Your Ultimate Resource for Millions of User Manuals](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.