



DELL KM7321W Multi-Device Wireless Keyboard and Mouse User Guide

[Home](#) » [Dell](#) » DELL KM7321W Multi-Device Wireless Keyboard and Mouse User Guide 

Contents

- [1 DELL KM7321W Multi-Device Wireless Keyboard and Mouse](#)
- [2 Product Usage Instructions](#)
- [3 What In The Box](#)
- [4 Battery Installation](#)
- [5 Using Instructions](#)
- [6 More Information](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



DELL KM7321W Multi-Device Wireless Keyboard and Mouse



The Dell Premier Multi-Device Wireless Keyboard and Mouse KM7321W is a versatile and convenient wireless input solution. It allows you to connect and control up to three devices simultaneously, making it ideal for multitasking and increasing productivity.

Product Features




- Wireless connectivity for freedom of movement
- Multi-device support for seamless switching between devices
- Compact and ergonomic design for comfortable use
- High-quality construction for durability
- Plug-and-play setup for quick and easy installation
- Long battery life for extended usage

Product Usage Instructions


1. Ensure that your devices are compatible with the Dell Premier Multi-Device Wireless Keyboard and Mouse KM7321W.
2. Insert the included batteries (AA for the keyboard, and AAA for the mouse) into their respective compartments.
3. Connect the wireless receiver to your computer's USB port.
4. Turn on the keyboard and mouse by sliding the power switch located on the bottom of each device.
5. Press and hold the Bluetooth pairing button on the keyboard until the LED indicator starts flashing.
6. Follow the on-screen instructions on your computer to complete the pairing process.
7. To switch between connected devices, press the device switch button (labeled as Device 1, Device 2, Device 3) located on the top of the keyboard.
8. For Device 1 and Device 2, the corresponding LED indicator will light up to indicate the active device.
9. For Device 3, you can use the Dell MS5320W Mouse or Dell KB700 Keyboard. To switch between them, use the switch button located on the bottom of the mouse or keyboard.
10. Visit [Dell.com/support/KM7321W](https://www.dell.com/support/KM7321W) for further assistance, troubleshooting, and software updates.

For regulatory compliance information, visit www.dell.com/regulatory_compliance.

What In The Box

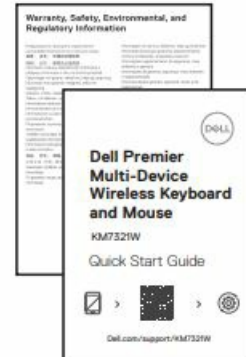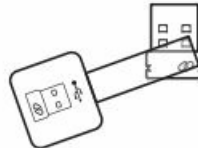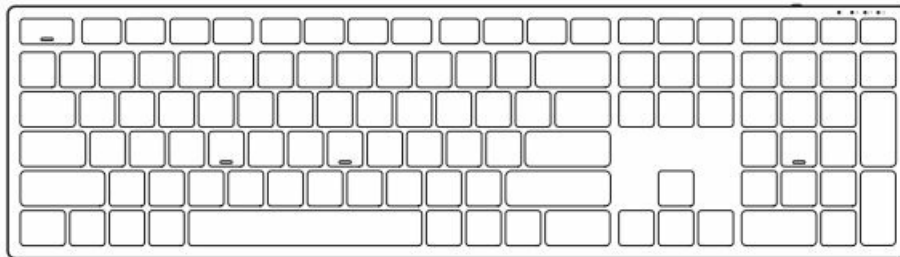

Battery Installation

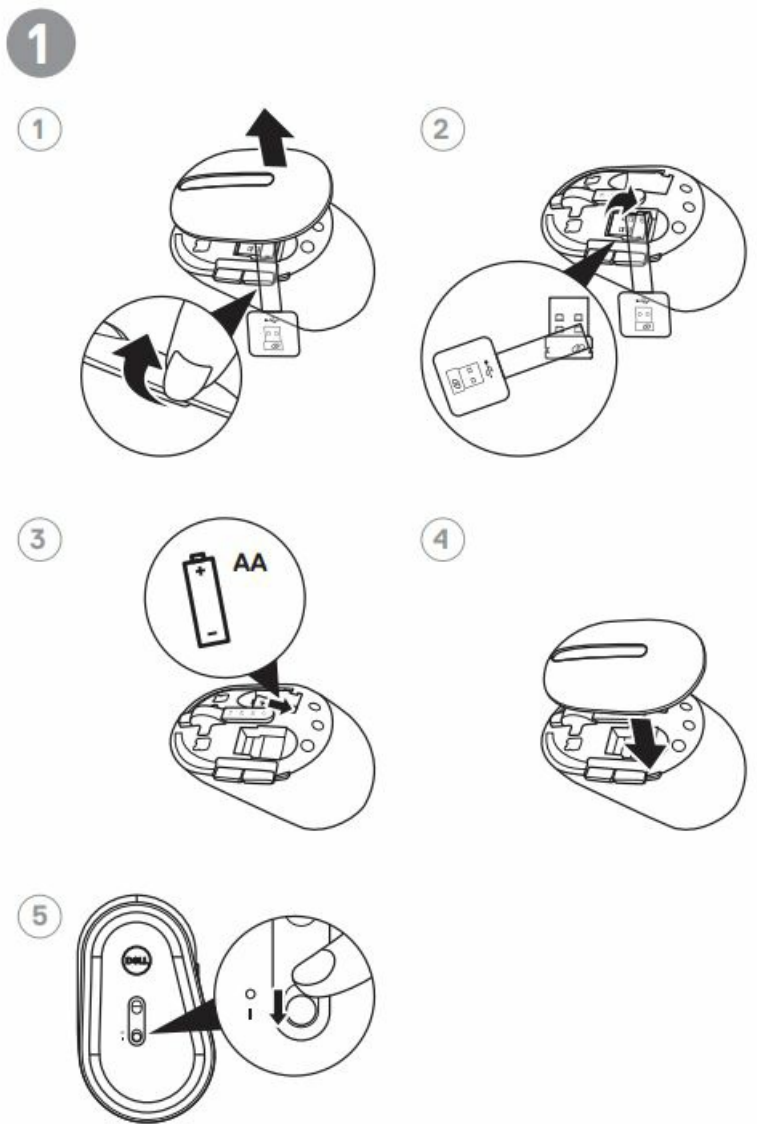


Using Instructions


2

10


①

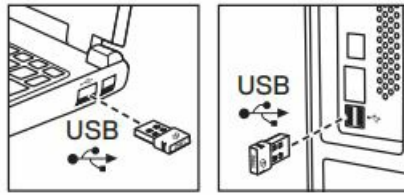

②

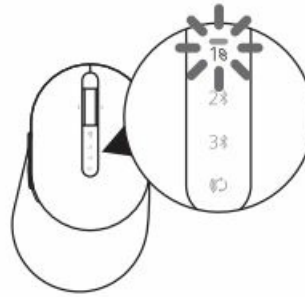


③

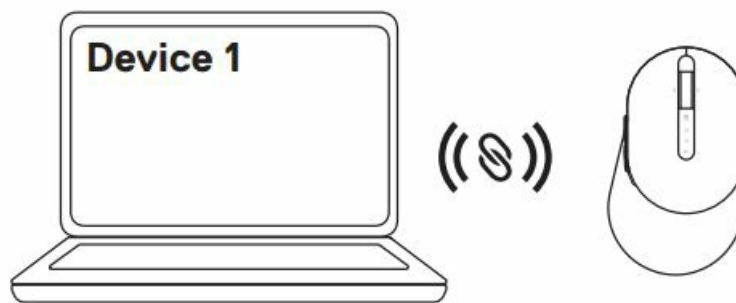


2*


①

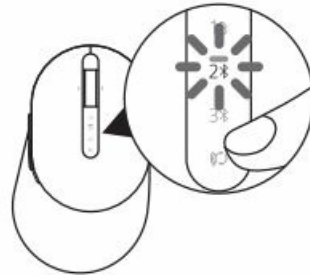

②

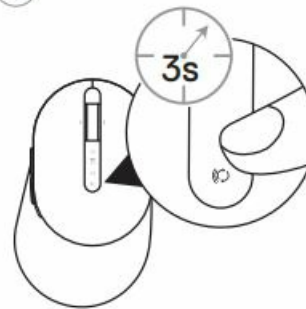


③

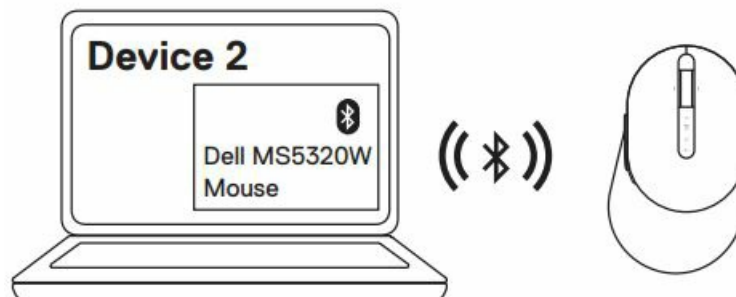


3*


①

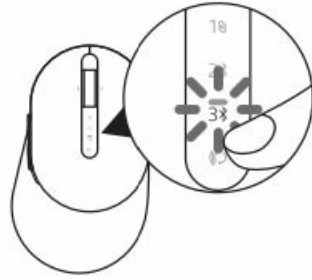

②

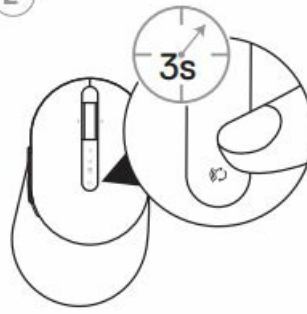


③

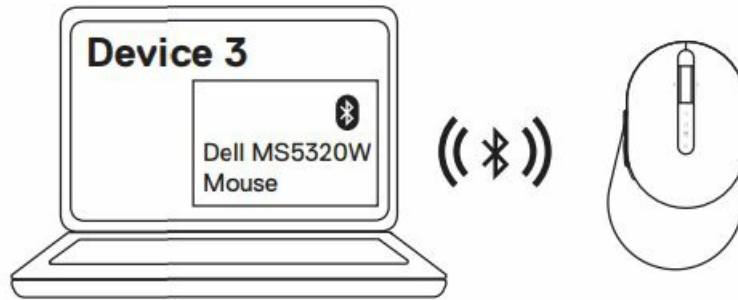


3


①

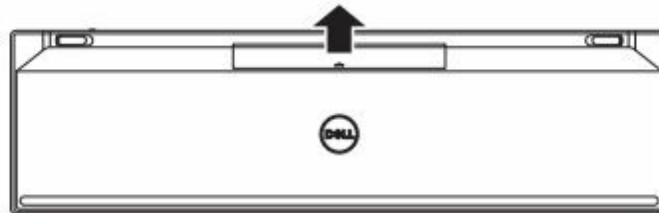


②

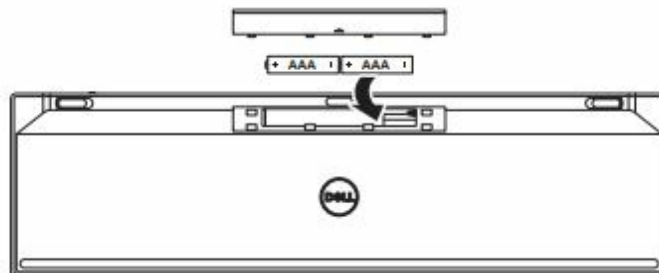

3

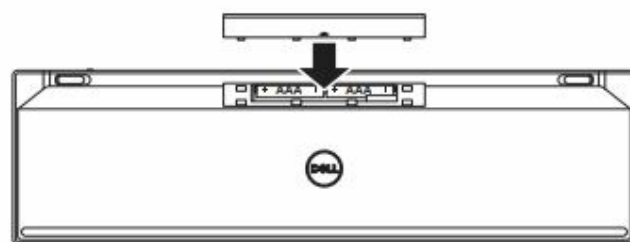


4

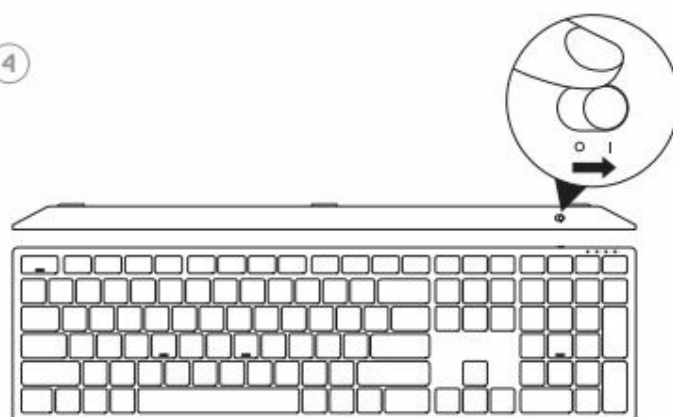

4

10

1

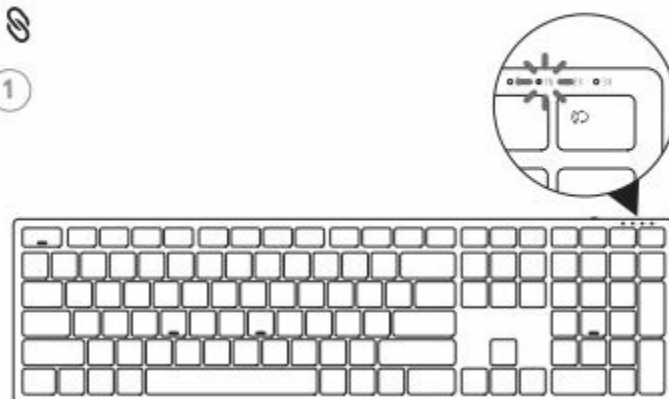


2




2

 1



2

 


3




3

 1



2

 

3



More Information

- www.dell.com/support

- www.dell.com/regulatory_compliance
- www.dell.com/support/dpem

Scan



- Dell.com/support/KM7321W



0NW9V3A02

© 2020-2022 Dell Inc. or its subsidiaries.

Documents / Resources

A small icon showing a document with a keyboard and mouse, representing the user guide.	DELL KM7321W Multi-Device Wireless Keyboard and Mouse [pdf] User Guide KM7321W Multi-Device Wireless Keyboard and Mouse, KM7321W, Multi-Device Wireless Keyboard and Mouse, Wireless Keyboard and Mouse, Keyboard and Mouse, Mouse, Keyboard
---	---

References

- [Support for Dell Premier Multi Device Wireless Keyboard and Mouse KM7321W | Documentation | Dell US](#)
- [Regulatory Compliance | Dell](#)
- [Support | Dell US](#)
- [Regulatory Compliance | Dell](#)
- [Support | Dell US](#)
- [Support for Dell Premier Multi Device Wireless Keyboard and Mouse KM7321W | Documentation | Dell US](#)