



Delsey Luggage Lock Reset: Step-by-Step Instructions for TSA007 Fixed Lock

[Home](#) » [DELSEY](#) » Delsey Luggage Lock Reset: Step-by-Step Instructions for TSA007 Fixed Lock

If you are planning to travel by air, then you might want to consider using a TSA-approved lock for your checked baggage. The DELSEY TSA007 Password Lock Zipper Suitcase Bag Fixed Lock is a popular choice for many travelers. This lock is designed to comply with the Transportation Security Administration (TSA) guidelines, which means that it can be opened by TSA screeners without damaging your luggage. In this page, you will find step-by-step instructions on how to use this lock, including how to reset the combination. You will also find answers to some frequently asked questions about the lock, such as how to know if it is TSA-approved and what to do if it gets stuck. Whether you are a first-time user of the DELSEY TSA007 Password Lock Zipper Suitcase Bag Fixed Lock or you need a refresher on how to use it, this page is a valuable resource for you.

Contents [[hide](#)]

- [1 DELSEY TSA007 Password Lock Zipper Suitcase Bag Fixed Lock Instructions](#)
- [2 Instructions for Using The TSA Code-lock](#)
- [3 SPECIFICATION](#)
- [4 FAQs](#)
- [5 VIDEO](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

DELSEY

DELSEY TSA007 Password Lock Zipper Suitcase Bag Fixed Lock Instructions



DELSEY TSA007 Password Lock Zipper Suitcase Bag Fixed Lock Instructions

Instructions for Using The TSA Code-lock

The Transport Security Administration (TSA) now allows you to lock your checked baggage with TRAVEL SENTRY TM CERTIFIED locks.

The identifiable logo alerts TSA Screens to use secured tools to open your lock without damage to it or to be the baggage.

Your resettable combination lock is preset to open at 0-0-0, even though dials might be positioned at other numbers. To modify the combination :

1. Open the lock (using the original code 0-0-0).
2. Press the reset button (A) firmly with a pen (or other sharp object) until you hear a "click".
Keep the button pressed in.
3. Set your chosen secret combination by turning the thumbwheels (e.g.: 8-8-8).
4. Push the button (B) and allow the Button (A) to return to its original position.

Your personal code is now set. Note it down in a safe place in case you forget it.
If you wish to change the combination, repeat steps 2-4.

SPECIFICATION

Product Specifications	Description
Lock Type	TSA007 Password Lock Zipper Suitcase Bag Fixed Lock
Lock Material	Metal and Plastic
Lock Combination	Resettable combination
Default Combination	0-0-0
Combination Reset Process	Open lock, press reset button, set new combination, push button to confirm
Lock Size	Not specified
Lock Compatibility	Snapper holes larger than 5mm/0.196" on any type of zipper
Lock Approval	TSA-approved
Lock Warranty	Not specified

FAQS

Will this work on any type of zipper, YKK?

Snapper holes larger than 5mm / 0.196" are suitable for TSA customs locks.

MY LOCK IS STUCK, WHAT DO I DO?

We suggest that you go to your nearest repair centre to get your bag open. You can find a list of our centres on [this page](#). Otherwise, you can go back to where you bought the bag. In either case, don't forget to show your receipt and your warranty.

For any other information on this subject, you can contact your country's Customer Service directly using our [contact form](#).

WHAT IS A TSA COMBINATION LOCK WITH A KEYHOLE AS WELL AS A CODE NUMBER?

The TSA (Transportation Security Administration) combination lock allows you to lock your bag with a code while allowing the American customs authorities responsible for transport security to check it when it arrives on American soil without damaging it.

So the keyhole on the TSA combination lock is for the sole use of the American authorities. The advantage of this lock is the customs officers access and so avoid them damaging your bag.

To know if your bag has a TSA lock, look at the lock itself – the TSA lock has a little, red, lozenge shaped logo, like the one below.



For any other information on this subject, you can contact your country's Customer Service directly using our [contact form](#).

If it is locked on the luggage, can one still unscrew it, reset it and remove it to break in the luggage?

This is as good as any luggage that comes with a built-in lock and anyone could just cut the zipper tab or use a pen to open it.

What is the difference between a and b types?

A is a different type of metal and or plastic than b

Is this lock be permanently installed in a hard case luggage?

The TSA Customs Lock can be permanently installed and secured to the trunk. Suitable for suitcases, suitcases,

tool boxes, golf bags, backpacks, gym padlocks, etc. If you have additional questions, please feel free to contact us directly and we will be happy to assist you.

Where is the reset button on the tsa007 lock?

The reset button is on the side of the lock, please see the 6th picture on the product page, which is described in detail.

How do you change the password?

The original number is 0-0-0. To set your personal combination, follow these steps:

1. Put the dials at its original numbers 0-0-0;
2. Press down the reset button(a) with a tool until hear the “click” sound.
3. Set your combination by turning the dials(b) ,for example 8-8-8. Then,
4. Push the button(c) towards to the direction of arrow and the reset button(a) will be back when you hear the “Click” sound. Now you have finished setting your personal combination. Please remember your personal combination by heart. Please repeat the above steps to reset the numbers.

What is the difference between lock set a and lock set b?

The main difference is that the unlocking method is different, A is the left and right pressure to unlock, B is the downward pressure to unlock

How do I know if my lock is TSA-approved?

The TSA logo on the front of your lock indicates that it has been approved by the U.S. Transport Security Administration (TSA).

How do I reset my combination?

You can reset your combination at any time. To do so, follow these steps:

1. Open your lock.
2. Press the reset button with a pen or other sharp object until you hear a click.
3. Set your desired combination by turning the thumbwheels to the numbers you want to use (you can set up to four digits).
4. Press the button again and allow it to return to its original position. Your new combination is now set.

What is the difference between lock set a and lock set b?

The main difference is that the unlocking method is different, A is the left and right pressure to unlock, B is the downward pressure to unlock

Will it fit any suitcase with built in lock

As long as the zippered suitcases on both sides are suitable

How do you reset a TSA luggage lock?

On every TSA lock there is a reset button hidden inside a tiny hole in the back or bottom of the lock . Find a pointy object like a paperclip or safety pin and push the button until you hear the lock release. Step #3: Select a new combination for your TSA lock. It is now time to set a new combination.

Are all tsa007 keys the same?

As you can see, **those are all significantly different keyways**. While they share certain elements, there is much variation in the height and width of the keyways and even the position and size of the warding on the lower-right.

How many TSA master keys are there?

Key escrow — the process of keeping a set of keys for yourself “just in case” — has always been the U.S. government’s modus operandi when it comes to security.

Do TSA agents steal?

TSA screeners steal from passengers at checkpoints. One TSA screener even stole a CNN camera and sold it on eBay (he got caught because he forgot to remove the CNN stickers first). Baggage handlers steal from checked bags. one world's head of finance allegedly stole \$2.2 million.



DELSEY [TSA007-Password-](#)

www.delsey.com

Documents / Resources

	<p>DELSEY TSA007 Password Lock Zipper Suitcase Bag Fixed Lock [pdf] Instructions TSA007, Password Lock Zipper Suitcase Bag Fixed Lock</p>
--	---