



DELTACO GAMING GAM-103-W Wireless Controller User Manual

[Home](#) » [DELTACO GAMING](#) » DELTACO GAMING GAM-103-W Wireless Controller User Manual 

DELTACO GAMING GAM-103-W Wireless Controller User Manual




Contents

- 1 Thank you for choosing Deltaco!
- 2 Vibration
- 3 3.5 mm
- 4 Connect to “Switch”-console
- 5 Disconnect (“Switch”)
- 6 Troubleshooting (“Switch”)
- 7 Calibrate control stick (Switch)
- 8 Connect to
- 9 Wireless (X connection): Xinput.
- 10 Wireless (Y connection): Press the
- 11 Turbo
- 12 Sleep mode
- 13 Reconnect
- 14 Charging
- 15 Adjust turbo speed
- 16 Adjust vibration (“Switch”)
- 17 Cleaning
- 18 App
- 19 Disclaimer
- 20 Warranty
- 21 Documents / Resources
 - 21.1 References
- 22 Related Posts

Thank you for choosing Deltaco!

1. Left stick
2. – button
3. Screen capture button (Take screenshot and record video)
4. “Home” button
5. + button
6. Y button
7. X button
8. A button
9. B button
10. Right stick
11. 3.5 mm audio port
12. Turbo button
13. LED indicators 1, 2, 3, 4 counting down to up
14. Direction pad
15. ZR button
16. R button
17. L button
18. ZL button
19. USB-C charge port
20. Connection button

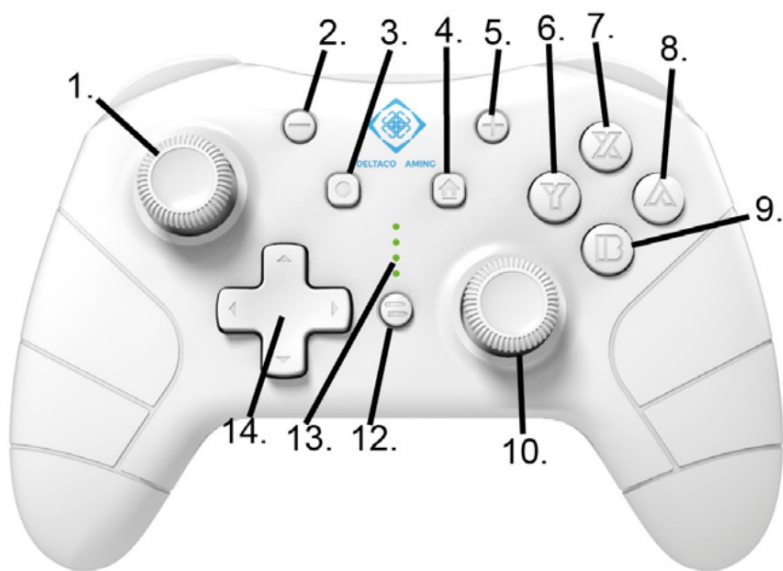

Vibration

The controller has 2 built-in vibration motors.

3.5 mm

Use the 3.5 Use the 3.5 mm stereo connection to connect a microphone, headphones, or a headset.

Connect to “Switch”-console

Connect the controller via the console’s system. Depending on the language and version of the system, the menu

might look different, but it should be something like this: Press the “Home”- button from main screen -> Controllers -> Change Grip/Order. Press and hold the connection button (20) for about 4 seconds to connect. The 4 LED lights will flash quickly (release the button). Follow the instructions on the screen to connect.

Disconnect (“Switch”)

Press and hold the “Home” button for about 3 seconds to disconnect. The controller will enter sleep mode.

Troubleshooting (“Switch”)

Make sure airplane mode is off. Try to delete the information for this controller from >controllers and sensors. Try to reconnect.

Calibrate control stick (Switch)

1. Press the “Home”- button from main screen -> System settings -> Controllers and sensors -> Calibrate control sticks.
2. Follow the instructions on the screen to calibrate.

Connect to

“Windows/Android/iPhone”

You can connect in 2 similar ways with wireless. Either with X or with Y button. X uses Xinput (a system API). For Android, we recommend Y button connection. For PC and iPhone we recommend X button connection. If you have connected an iPhone with Y, games will not respond. Try again with X button connection. The controller will show up with different names in the Bluetooth settings depending on which button you pressed.

Wireless (X connection): Xinput.

Press the connection button (20) + X. LED 1 and LED 4 will start flashing. From the Bluetooth settings, you can now connect to this controller.

Wireless (Y connection): Press the

connection button (20) + Y. LED 2 and LED 3 will start flashing. From the Bluetooth settings, you can now connect to this controller. Wired: Connect controller to a device with a USB cable. LED 1 and LED 4 stays lit. Windows only: The controller defaults to XInput. In XInput, “A” becomes “B”, “B” becomes “A”, “X” becomes “Y” and “Y” becomes “X”. Compatible with windows 10 or higher.

Turbo

Turbo works on these buttons: A B X Y L R ZR ZL

1. Activate turbo: Press turbo button + button that you want turbo on.
2. Activate automatic turbo: Press turbo button + on the button that already has activated turbo.
3. Turn off turbo: Press turbo + on the button that has automatic turbo activated.

Sleep mode

1. When the console's screen powers off, the controller will enter sleep mode.
2. While connected, the controller will automatically enter sleep mode after 5 minutes of inactivity.

Reconnect

To reconnect press and hold the "Home"-button for about 2 seconds to wake up the controller and reconnect. The controller will stay in sleep mode if it can't reconnect within 10 seconds.

Charging

To charge: Connect a USB cable to the controller and to a USB power supply. For example, a USB power adapter or a computer. The LEDs flash when charging. They flash differently depending on status. LED 1 and 4 will flash if it is connected with X (xinput) LED 2 and 3 will flash if it is connected with Y. LED 2 and 3 will flash when it is off. If you charge with a USB power adapter LED 1, 2, 3 and 4 will flash and turn off when fully charged.

If you charge with a computer version earlier than windows 10, L2 and L3 will flash. If you charge with a computer with windows 10 or later, L1 and L4 will flash (defaults to Xinput). When fully charged, the LEDs will stay lit (connected). The LEDs will turn off in sleep status. LED indicators flashing quickly indicates low power.

Adjust turbo speed

Turbo can be set to 3 speeds (automatic Presses Per Second = pps): 5pps, 12pps (default) and 20 pps. Increase speed: Press and hold the turbo button (12) + right stick (10) upwards to increase speed. Decrease speed: Press and hold the turbo button (12) + right stick (10) downwards for to decrease speed.

Adjust vibration ("Switch")

Vibration can be set to 4 intensities: 0%, 30%, 70% (default), 100%. Increase vibration: Press and hold the turbo button (12) + left stick (1) upwards to increase vibration. Decrease vibration: Press and hold the turbo button (12) + left stick (1) downwards to decrease vibration.

Cleaning

Clean with a soft dry cloth.

App

This game controller is compatible with the 3rd party Key Linker app. With the app you can modify the buttons, change the vibration, and more. The app is available both on Google play and App store.

Disclaimer

DistIt services AB and Aurdal is not associated with the developers or development of the KeyLinker app, or App store, or Google play.

Warranty

Please, see www.deltaco.eu for warranty information.

Support

More product information can be found at www.deltaco.eu.


Contact us by e- mail: help@deltaco.eu



Disposal of electric and electronic devices EC Directive 2012/19/EU This product is not to be treated as regular household waste but must be returned to a collection point for recycling electric and electronic devices. Further information is available from your municipality, your municipality's waste disposal services, or the retailer where you purchased your product.

www.deltacogaming.com / Made in China
DistIT Services AB, Glasfibergatan 8, 125 45 Älvsjö, Sweden

Documents / Resources

	<p>DELTACO GAMING GAM-103-W Wireless Controller [pdf] User Manual GAM-103-W Wireless Controller, GAM-103-W, Wireless Controller, Controller</p>
---	---

References

- aurdel.com/compliance/
- [DELTACO GAMING | Homepage](#)