



Contents [[hide](#)]

- [1 DELTACO GAMING GAM-189 Wireless Pro Controller](#)
- [2 Specifications](#)
- [3 Product Overview](#)
- [4 Connect to PS5](#)
- [5 Bluetooth devices](#)
- [6 Charging](#)
- [7 Maintenance and storage](#)
- [8 Warning instructions](#)
- [9 Warranty](#)
- [10 Support](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)



 
 
DELTACO GAMING GAM-189 Wireless Pro Controller







Specifications

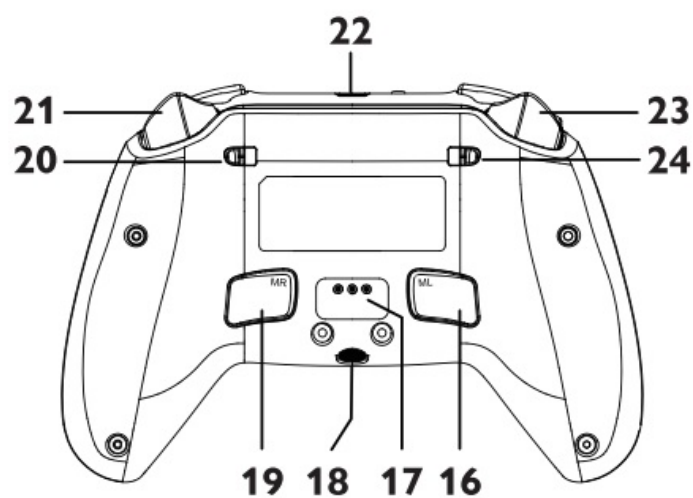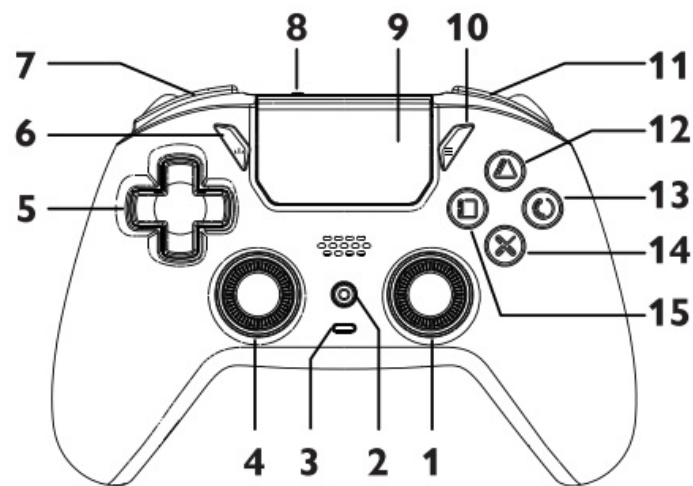- Model: 4222414 GAM-189
- Product: Wireless Pro Controller
- Languages: LAV LIT NLD NOR POL SPA SWE DAN DEU ENG
- Features: 2x vibration motors, six-axis sensor function

Product Overview



1. Right stick (R3)
2. Home/"PS" button
3. Audio on or off ("mute")
4. Left stick(L3)
5. Direction pad
6. Share button ("share")
7. L1 button
8. Off button
9. Touchpad
10. Option button ("option")
11. R1 button
12.  = Triangle button
13.  = Circle button
14.  = Cross button
15.  = Square button

16. ML button
17. Charge connectors (when connected to a charging station)
18. 3.5 mm audio port
19. MR button
20. Trigger sensitivity switch (for R2 button)
21. R2 button
22. USB-C charge port
23. L2 button
24. Trigger sensitivity switch (for L2 button)

Connect to PS5

To connect wirelessly you must first connect with a USB cable.

Wired connection (PS5)

Connect the controller with a USB cable to the PS5.

Wireless connection (PS5)

After being connected with cable: Press and hold the “PS” button until the light flashes and then stays on.

Audio on/off

- There is no built-in microphone on this device. The microphone is on your connected headset.
- Short press on microphone on/off button, turns the sound of the microphone on or off.
- The light will turn to confirm on when microphone is off.
- Press and hold for 3-5 seconds to turn off all audio, the light will flash to confirm.
- Press and hold for 3-5 seconds to turn on all audio, the light will turn off to confirm.
- When the controller is connected to a headset these functions will apply to the headset.
- When the controller is not connected to a headset, it will turn off the game controller's speaker.

Trigger sensitivity switch

- On the back of the game controller there are 2 switches for R2 and L2. Adjusting these switches changes the travel length of the R2 and L2 buttons. This is useful in some types of games.
- For example, in driving games you should have them set to long for smooth acceleration. And you should have them set to short in shooting games for faster triggers.
- Pressed in switch = short button travel.
- Drawn out switch = long button travel.

Connect to PC

Wired connection (PC)

- Connect the game controller with the USB cable.
- The game controller will set to “PS5 wired mode” (default setting).
- Press and hold share button + option button for about 5 seconds to change to “X-input” mode. Press and hold again to switch back to “PS5 wired mode” (this mode switching only works in wired PC mode).
- In X-input mode the light will be green.
- In “PS5 wired mode” the light will be blue.

Wireless connection (PC)

To connect wirelessly you must first connect with a USB cable.

See section about Bluetooth devices.

Bluetooth devices

1. Turn the controller off, then from off mode, press and hold both the share button and then PS button, and keep holding both (about 10 seconds) until the controller turns on.
2. Open your device's settings and turn on Bluetooth.
3. Select this game controller from your device. Successful connection is indicated by the light changing from flashing to static light.
 - If you want to connect to a new device then start from step 1, it resets the Bluetooth connection.

- Some Bluetooth compatible devices include: PCs and laptops with Bluetooth, Android phones (Android from 4.4), iPhone (iOS from 13.0), smart Android TVs and Android tablets. Other Bluetooth devices might be compatible as well.
- Bluetooth devices work with limited functionality. For example, buttons and some games may not work as expected. Supported games depend on your device and system version. The games are different for Android and iOS.

Macro buttons

The purpose of macros is to click on 1 button and then many buttons are pressed in a sequence automatically. It can make your gaming more efficient, time saving, easier, less exhausting and less strain on your fingers and hands.

Macros can be set with PS5, PC and other devices. You can store up to 2 macros.

The ML/MR buttons can be set to 1-24 button presses respectively.

These 14 buttons can be set with macros:

Triangle, square, circle, cross, L1, L2, R1, R2, L3, R3, up, down, left, right.

You can set buttons as a sequence (L1, L2 etc) or combination (L1 + L2).

1. Press and hold the touch button and one of ML or MR buttons for about 3 seconds.

The controller will confirm by vibrating.

2. Press the button sequence/macro that you want to set.

3. Then press ML or MR buttons to save. Press ML or MR to use the macro.


To reset a macro, press and hold the touchpad and one of ML or MR buttons for about 5 seconds. The controller will confirm by vibrating.

Press ML or MR again. The macro is now reset.


Continuous macro

After a macro has been set, press and hold ML or MR to have the macro repeat continuously. The effect is similar to that of a turbo button. But limited to how you pressed the button or buttons.

Lights

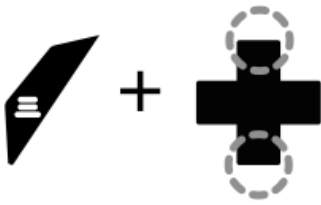

To adjust brightness press and hold options button + up or down on direction pad. Keep holding both buttons for gradual adjustment. Release buttons to keep current settings.

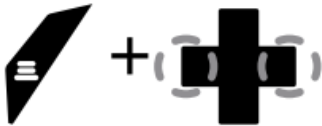

To change light mode press and hold options button + left or right on direction pad.

The light modes are: rainbow, breathing, single colour and lights off.

The game controller remembers last used LED mode.

Charging

To charge the controller, connect a USB-C cable to the controller and to a USB source. Like a computer or a USB power adapter. We recommend using a 5V/1A USB power adapter.

While charging the LED is slowly flashing and turns off when it is fully charged.

Maintenance and storage

- To prevent dust from gathering inside the controller, use a storage bag when storing the controller. Dust can cause joystick drifting.
- Store the controller in a dry environment to protect electronic components from potential humidity damage.
- Charge the controller periodically. Prolonged battery depletion can lead to battery damage.
- To protect and minimize damage from scratches and collisions use protective cases or films.
- Turn the controller off when not in use to avoid unnecessary overuse.

Software update

- Check the latest firmware updates on www.deltacogaming.com.
- If updates are available, download to your computer, and unpack the setup file.
- Connect the game controller with a USB-A to USB-C cable to your computer. And then run the setup file. Follow the instructions of the setup program.
- Software update requires a PC.

Calibration

You can calibrate the left and right joystick and R2 and L2. This section requires PC or console.

1. Power the controller off.
2. Press and hold share button + option button and connect to a PC at the same time, the light will flash to confirm.
3. Rotate the left and right joystick in full circles, three times in normal strength.
4. Press R2 and L2 to their maximum travel 3 times in normal strength.
5. Press and hold X button for about 1 second, it will change to static light.
6. Turn the controller off with the off button to save the calibration.
7. Disconnect the cables and reconnect the cables before using it again.

On/off/wake up

- PS5 only: Short press on the PS button to wake up the game controller and console.
- Other devices: Short press on the PS button to wake up the game controller.
- Pressing the off button will turn the game controller off.
- Long press (about 10 seconds) on the PS button will turn off the game controller.
- The controller will enter sleep mode if it can't connect within 15 seconds.
- While connected wirelessly and after 10 minutes of inactivity it will enter sleep mode.
- Exceeding the 10-meter wireless range will also trigger sleep mode.

3.5 mm

Use the 3.5 mm stereo connection to connect a microphone, headphones, or a headset.

Compatible with wired and Bluetooth on PS5.

Compatible only with wired on PC.

Features

This product has 2x vibration motors, and a six-axis sensor function.

Cleaning

Clean the product with a soft and dry cloth. In case of difficult stains, you can use a mild cleaning agent on a soft cloth and wipe off with a soft dry cloth.

Store in a dry area.

Warning instructions

1. To avoid electric shock, do not disassemble the product by yourself. In case repairs are needed either contact the retailer, or an authorized electrician.
2. Do not place the product near a window where it would be exposed to direct sunlight.
3. Protect the device from splashes of water and other liquids. Do not let any liquid into the game controller.
4. Do not dispose of this product in a fire. Follow local guidelines regarding correct disposal of electrical and electronic waste.
5. Use your hands to control the game controller. Do not put the game controller in contact with your head or face or near the bones of your body. The vibration function may aggravate existing injuries.
6. To avoid short circuit, fire hazard and electrical shock, do not insert any objects into the game controller.
7. Do not place any heavy objects on the game controller.
8. Do not expose the product to physical shock or excessive vibrations.

Warranty

Please, see www.deltaco.eu for warranty information.

Support

More product information can be found at www.deltaco.eu.

Contact us by e-mail: help@deltaco.eu.

SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided

as follows: Hereby, DistIT Services AB declares that the radio equipment type wireless device is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.aurdel.com/compliance/



Disposal of electric and electronic devices EC Directive 2012/19/EU

This product is not to be treated as regular household waste but must be returned to a collection point for recycling electric and electronic devices. Further information is available from your municipality, your municipality's waste disposal services, or the retailer where you purchased your product.

DistIT Services AB, Glasfibergatan 8, 125 45 Älvsjö, Sweden

DistIT Services AB, Suite 89, 95 Mortimer Street, London, W1W 7GB, England

FAQ

Q: How do I change the LED light mode?

A: Press and hold the options button + left or right on the direction pad to cycle through light modes.

Q: How do I connect a headset?

A: Use the 3.5 mm stereo connection on the controller to connect a microphone, headphones, or a headset.

Documents / Resources



[DELTACO GAMING GAM-189 Wireless Pro Controller \[pdf\]](#) User Manual
6612434, GAM-189 Wireless Pro Controller, GAM-189, Wireless Pro Controller, Pro Controller, Controller

References

- [User Manual](#)

📁 DELTACO GAMING

🔍 6612434, controller, DELTACO GAMING, GAM-189, GAM-189 Wireless Pro Controller, Pro Controller, Wireless Pro Controller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.