



DELTACO TB-504 Wireless Mini Keyboard with Touchpad User Manual

[Home](#) » [DELTACO](#) » DELTACO TB-504 Wireless Mini Keyboard with Touchpad User Manual 

Contents

- [1 DELTACO TB-504 Wireless Mini Keyboard with Touchpad User Manual](#)
- [2 How to connect the keyboard](#)
- [3 SPECIFICATION](#)
- [4 Current and volt usage](#)
- [5 Environment](#)
- [6 Gesture functionality](#)
- [7 Support](#)
- [8 Read More About This Manual & Download PDF:](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

DELTACO TB-504 Wireless Mini Keyboard with Touchpad User Manual



How to connect the keyboard

1. Turn on the (The LED will briefly be lit red, and then the LED will turn off)

The On/off switch is on the backside of the keyboard.

The keyboard will automatically go into pairing mode, and try to connect to the USB nano receiver.

2. Connect the USB nano receiver to an available USB-A The receiver should install itself automatically.

The keyboard should now automatically connect to the USB nano receiver.

3. If they don't connect, you can try the following:

4. Press and hold ESC+K. The LED will flash

5. Hold the keyboard within 20 cm of the USB nano The LED will turn off, indicating successful pairing. Try using the keyboard.

6. If it still does not connect, try turning off the keyboard for 5 minutes and try

Note: If the LED does not flash red when pressing ESC+K, it can be an indication of no battery.

SPECIFICATION

Keyboard switches: Membrane

Keys: 86 (+ Left and right mouse buttons) Required batteries: 2 x AAA (included)

LED: Indicates caps lock, low battery and pairing Power: On/Off Switch

Keystroke lifespan: 5 million

Compatibility: Windows 7/8/10, Mac OS X/macOS Key actuation force : 55+20gf

Material: ABS

Radio frequency: 2.400GHz-2.4835GHz Distance: Up to 10 meters

Data transfer rate: 1Mbps

Current and volt usage

Working voltage: 2.0-3.0V Pairing mode: Work current: <30mA

Work mode 1: Using the Touchpanel, current: 15mA@3V. Work mode 2: Using the keyboard, current: 5mA@3V.

Stand-by mode 1: Using only the keyboard, current: 2mA@3V. Stand-by mode 2: Touch panel and keyboard unused for 1 minute: 0.50mA@3V. Sleep mode: 40uA@3V

Environment

Work temperature: 5°C ~ 50°C Storage temperature: -20°C ~ 65°C Work humidity: 10%° ~ 90% RH 25°C Storage humidity: 5% ~ 95% RH 25°C

Gesture functionality



Gesture: Single-finger slide.
Mouse equivalent: Move the mouse cursor.



Gesture: Single tap
Mouse equivalent: Left click at cursor location.



Gesture: Two-finger slide (Horizontally or vertically)
Mouse equivalent: Horizontal or vertical scroll with mouse wheel



Gesture: Pinch-zoom on the touchpad with two fingers.
Description: Pinch open to zoom in. Pinch close to zoom out.

Key combinations



FN+F1= Open Internet Explorer



FN+F2= Switch between applications



FN+F3= Windows settings



FN+F4= Search



FN+F5= Open windows action center



FN+F6= Enter computer lock screen



FN+F7= Share



FN+F8 = Start media player



FN+F9 = Play



FN+F10 = Stop



FN+F11 = Previous



FN+F12 = Next

FN+ HOME = Home

FN+ END = End

FN+ PgUp = Page Up

FN+ PgDn = Page Down



= Enable / Disable touch pad



= Mute sound



= Decrease volume



= Increase volume



= Backward



= Forward




Disposal of electric and electronic devices EC Directive 2012/19/EU This product is not to be treated as regular household waste but must be returned to a collection point for recycling electric and electronic devices. Further information is available from your municipality, your municipality's waste disposal services, or the retailer where you purchased your product

Support

More product information can be found at www.deltaco.se.

Read More About This Manual & Download PDF:

Documents / Resources

	<p>DELTACO TB-504 Wireless Mini Keyboard with Touchpad [pdf] User Manual TB-504 Wireless Mini Keyboard with Touchpad, TB-504, Wireless Mini Keyboard with Touchpad, Wireless Mini Keyboard, Mini Keyboard, Keyboard</p>
---	--

References

- b.aurdel.com/
- b.aurdel.com/compliance/
- [b. Aurdal - Distribuerer den allernyeste og bedste teknologi](#)
- [b. Aurdal – Uusimman ja hienoimman tekniikan tukkuliike](#)
- [b. Aurdal - Distributør av den nyeste og beste teknologien](#)
- b.deltaco.se