



# RC963 Denon Remote Control Instructions

[Home](#) » [Denon](#) » RC963 Denon Remote Control Instructions 

## RC963 Denon Remote Control Instructions



Contents

 
1 Remote Control

 
 
 
 
2 Documents / Resources

 
 
 
 
2.1 References

 
3 Related Posts

### Remote Control

| Original                                                                            |           | Replacement                                                                         |       |
|-------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|-------|
|  | DVD Power |  | Power |

|                                                                                     |             |                                                                                     |        |
|-------------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------|--------|
|    | Open/Close  |     | Eject  |
|    | 1           |    | 1      |
|    | 2           |    | 2      |
|    | 3           |    | 3      |
|    | 4           |    | 4      |
|    | 5           |    | 5      |
|   | 6           |    | 6      |
|  | 7           |  | 7      |
|  | 8           |  | 8      |
|  | 9           |  | 9      |
|  | 0           |  | 0      |
|  | +10         |  | Guide  |
|  | Prog/Direct |  | Sleep  |
|  | Call        |  | Pre Ch |

|                                                                                     |              |                                                                                      |              |
|-------------------------------------------------------------------------------------|--------------|--------------------------------------------------------------------------------------|--------------|
|     | Clear        |      | Exit         |
|    | Random       |     | Media        |
|    | Subtitle     |     | Subt         |
|    | Audio        |     | Dual         |
|    | Repeat       |     | Text         |
|    | A-B Repeat   |     | AV           |
|  | Menu         |   | Menu         |
|  | Top Menu/PBC |  | Shift + Menu |
|  | Angle        |   | Red          |
|  | Return       |   | Return       |
|  | Up           |   | Up           |
|  | Enter        |   | Ok           |
|  | Down         |   | Down         |

|                                                                                     |                |                                                                                     |         |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|---------|
|    | Right          |     | Right   |
|    | Left           |    | Left    |
|    | Display        |    | Info    |
|    | Stop           |    | Stop    |
|   | Still/Pause    |   | Pause   |
|  | Play           |  | Play    |
|  | << Slow/Search |  | <<      |
|  | >> Slow/Search |  | >>      |
|  | I<< Skip       |  | I<<     |
|  | >>I Skip       |  | >>I     |
|  | NTSC/PAL       |  | Format  |
|  | Setup          |  | Options |

|                                                                                   |            |                                                                                   |               |
|-----------------------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------|---------------|
|   | Zoom       |  | Shift + Eject |
|  | Slide Show |  | Smart         |

<https://all-remote-controls.co.uk/en/1063786-19618-replacement-remote-control-for-Denon-RC963-00D9430020101.html>



## Documents / Resources

|                                                                                    |                                                                                                                                                                    |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><a href="#">Denon RC963 Denon Remote Control</a> [pdf] Instructions</p> <p>RC963 Denon Remote Control, RC963, Denon Remote Control, Remote Control, Control</p> |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## References

- [Replacement remote control for DENON RC963 \(00D9430020101\)](#)
- [User Manual](#)