

**denver MGP-107R Megaphone with Recording Function**



# denver MGP-107R Megaphone with Recording Function User Manual

[Home](#) » [Denver](#) » denver MGP-107R Megaphone with Recording Function User Manual 

## Contents

- [1 Denver MGP-107R Megaphone with Recording Function](#)
- [2 Specifications](#)
- [3 Safety information](#)
- [4 Technical Data](#)
- [5 Product Overview](#)
- [6 Operating Buttons](#)
- [7 Frequently Asked Questions](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)



**Denver MGP-107R Megaphone with Recording Function**



## Specifications

- **Model:** MGP-107R
- **Brand:** Denver. eu
- **Date:** 04/2024

## Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. **Warning:** This product includes lithium polymer batteries.
3. Keep products out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degrees Celsius to 40 degrees Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or services should only be performed by qualified personnel.
6. Do not be exposed to heat, water, moisture, or direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk hearing loss.
8. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
9. Only charge with the supplied USB cable.
10. Do not use non-original accessories together with the product as this can make the product functionality abnormal.


## Scope of Supply

- Megaphone x 1
- USB charging cable x 1
- User manual x 1

## Technical Data

- **Rated input:** DC 5V
- **Max Power:** 10W
- **Battery:** 1200mAh (rechargeable)

## Product Overview

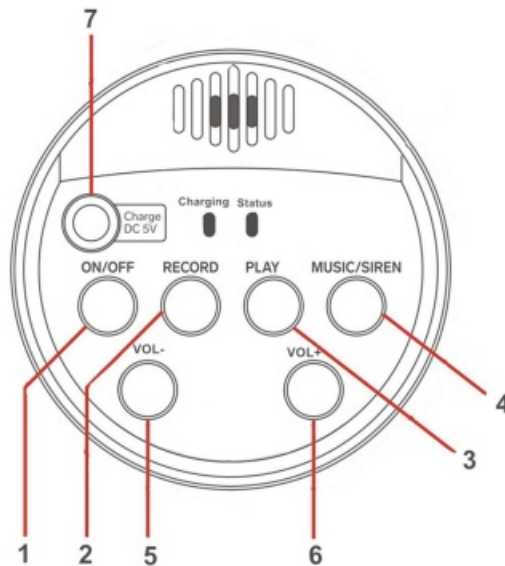

## Operating Buttons

1. [ON/OFF]: Press the button to turn on the power. Now you can speak. Press the button again to turn off the power.
2. [Record]: Press the [ON/OFF] button first, then press the button until the light flashes, to begin recording. Press the button again to end the recording session.
3. [Play]: Press the [ON/OFF] button first, then press the button to hear your recording. Press the button again to stop the loop.
4. [Music/Siren]: Short press the button to play MUSIC. Long press the button to play Siren. Press this button again to stop the loop.
5. [Vol-]: Press the button to decrease the volume. 6. [Vol+]: Press the button to increase the volume. 7.[DC 5V charge]: Charging by USB cable.

## Charging the Battery

Please use the provided USB cable for charging.

## Cautions

1. Do not use abrasive cleaners to clean this product.
2. Keep this product away from fire or heat sources, such as cooking stoves.
3. Do not expose this product to direct sunlight for a long time.
4. Do not throw this product into the fire to avoid an explosion.
5. Never attempt to disassemble or modify this product, as it contains no after-service components.

6. Do not use this product in the rain.
7. If you do not plan to use this product for a long time, please store it in a dry environment and charge the megaphone at least once a month to extend its life and avoid extreme temperatures and dust.

**Please notice** – All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S

- Electric and electronic equipment including batteries contains materials, components and substances that can be hazardous to your health and the environment if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.
- Electric and electronic equipment and batteries are marked with the crossed-out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.
- As the end user, you must submit your used batteries to the appropriate and designated facility. In this manner, you make sure that the batteries are recycled by the legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites or be collected from households. Additional information is available at the technical department of your city.


## DENVER A/S

- Omega 5A, Soeften
- DK-8382 Hinnerup
- Denmark
- [www.facebook.com/denver.eu](https://www.facebook.com/denver.eu)

## Frequently Asked Questions

- **Q: Can I use a different USB cable to charge the megaphone?**
  - A: It is recommended to only charge the megaphone with the supplied USB cable to ensure proper functionality and safety.
- **Q: How often should I charge the megaphone if I don't use it frequently?**
  - A: It is advisable to charge the megaphone at least once a month if not used regularly to maintain battery health and longevity.

## Documents / Resources

	<p><a href="#">denver MGP-107R Megaphone with Recording Function</a> [pdf] User Manual</p> <p>MGP-107R Megaphone with Recording Function, MGP-107R, Megaphone with Recording Function, Recording Function, Function, Megaphone</p>
---	--

## References

- [📄 Denver A/S](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.