




Home » DESLOC » DESLOC D120L Plus Series Fingerprint Lever Lock with Built in Wi-Fi User Guide ↑

Contents [hide]

- 1 DESLOC D120L Plus Series Fingerprint Lever Lock with Built in Wi-Fi
- 2 Fingerprint Collection
- 3 Factory Reset
- 4 Add Admin
- 5 Add User
- 6 Del User
- 7 Lock Settings
- 8 Documents / Resources
 - 8.1 References



DESLOC D120L Plus Series Fingerprint Lever Lock with Built in Wi-Fi

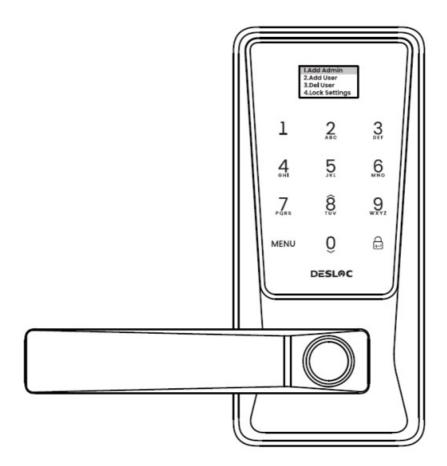


Standalone Function Instruction

D120L Plus Series Fingerprint Lever Lock with Built-in Wi-Fi

Quick Start Guide

Product button Description


- [Number button]Number and letter switching function: for example, press the button [2] once to show "2", twice to show "A", three times to "B", and four times continuously to "C';
- [Enter button]Cursor move function:
- Press the [Enter button] to move the cursor back, enter the subsequent text, and double-click the [Enter button] to confirm after the input is completed (as shown in the figure on the right);
- [Menu button] Backspace function:
- Press the [Menu button] button to backspace and delete if there is wrong unwanted text in the input process.

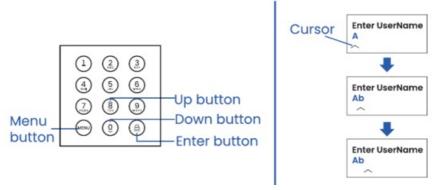

- [Numbe button]: Used to enter PIN, numbers, and names
- [Menu button): Enter the settings interface, return, and backspace
- []: Enter button, confirm the current operation, and press it to lock
- [A]:Up button, to scroll the menu item up
- [V): Down button, to scroll the menu item down

Change Initial PIN


- Step 1: Click the [Menu button] > Enter the initial PIN 123456" > Click the [Enter button] to confirm;
- Step 2: Enter the administrator's name, for example, to enter "Ab": press the [2] button
 twice to select "A"> press the [Enter button] to confirm > then press the [2] button 3
 times continuously to select
- "b" > double-click the [Enter button] to confirm;
- Step 3: Enter a new PIN (6-8 digits), and press the [Enter button] to confirm.
- Step 4: Enter and confirm the new PIN again, and press the [Enter button] to confirm, so that the new PIN setting is completed.

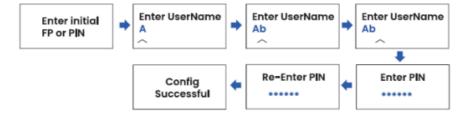


NOTE:

The initial management PIN is 123456, and add an administrator and change the administrator PIN (new PIN (6-8 digits) can be set) before the first use.

Fingerprint Collection

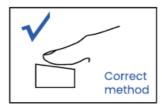

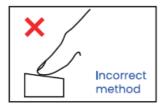

NOTE:

- 1. It is recommended that the thumb is preferred as the unlocking finger;
- 2. For better fingerprints input, please remove debris and water on the fingerprint reader and fingers before input;
- 3. If failure to enter fingerprint, the screen will display the prompt "Config fail and automatically return to the home page of the menu, and the fingerprint shall be reentered according to the steps shown in the figure.
- 4. It is recommended not use the same finger as both the administrator's fingerprint and the user's fingerprint.

Factory Reset

LEs to the tron cos cit the lenter puton To conto Roset button > select



Method 2:

For specific details, see Step 5.3.

NOTE:

- 1. After reset, the lock will reset to its factory default settings, reverting the Master passcode to "123456" and erasing all unlock modes;
- 2. After the factory settings are restored, please change the initial administrator passcode immediately.

Add Admin

Add Admin FP

- · a. Add the fingerprint of an existing administrator
- Step 1: Click the [Menu button] > select "Add Admin" > "Add Admin FP*> "Select User"
- Step 2: Select an existing administrator; for example, select "Ab", and press the [Enter button] to confirm.
- Step 3: Hold the fingerprint you want to enter on the "Fingerprint
- Reader, short press it and then release, and repeat this operation 6 times until the
 Config Successful is prompted on the screen, so that the fingerorint inout is comoleted



- b. Add the fingerprint of a new administrator
- step I: Click the [Menu button] > select "Add Admin"> "Add Admin Fp".
- Step 2: Enter the name of the new administrator and press the [Enter button] to confirm.
- Step 3: Hold the fingerprint you want to enter on the "Fingerprint Reader, short press it and then release, and repeat this operation 6 times until the "Config Successful" is prompted on the screen, so that the fingerprint input is completed




Add Admin PIN

- a. Add the PIN code of the existing administrator
- Step 1: Click the [Menu button] > select "Add Admin" > "Add Admin PIN* > "Select User".
- Step 2: Select an existing administrator; for example, select "Ab", and press the [Enter button] to confirm.
- Step 3: Enter a new PIN (6-8 digits), and press the [Enter button] to confirm.
- Step 4: Enter and confirm the new PIN again, and press the [Enter button] to confirm,

so that the new PIN setting is completed.




- b. Add the PIN code of a new administrator
- Step 1: Click the [Menu button] > select "Add Admin" > "Add Admin PIN" > "Add User".
- Step 2: Select the name of the new administrator, and press the [Enter button] to confirm.
- Step 3: Enter a new PIN (6-8 digits), and press the [Enter button] to confirm.
- Step 4: Enter and confirm the new PIN again, and press the [Enter button] to confirm, so that the new PIN setting is completed.

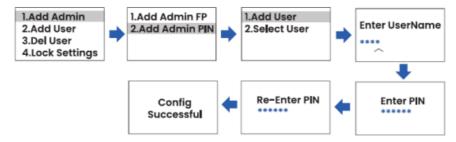

Add User


Add User FP

- Add the fingerprint of a new user
- step 1: Click the [Menu button] > select "Add User" > 'Add User FP" > "Add User"
- Step 2: Select the name of a new user, and press the [Enter button] to confirm.
- Step 3: Hold the fingerprint you want to enter on the "Fingerprint Reader", short press it and then release, and repeat this operation 6 times until the "Config Successful" is prompted on the screen, so that the fingerprint inout is comoleted.

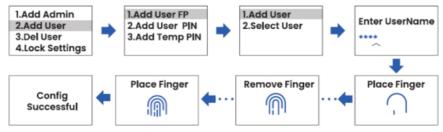


- b. Add the fingerprint of the existing user
- Step 1: Click the [Menu button] > select "Add User" > "Add User FP"> "Select User".
- Step 2: Select the name of the existing user, and press the [Enter button] to confirm.

• Step 3: Hold the fingerprint you want to enter on the "Fingerprint Reader", short press it and then release, and repeat this operation 6 times until the "Config Successful" is prompted on the screen, so that the fingerprint innut is comoletedi

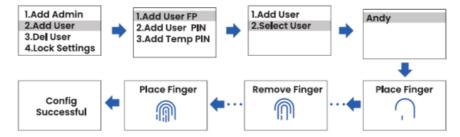


Add User PIN

- a. Add the PIN code of a new user name
- Step I: Click the [Menu button] > select "Add User" > Add User PIN'> "Add User";
- Step 2: Enter the name of a new user, and press the [Enter button] to confirm;
- Step 3: Enter a new PIN (6-8 digits), and press the [Enter button] to confirm;
- Step 4: Enter and confirm the new PIN again, and press the [Enter button] to confirm, so that the new PIN setting is completed.

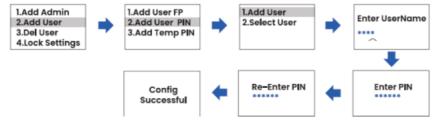

- b. Add the PIN code of the existing user
- Step 1: Click the [Menu button] > select "Add User" > "Add User PIN"> "Select User".
- Step 2: Select the existing user, such as "Andy", and press the [Enter button to confirm.
- Step 3: Enter a new PIN (6-8 digits), and press the [Enter button] to confirm.
- Step 4: Enter and confirm the new PIN again, and press the [Enter button|to confirm, so that the new PIN setting is completed.

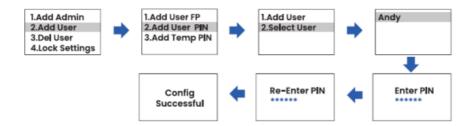

Add Temp PIN

- Step 1: Click the [Menu button] > select "Add User" > "Add Temp PIN";
- Step 2: Press the [Enter button] to confirm and get 4 sets of temporary PIN (they can only be used once, and will be invalid after



• NOTE:

The temporary PIN screen works only for 30s, and please take a photo with your mobile phone for recording; as the screen flashes quickly, a few more photos taken are recommended.

Del User

User Info

- Used to query the number of users and of unlock modes
- a. User Count: Click the [Menu button] > select "Del User"> "User Info"> "User Count"
 to view the number of the users entered.



• b Key: Click the [Menu button] > select "Del User" > "User Info" > "Key" to siew the number of unlockable fingerprints, reaular PIN. and temporary PIN.I



Del User

- To delete a single user, administrators and regular users, but unable to delete primary administrator.
- Click the [Menu button] > select "Del User" > "Del User" > select the user name to be deleted such as "Andy' > click the [Enter button] to delete all the information of the user.



Del All User

- Delete all regular users
- Click the [Menu button] > select "Del User" > "Del Al User" > 'YES" > click the [Enter button! to delete all users' information.



Del Temp PIN

Click the [Menu button] > select "Del User" > "Del Temp PIN" > click the [Enter button] to delete the temporary PIN.



NOTE:

If the PIN has been issued, but it is not used, and you do not want to use! it for others, please delete all (4 sets) of temporary PIN or regenerate 4 sets of new temporary PIN.

Lock Settings

Lock Setup

- a. Passage Mode
- Step 1: Click the [Menu button] > select "Lock Settings" > 'Lock Setup* > 'Passage Mode;
- Step 2: Select ON or OFF as required, and click the [Enter button] to confirm.




NOTE:

- 1. Function Definition: With this function enabled, the door lock wil be kept in a non-auto-locking state.
- 2. Quick enable mode: Resident users can enter the "5" through the keyboard to enable the 'Passage Mode" within 2 seconds after unlocking the door lock with their fingerprint or Pin. After this Mode is enabled and the door lock is in the Sleep state, the screen will light and display the "Passage Mode".
- 3. Exit method: Users can enter the [Menu button) and set the "Passage Mode" to "OFF" or enter "5" through the keyboard within 2 seconds after unlocking the door

lock with their fingerprint or Pin to exit this mode.

- b. Auto Lock
- Step I: Click the [Menu button] > select "lock Settings" > 'Lock Setup* > "Auto Lock;
- Step 2: Click the (Enter button] to select, enter the period during which the lock is automatically closed (the period time can be set to 5-120s), and click the [Enter button to confirm.

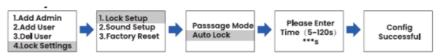

Sound Setup

click the (me button to select the Sounding select "Lock Settings" > Sound Setup > Sound OfF,



Factory Reset

Method 1:

Click the [Menu button] > select "Lock Settings" > "Factory Reset" > "YES", and lick the [Enter button] to confirm



Method 2:

Lock the battery cover after sliding up, press and hold the Reset button > select "YES" to the front lock > click the [Enter button] to confirm.



Caution

Event	Description	
Lock instal l ation state	The deadbolt must be in the unlock position, and the paddle must be in 'horizontal' status.	
Emergency charging	When the product does not work due to low battery, the external mobile power supply can be connected for emergency use.	
Scramb l e passcode	Add any digit arbitrarily before and after the real passcode, with 16-digit scramble passcode function.	
Number of users	Up to 90 regular users can be set, and up to 10 administrators can be set.	
Number of keys	A maximum of 50 fingerprints can be entered (up to 10 fingerprints can be entered for a single user), and a maximum of 100 sets of passcodes can be entered.	
Duplicate passcode	The including and included relations of the passcode belong to passcode exists. For example, if the existing passcode is "147258", and the new passcode is a duplicate passcode if it is set to "14725836"; or the existing passcode is "14725836", and the new passcode is a duplicate passcode if it is set to "147258".	
Abnormal batteries detected. Please replace.	Please use new AA alkaline batteries. Do not use rechargeable batteries. Do not mix old and new batteries.	
Fai l ed Check deadbolt	Indicate that the lock is not properly closed or opened. Please check the loc status or battery level.	
Low Battery Replace	Level 1 low battery alarm, please replace the battery immediately.	
Low Bottery Inoperable	Level 2 low battery alarm; be sure to replace batteries. (Tips: When the power runs out, the lock can be open with a mechanical lock or by turning on the emergency power.)	
Passsage Mode	Passage mode is the ON mode.	

Documents / Resources



DESLOC D120L Plus Series Fingerprint Lever Lock with Built in Wi-Fi [pdf

] User Guide

D120L Plus Series Fingerprint Lever Lock with Built in Wi-Fi, D120L Plus Series, Fingerprint Lever Lock with Built in Wi-Fi, Lever Lock with Built in Wi-Fi, Lever Lock, Lock Wi-Fi, Lock with Built in Wi-Fi, Built in Wi-Fi, Wi-Fi, Lever Lock, Lock

References

- User Manual
- **■** DESLOC
- ▶ Built in Wi-Fi, D120L Plus Series, D120L Plus Series Fingerprint Lever Lock with Built in Wi-Fi, DESLOC, Fingerprint Lever Lock with Built in Wi-Fi, Lever Lock, Lever Lock with Built in Wi-Fi, Wi-Fi

Leave a comment

Your email address will not be published. Required fields are marked*

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.