




DESSALATOR Micro-Command Duo DC-AC Version User Guide

[Home](#) » [DESSALATOR](#) » DESSALATOR Micro-Command Duo DC-AC Version User Guide 

DESSALATOR Micro-Command Duo DC-AC Version User Guide



STANDBY



When your watermaker is in STANDBY, both BLUE LEDs are lit as an indication. Should these BLUE LEDs be perceived as disturbing, they can be turned off by briefly pressing one of the buttons. Another brief press on one of the buttons will turn the BLUE LEDs back on if the watermaker is still on standby

STARTING YOUR WATERMAKER :



To start the watermaker from STANDBY and run it on DC power, press and hold for about 2 seconds. To start the


watermaker from STANDBY and run it on AC power, press and hold for about 2 seconds. The BLUE LED of the button pressed will start to blink and the buzzer will acknowledge the operation with 2 'beeps'. Upon release of the button, the watermaker will start.



The RED, YELLOW and GREEN LEDs will show the same indication as on the control panel of the watermaker. The blinking speed of the YELLOW LED provides feedback of the water pressure in the system : faster blinking means higher pressure. The BLUE LED that is lit shows if the machine is running on DC or AC power. Once the production water is of good quality, the GREEN LED will light up.

Note : It is best practice to slowly build up water pressure inside the system in order to prolong the lifetime of your membranes. For that reason, should you plan to start your watermaker frequently using the Micro-Command we highly recommend to consider a machine with Automatic Pressure Regulation, like the DESSALATOR Navigator, Automatic or Pro-Auto series.

STOPPING YOUR WATERMAKER :

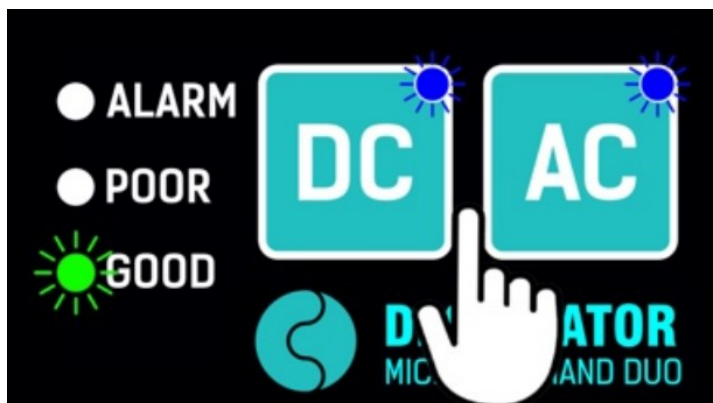



To STOP your watermaker normally : If you run on DC power press and hold the button for about 2 seconds. If you run on AC power press and hold the button for about 2 seconds. Upon release of the button, the watermaker will STOP and go to STANDBY .

Note

LEDs are on



LEDs are flashing



LEDs are off



STOPPING YOUR WATERMAKER WITH AN AUTOMATIC RINCE CYCLE :

Note : Whilst the automatic rinse function is present on all DESSALATOR watermakers, this function should only be initiated remotely on a watermaker equipped with Automatic Pressure Regulation.





To STOP your watermaker and terminate the process with an automatic rinse cycle : If you run on DC power press and hold the button for about 5 seconds until the YELLOW and GREEN LEDs are both lit and a long 'beep' is heard from the buzzer. If you run on AC power press and hold the button for about 5 seconds until the YELLOW and GREEN LEDs are both lit and a long 'beep' is heard from the buzzer. Upon release of the button, the watermaker will STOP and initiate an automatic rinse cycle before going to STANDBY.

CAUTION


Starting the watermaker from a distance using this Micro-Command, does not absolve you from convincing yourself that no unsafe situations can arise from this action. Always use common sense, make sure that operation conditions are met and that it is safe to start your watermaker to protect bystanders, yourself and the machinery. Read the manual of your watermaker and do NOT start the watermaker unless you fully understand its operation and can obey the procedures. In relation to the above, it is understood that we only recommend to start the watermaker using the Micro-Command on machines that have Automatic Pressure Regulation. For other machine series, the Micro-Command is intended as a tool used for monitoring and stopping the watermaker remotely. However, it is still possible to start these machines remotely using the Micro Command. But water pressure in the system might have to be adjusted by hand on the main front panel of your watermaker. Starting your watermaker with the pressure regulator pre-set to production pressure position might have a negative effect on the life time of your membranes. A fast blinking BLUE and RED LED indicates that the self-check of the Micro Command failed. Check the cable and the connections between watermaker and Micro-Command. Should the issue persist, please contact DESSALATOR or our distributor.

Contents

[1 Documents / Resources](#)

[2 Related Posts](#)

Documents / Resources

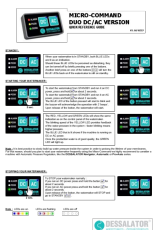

[DESSALATOR Micro-Command Duo DC-AC Version](#) [pdf] User Guide

Micro-Command Duo DC-AC Version, Command Duo DC-AC Version, Duo DC-AC Version, DC-AC Version, Version