



2A4RHDESVIEW Universal Wireless VR Remote and Gamepad User Manual

[Home](#) » [Desview](#) » 2A4RHDESVIEW Universal Wireless VR Remote and Gamepad User Manual 

Contents

- [1 2A4RHDESVIEW Universal Wireless VR Remote and Gamepad](#)
- [2 USER MANUAL](#)
- [3 Operating instructions](#)
- [4 Product Specification](#)
- [5 Fcc Rules](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



2A4RHDESVIEW Universal Wireless VR Remote and Gamepad







USER MANUAL

Many thanks for purchasing our product! This is a portable wireless controller, used for mobile phones, MID, TV box, smart TV, PC and so on. It can be used as a gamepad, VR remote, wireless mouse, music control, E-book page, PPT presentation etc, and support ios, Android, Windows and so on. Important Note: Products are subject

to change without any notice.

Operating instructions


- **Power On:** Press  the button until LED is on (about 2 seconds). (First put the batteries.)
- **Power Off:** Press  button until LED is off (about 5 seconds). Note: If no connection with the wireless device after 5 mins, system will power off automatically; after connecting with a wireless device, if no any operation, the system will power off after 30mins.
- **Pair and connect:** after power on, the LED indicator will flash, the device will enter into the wireless pair mode automatically to find the address and name of this device (Desview click then can connect. Pair and connect successfully, the LED indicator will turn off. Next power on, it can connect and pair the last wireless device.
- **Unpair:** Turn off state, press  (over 8 seconds), the LED will flash, then go to pair mode again, and can't connect last paired device.
- **Boot mode** (factory default Android mode): Android (-B mode): The handle is in the off state, press and hold the B button, and press the  button to turn on, and the wireless name Desview FxAndroid will be displayed. ios (-X mode): The handle is in the off state, press and hold the X button, and press and hold the Power button to turn on, and the wireless name Desview Fx-iOS-X will be displayed. 4. KEY Mode: Turn the switch on the side to KEY (there is "KEY" on the side).
- **Music/Video operation:** After connecting with wireless, open the mobile's music player (like Samsung's player), click play, then can use this handle to operate, like music play, pause, change songs and so on. There are some differences due to different software and system, like: Y button is for Mute in ios, but menu is android

Selfie operation:

For iOS mobile, press A key to shutter; for Android Samsung mobile, then press OK key to shutter, Volume key to adjust focus; for other Android mobile, please enter camera setup first, then Volume set volume key to shutter

Mouse operation(Android/ios13.0+ support mouse)

When the controller is in the music operation function, Press joystick can change to mouse function, ok is for mouse confirm key, is for mouse right key. Pressa gain, then can switch to music mode. iOS13.0+ mouse usage: After connecting the handle, enter the iOS device's [Settings]- [Accessibility]-[Touch]-[Assistive Touch] – [on], then you can use the mouse function. MENU function: press Y is MENU key function.

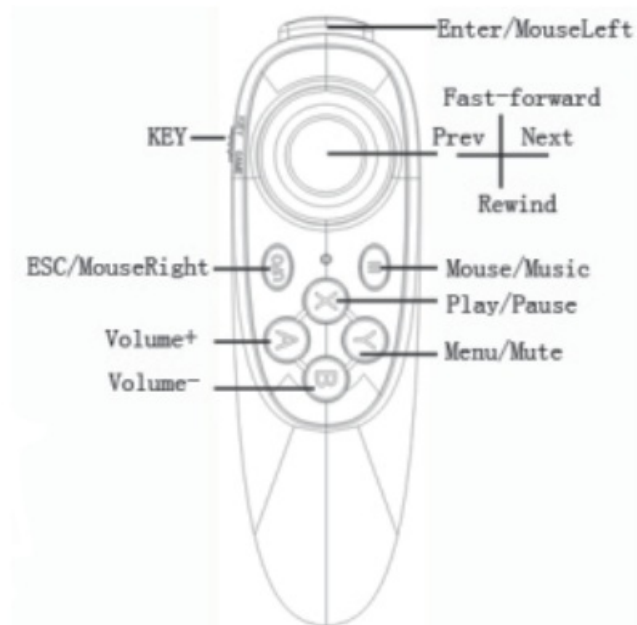


E-Book flip function:

In iReader: use Volume+/- to turn page up-down; In Kindle or PPT for iOS, use joystick in Game mode to turn the page.

VR (Game/Video) function:

Turn side switch to Game side (there is "GAME" on side). SELECT

1 VR (Game/Video) function on Android:

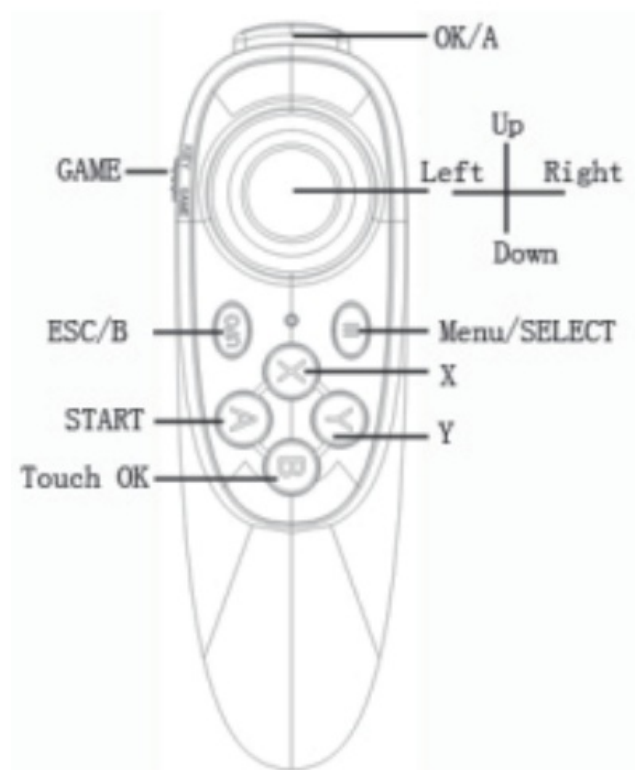

VR App Download use QR code software to scan QR code on the packing (or enter into the website: <http://www.migamepad.com/>) to enter into the MIGAMEPAD download center, then you can download the

MIGAMEPAD game application or third party's VR application.

VR game: from these applications download games, if supports the Gamepad, connect wireless can be directly used to operate the game (Pay attention to the switch on the side to GAME). These kinds of games such as: Zombie Hunter, Virtual Reality FPS, etc.. (Some games maybe need set to use Gamepad control in-game menu)

VR video operation: VR software generally: OK is play/ pause, DV is back, the joystick is fast forward and rewind operation.

Touch OK function keys: in the Samsung VR Oculus Gear or other VR games, the general need to touch the screen to click the cursor point, to start games etc. when using the handle, press the button B.

ios VR APP operation:

VR APP download: Enter into iOS APP store or scan the QR code on the packing (or enter into the website: <http://www.migamepad.com/>) to enter into the MIGAMEPAD download center, then you can download the MIGAMEPAD game application or third party's VR application. VR game: before entering the VR application, the soft keyboard input method, set the status of the English input, you can enter the English alphabet. Enter the address bar of the browser, there will be a keyboard input state(pull the side GAME/KEY to pop up the soft keyboard). Then connect the wireless, you can operate the gamepad. such as zombie kight or Zombie Warfare, Virtual Reality FPS, SCW VR Free etc iCade games, you can use the gamepad operation. Or enter the AppStore search "iCade", you will find support for the games of iCade type, download and install, Such as: Lite Brotherhood, TTR, Premium Akane, etc. (Some games maybe need set to use iCade control in game menu).

VR video operation: if you use Apple's official video software, you can also use the KEY mode of music control functions to control the video operation.if the software does not support, you can use the mouse to click and operate it.

Gamepad mode:

[Y+ Power button to turn on) Universal for Android/ios13.0+, supports MFi games, Such as "Asphalt8", "Minecraft" etc. press and hold for 3 seconds, after the light flashes to oft, you can switch the direction of the joystick, so that you can play the game horizontally with both hands .

Video control such as short video/live/Tik tok

(supports Android or iOS13.0+): In the mouse mode, press the [A+Y] button at the same time, and the indicator light will flash once, indicating that it enters the sliding screen mode. First use the joystick to place the mouse pointer in the middle of the phone screen, and then press [X]button to slide up, and [B] button to slide down.

Battery:

Our product is need two 1.5V batteries of type size AAA, when power is low, LED will flash, please change the batteries.

Notes:

- When an accident causes not boot or is unable to shut down, please use a needle to take out the batteries.
- If can't connect, please Press the [B+Y+ Power] button to Power On, and turn the joystick two turns (calibration) and then turn it off,the device to restore factory settings.
- When the pairing is abnormal or the wireless name cannot be found, turn off the handle, press and hold the Power button for more than 8 seconds, the light flashes and then release, cancel and ignore all wireless pairing on the device (including earphone bracelet, etc.), and re-pair.

Product Specification

Item	Specifications
Model	DesView
Size	116mmx45mmx13.5mm
Wireless Protocol	Wireless 4.2 compliant
Wireless Distance	2-10 Meters
OS	Android /iOS/PC
CPU	32Bit RISC-V Core
Battery	Type size alkaline AAA 1.5V x 2
Working time (Continuous game)	About 300 hours
Work current	0.5-3mA
Shutdown current	<9uA

Fcc Rules

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturers could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information: The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources



[Desview 2A4RHDESVIEW Universal Wireless VR Remote and Gamepad](#) [pdf] User Manual
DESVIEW, 2A4RH-DESVIEW, 2A4RHDESVIEW, 2A4RHDESVIEW Universal Wireless VR Remote and Gamepad, 2A4RHDESVIEW, Universal Wireless VR Remote and Gamepad