

Desview DT Series Teleprompter for Broadcasting User Manual

Home » Desview » Desview DT Series Teleprompter for Broadcasting User Manual

Contents

- 1 Desview DT Series Teleprompter for **Broadcasting**
- 2 Introduction
- **3 Product Description**
- 4 Package List
- **5 Exploded View**
- 6 Assembling Diagram
- 7 Computer Display Settings
- 8 USB Drive and Dongle
- **9 Software Operation**
- 10 Commonly used options for text adjustment
- 11 Menu Functions
- 12 Software languages
- 13 Countdown
- 14 Shortcut Keys
- **15 Remote Controller**
- **16 Warranty Card**
- 17 Documents / Resources
 - 17.1 References



Desview DT Series Teleprompter for Broadcasting



Introduction

Thank you for choosing our products!

- Before using the product for the first time, please read the manual and other materials carefully. You are advised to perform the operation, installation, and maintenance as specified herein.
- The manual has been carefully checked and proofread, but we cannot guarantee that it has no error or omission in the text description.
- The pictures herein are for reference only. In case any picture is inconsistent with the actual product, please be subject to the product.
- We reserve the right to improve or modify the manual and product. Any product adjustment will be made without further notice.
- Please keep the manual and warranty card properly.
- Within the maximum range allowed by laws, the company is not responsible for any direct, indirect, intentional, or unintentional damages or losses resulting from the installation or improper usage of the product.
- The manual is protected by legal copyrights. Without written permission, any duplication or spread of the manual in any form shall be prohibited.

Product Description

- The DT Series Teleprompter for Broadcasting applies to scenarios including TV station studios, interview rooms, and advertisement filming. Before use, you need to install the teleprompter to a tripod for fixing.
- Besides, you need to install and turn on a camcorder, a teleprompting screen, and a spectroscope and open the prompter software to help the user see the manuscript on the spectroscope.

Package List

5/N	Name	Qty	Unit
01	HD-coated Spectroscope Combobox	1	Set
02	Lens Shade	1	Piece
03	Teleprompter	1	Set
04	Display Plate Support	1	Set
05	Teleprompting Display	1	Set
06	Self-inspection Display (Optional)	1	Set
07	Timer (Optional)	1	Set
08	HDMI Cable	1	Piece
09	VGA Cable Optional	1	Piece
10	USB Extension Cable	1	Piece
11	Dongle	1	Piece
12	Bluetooth Adapter	1	Piece
13	Remote Controller	1	Piece
14	Foot Switch	1	Piece
15	Aluminum Box	1	Piece

Exploded View



Assembling Diagram

The diagram below is the overall See assembling diagram. the text below for detailed steps.




1. Installing tripod/castors

• Take out and unfold the tripod and castors; install the tripod to the castors and tighten it with screws. If the castors are not purchased, you can directly unfold and install the tripod, place it on smooth ground, and tighten it with screws.



2. Installing display plate

• Use the screws on the tripod quick mounting plate to fix the tripod and the teleprompting display plate.

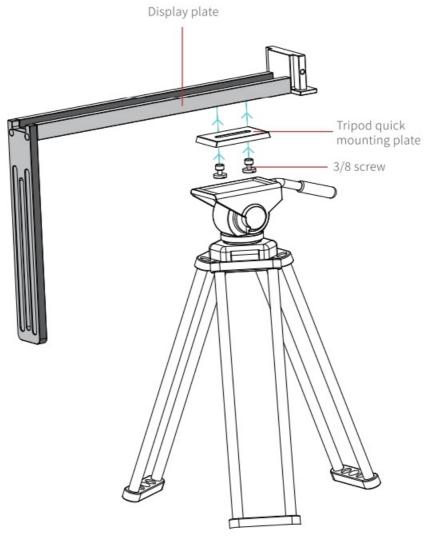

3. Installing teleprompter

• Insert the slide block plate into the slot and fix it with thumb screws.




4. Installing spectroscope combo box

• Insert the spectroscope combobox into the plate slot and fix it with thumb screws.




5. Installing lens shade

- Open the lens shade and zip it up; install the lens shade to the spectroscope combobox.
- **Note:** Both the combobox and the lens shade are equipped with hook & loop fasteners. When installing the lens shade, press the hook & loop fasteners to make them fully secure.

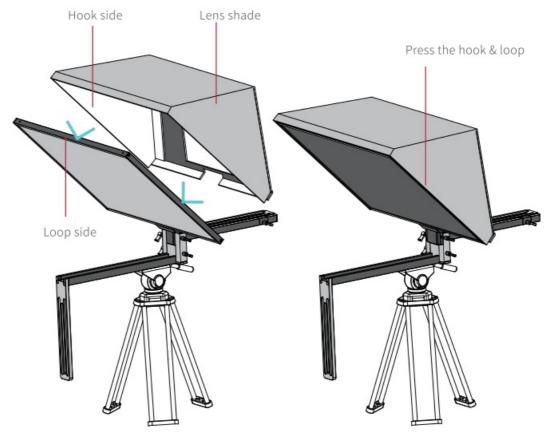


6. Installing teleprompting/self-inspection display


• First of all, fix the display plate to the display by using four M4 screws; do the same for any display with two screens.

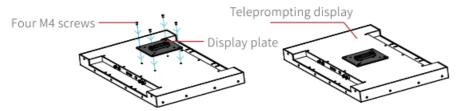

• At the bottom, fix the teleprompting display to the plate by using thumb screws.

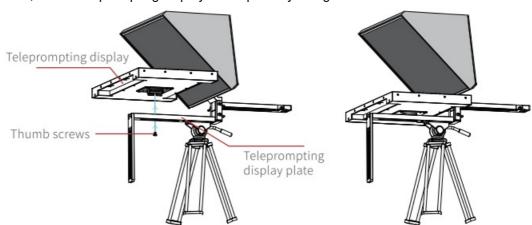


• Likewise, fix the self-inspection display to the plate by using thumb screws.

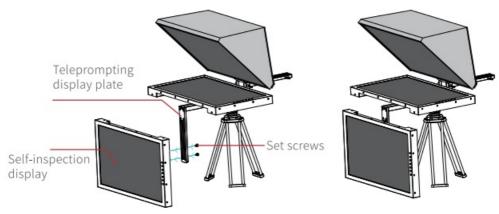


7. Installing tripod head & camcorder

• Take out the slide block in the tripod head; install the height-increasing tripod head; reinstall the tripod head to the plate after the tripod head height is adjusted by tightening the screws.

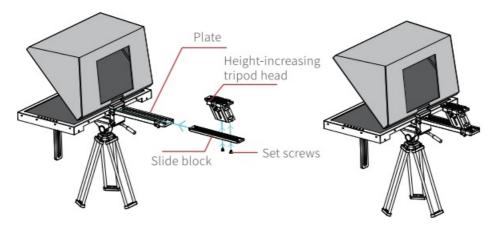


• Fix the quick mounting plate at the bottom of the camcorder, and install the camcorder to the top of the height-increasing tripod head.

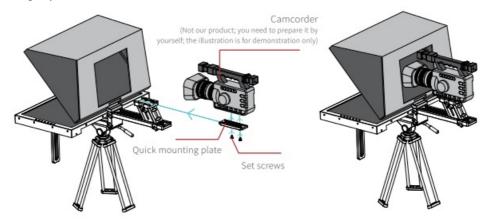


8. Installing timer

• Insert the timer into the plate slot and fix it by using thumb screws.

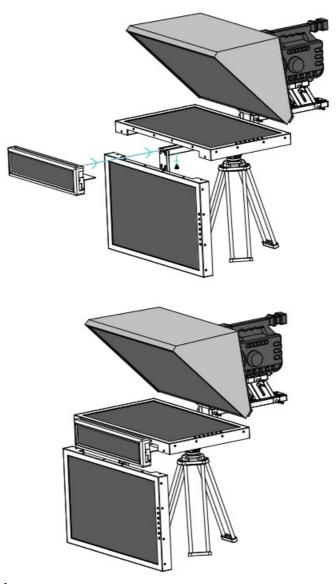

9. Teleprompter installation is done


• Adjust the camcorder's focal length and the height-increasing tripod head to make the camcorder a suitable location for filming.

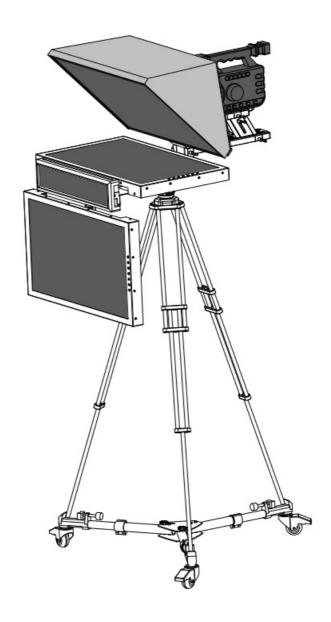

Computer Display Settings

Before using the teleprompter software, make sure your computer is connected to the teleprompter and has a normal display. Besides, choose the mode "duplicate these displays" for the multi-display settings.

- Windows10 settings: Make a right click on your computer desktop
- Display settings → Multi-display settings
- Duplicate these display applications (Confirm)

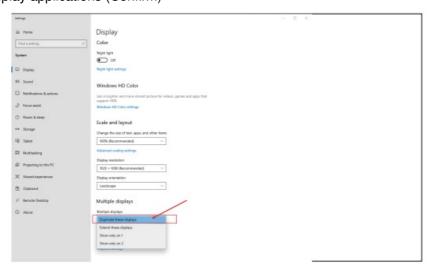

USB Drive and Dongle

• Note: The software must be used with a dongle and USB drive.







USB drive

Installing Software

• Find the installation package "Desview.exe" in the USB drive.




- 1. Double click Desview.exe
- 2. Click "Next
- 3. Click "Next







- 4. Click "Install"
- 5. Setup is finished
- 6. Insert the dongle for inspection

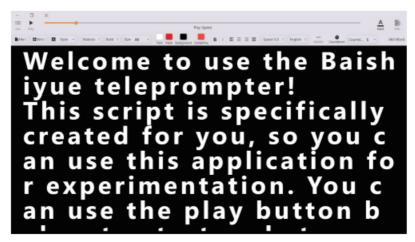


Teleprompter software interface the shortcut key "Space bar" is used to start/stop the manuscript.


Software Operation

Adding a manuscript for broadcasting

- The format of the manuscript can be Word or TXT.
- · Manuscript amendment and saving are supported.

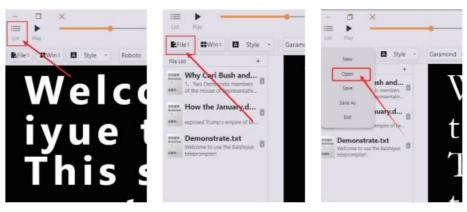

- 1. Open the "List" in the upper left
- 2. Choose "File
- 3. Open a manuscript of Word or TXT

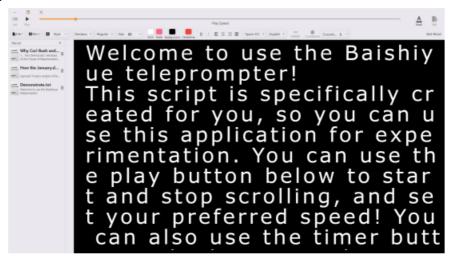

• Interface of a successful manuscript operation

Commonly used options for text adjustment

For diverse scenarios, you may adjust the display options for the most appropriate reading experience.



- Center
- · Row height settings
- Font size




- · Font selection
- · Font color settings
- · Manuscript countdown setting

Display mirror image settings

• **Note:** Depending on the modes "Duplicate these displays" and "Expand these displays", the mirror flipping is different. The mode "Duplicate these displays" is recommended.



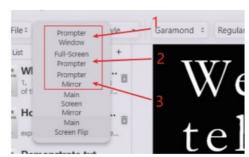

1. Duplicate these displays:


• After opening the software, the teleprompter makes a one-touch mirror image flip.

2. Expand these displays:

 Click the "Window" menu, select the teleprompter window>teleprompter full screen>teleprompter mirror (or use the display key for mirror image)

Menu Functions

You may distinguish these function points according to the letters.

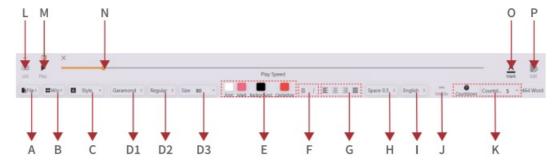


A. File

You may create a new file and open a local file in Word, TXT format





- New: You may edit the file as you wish
- · Editing interface

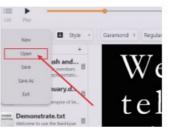




- Open: Select a file in Word, TXT format
- · Page display

B. Window

• You may adjust the manuscript display through the "Window" menu.



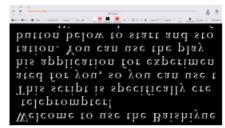

- · Main screen mirror image
- · Mirror image display



Welcome to use the Baishiyue teleprompter!
This script is specifically created for you, so you can use this application for experimentation. You can use the play button below to start and sto


· Main screen mirror image

C. Font style

- Three styles: Default, bold, and italic
- · Mirror image display





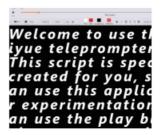

- Default
- Bold
- Italic

1. D1. Font selection

· Multiple fonts can be selected.

2. D2. Font style

- Bold or slender styles are adjustable
- 3. D3. Font size

· Font size can be customized








- · Font selection
- · Adjust boldly or slender styles
- · Select font size

E. Color settings


The colors of the manuscript, background, and centerline can be customized.



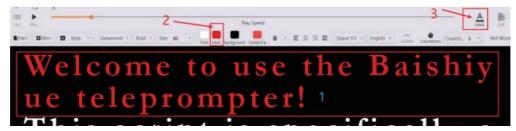

Label color:

- 1. Select the words to be labeled;
- 2. Select a color;
- 3. Click the label to confirm the change; click the label again to undo the operation.

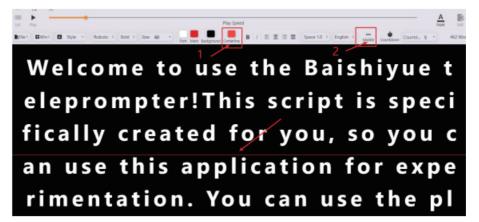


Centerline color:

1. Click the centerline to open the function

2. Select a proposed color to change the color and click it again to undo the operation

F. Font bolding/italicizing

The words can be bold and italicized rapidly.

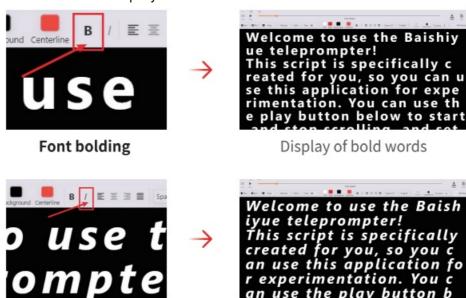


Display of italic words

G. Alignment of paragraphs

You may adjust the words as per your reading habits.

Font italicizing

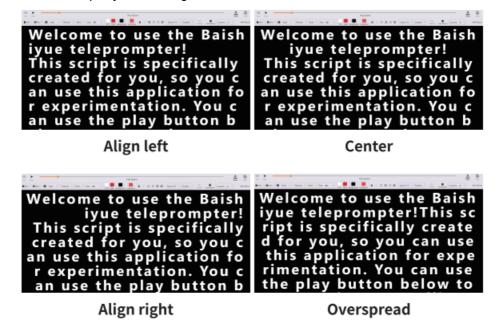

H. Line spacing

• The line spacing for the manuscripts is based on the font size.



Font size: 80 Spacing: 1.0

Font size: 140 Spacing: 1.5

- Note: For the same spacing, the larger the font size is, the fewer words displayed will be.
- The font size and line spacing can be adjusted as per the broadcaster's eyesight.


Software languages

• The software supports nine languages, namely Chinese, English, Spanish, Italian, French, Korean, Japanese, Russian, and German.



Centerline

• The centerline is used to distinguish the upper and lower parts to facilitate your reading.

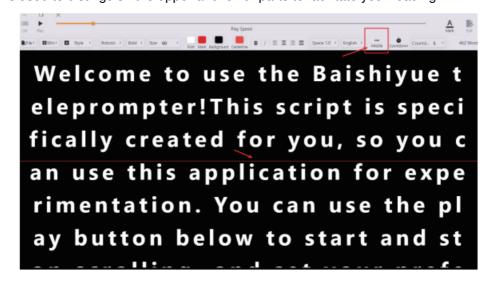

Interface display

Countdown

• The countdown is set for manuscripts; the maximum countdown is 60 seconds.



Welcome to use the Baishiyue teleprompter! This script is specifically created for you, so you can use this application for experimentation. You can use the play button below to start and stop scrolling, and set your prefe

Play

• The shortcut key "space bar" is used to start/stop manuscripts.

Play speed

• The playing speed is adjustable.



Play key

Play speed settings

Labeling

• The manuscript can be labeled with one or more colors to highlight key contents.



Label display

Label:

- · Select the words to be labeled.
- · Click the label color.
- Light up the label icon done.

Edit

• In the edit mode, you can modify and save the manuscript contents, row height, color, and font size.

 


Edit icon at upper right


Edit interface

Shortcut Keys

• You can use keyboard shortcut keys for easy operation.



Remote Controller

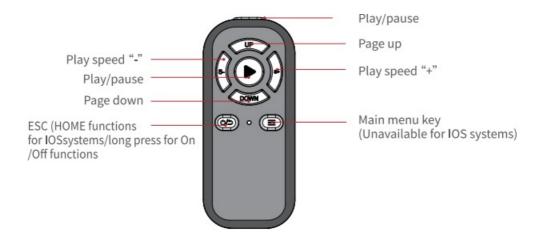


Note: Because of its compatibility, the remote controller functions vary for some phones or tablet computers.

Windows system Bluetooth connection steps

Take Win10 as an example, the remote controller can be easily connected with several steps.



 - 1. Open computer settings
- 2. Select a device
- 3. Add and open Bluetooth







- 4. Turn on the remote controller
- 5. Add the "Desview" device
- 6. The connection is done

 
Mac system Bluetooth connection steps

The remote controller can be easily connected with several steps.





- 1. Open computer settings
- 2. Select Bluetooth
- 3. Enable Bluetooth functions







- 4. Turn on the remote controller
- 5. Add the "Desview" device
- 6. The connection is done

Warranty Card

•	$NA \sim \sim$	del	•			
	IVIOU					

- Barcode:
- Phone number of distributor:
- Address of distributor:
- 1st repair record:
- Repair date:
- Failure:
- Completion time:
- Repaired by:
- Quality controller:

•	2nd repair record:	
•	Repair date:	
•	Failure:———	
•	Cause:———	
•	Completion time:—	_
•	Repaired by:	
•	Quality controller:	

• The page is the fundamental document for warranty services. Please read it carefully and keep it properly.

Documents / Resources

• Failure description:--



Desview DT Series Teleprompter for Broadcasting [pdf] User Manual DT Series Teleprompter for Broadcasting, DT Series, Teleprompter for Broadcasting, Broadca

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.