



Dgl Group KARAOKE Wireless Mic & Built-in Speaker User Manual

[Home](#) » [DGL GROUP](#) » Dgl Group KARAOKE Wireless Mic & Built-in Speaker User Manual 

Contents

- 1 Dgl Group KARAOKE Wireless Mic & Built-in SpeakerPACKAGE CONTENTS
- 2 KEY FEATURES
- 3 SAFETY instructions
 - 3.1 DIAGRAM
- 4 CHARGING THE KARAOKE WIRELESS MIC/SPEAKER
- 5 PROMPT NOTIFICATION
- 6 OPERATING THE KARAOKE WIRELESS MIC/SPEAKER
- 7 SPECIFICATIONS
- 8 CARE AND MAINTENANCE
- 9 FCC STATEMENT
 - 9.1 RF WARNING STATEMENT
- 10 WARRANTY INFORMATION
 - 10.1 Asserting a warranty claim
- 11 Documents / Resources
- 12 Related Posts



Dgl Group KARAOKE Wireless Mic & Built-in Speaker



PACKAGE CONTENTS

- Karaoke Wireless Mic/Speaker Micro
- USB Charging Cable
- Operation Manual

KEY FEATURES


- Compatible with Bluetooth-enabled devices
- Built-in rechargeable battery Built-in speaker.
- Volume and echo control

SAFETY instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water, and any other liquids.

- Do not operate the unit if it has been exposed to water moisture or any other liquids to prevent electric shock, explosion, and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by the manufacturer.
- Improper repairs may place the user at serious risk.
- Do not puncture or harm the exterior surface of the product in any way.
- Keep the unit free from dust, lint, etc.
- Do not use this unit for anything other than its intended use or purpose.
- Doing so may damage the device.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries, battery packs, or batteries to be installed to excessive heat, such as direct sunlight, or open flame.

DIAGRAM

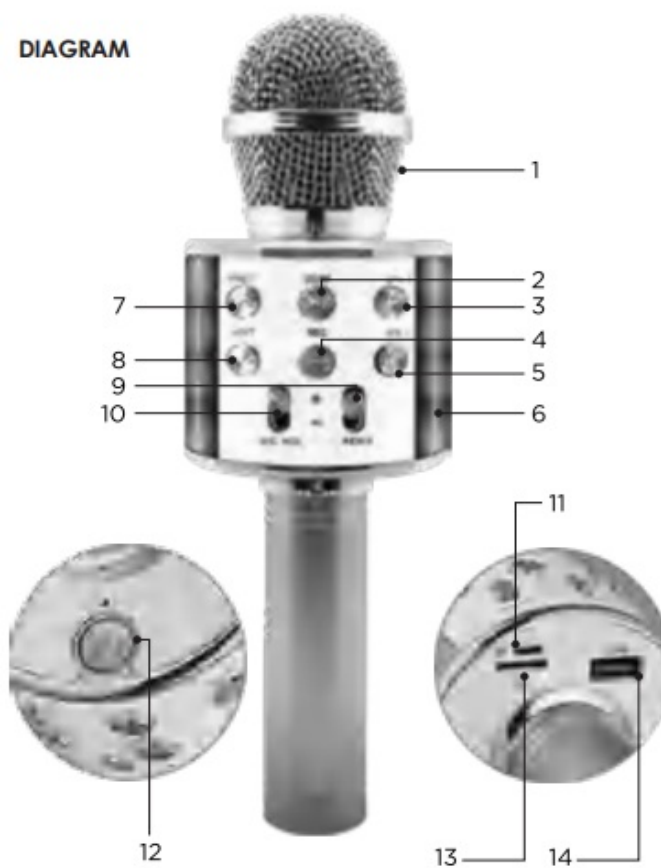

1. Microphone
2. Play/Pause
3. Volume Up
4. Funny Voice
5. Volume Down
6. Built-in Speaker
7. Previous Track
8. Next Track
9. Echo Switch

10. Microphone Volume Switch
11. Micro USB Charge Port
12. On/Off / Mode Button
13. Micro TF Card Port
14. USB Media Port

CHARGING THE KARAOKE WIRELESS MIC/SPEAKER

The Karaoke Wireless Mic/Speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only Use the Supplied charge cable to charge the speaker. A full charge of the battery takes around 3 hours. When the battery is fully charged, the LED indicator will turn off. Disconnect the Karaoke Wireless Mic/Speaker at this point. The Karaoke Wireless Mic/Speaker will then be ready for use. When the battery is low, the LED indicator will flash red and emit three tones every 20 seconds. When this occurs, please recharge the karaoke mic. When using your Karaoke Wireless Mic/Speaker with an iPhone, the top right corner will indicate your karaoke mic's battery life.

PROMPT NOTIFICATION

Chime Sound – Indicates device is powered on. Low Chime Sound – Indicates device is turning off. Beep Sound Indicates devices have been successfully paired.

1. Ensure both Karaoke Wireless Mic/Speakers are turned off before pairing
2. Turn on both devices and double-click the mode button on both. When you hear the beep sound the True Wireless has been successfully paired.
3. Place the Karaoke Wireless Mic/Speaker and the Bluetooth device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 3 feet apart.
4. Ensure Bluetooth is enabled on your device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device
5. Once you have activated Bluetooth on your device, select the Karaoke Wireless Mic/Speaker "SA-2PKR" from the list of available Bluetooth devices.
6. If required, enter the PIN code '0000 and confirm the entry.

Note: If pairing is unsuccessful turn off the Karaoke Wireless Mic/Speaker first and repeat following the steps above. Once you have paired the Karaoke Wireless Mic/Speaker with a device, the Karaoke Wireless Mic/Speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to repeat any previously connected devices.

OPERATING THE KARAOKE WIRELESS MIC/SPEAKER

Playing music wirelessly

Once the Karaoke Wireless Mic/Speaker is paired to your device, you can stream music wirelessly to the built-in speaker. Select the track you wish to listen to on your device to play through the speaker. Should you encounter any problems while streaming, please refer to your device's user manual.

Adjust Voice Echo

Push the echo switch up or down to adjust the voice echo.

Adjust Microphone Voice Volume

Push the volume switch up or down to adjust voice volume. Funny Voice Press & Hold: Switch to any 4 funny voice sounds Press Once: Switch to accompaniment mode.

SPECIFICATIONS

- Bluetooth™ Version: V2.1+EDR
- Operating Distance: Up to 16.4ft (5m)
- Pick Up: Capacitive
- Speaker Output: 5W
- Frequency Range: 150Hz-18kHz
- Sensitivity: 80db- 115db
- Play Time: Up to 4 hours
- Battery Type:
- Battery Capacity Charging Voltage:
- Charging Time: Lithium-Ion
- Charging Interface: 1200 mAh

CARE AND MAINTENANCE

- Do not expose the unit to excessive heat or humidity to avoid damage to the product's internal circuitry.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the unit in fire as they may explode or combust.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL** **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF WARNING STATEMENT

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction

WARRANTY INFORMATION

The condition of this warranty and our responsibilities under this warranty are as follows:

The supplier's warranty is non-transferable. And this warranty is limited to the original purchaser only.

- You must be able to prove the date of the original purchase of the unit with a dated receipt.
- The warranty is not applicable if the product has been subject to modification or repair by an unauthorized third party.
- The responsibility of supplier's products shall be limited to the repair or replacement of the product as its sole discretion.
- Specifically exempt from any warranty are limited-life consumable components subject to normal wear and tear such as batteries, decorates and other accessories.
- A Supplier will not take any responsibility if the failure of the unit has resulted from an accident, abuse, misuse, or any unauthorized repair, modification or disassembling.
- Modification and repair of the unit should be done by authorized and qualified service personnel at, Center or returned to the manufacturer.
- This warranty gives you specific legal rights, and you may also have other rights which vary under local laws. physical abuse, improper installation,

The following conditions comprise the requirements and Scope of our warranty conditions and do not affect our legal and contractual warranty obligations. We offer a warranty on our products in accordance with the following conditions:

1. SARINATM products are covered by a 3-month warranty.
2. We will resolve damages or defects on HYPEM products free of charge within 3 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 3 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.
3. The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the fitness of the product for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions. 3) The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. SARINA M reserves the right to exchange the product for a replacement product of equal value if the product sent in cannot be repaired within a reasonable time or at a reasonable cost. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become Our property.
4. The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our product.
5. Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.
6. Any other further claims are excluded, especially those for replacement due to damage caused to the outside

of the product, provided there is no obligatory legal liability. We, therefore, accept no liability for accidental, indirect or other consequential damage of any kind, which leads to Usage restrictions, data loss, and loss of earnings or interruption to business.

Asserting a warranty claim

1. To make use of the warranty service for hardware issues, you must contact the SARINATM Service Center by email at Support@dglusa.com
2. SARINATM will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and will be asked to send the product to SARIINADM

IMPORTANT: SARINATM will only accept parcels that have an RMA number. Please observe the following when sending the product:

1. Send the product suitably packaged with damage and insurance paid. Do not enclose any accessories with the product (cables, chargers, manuals, etc.) unless the SARINATM Service Center specifies otherwise.
2. Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
3. You must enclose a copy of the sales slip as proof of purchase.
4. Once SARINATM has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with damage and insurance paid.

Service outside of warranty SURINAM can refuse any covered by the warranty. service claim made that is not FHYPEM agrees to provide a service outside the warranty, the CUsomer will be invoiced for all repair and transport costs. SARINATM will not accept any packages that have not first been approved by SURINAM by means of an RMA (Return Material Authorization).

Contact uS with questions at: Support@dglusa.com

Documents / Resources

	Dgl Group KARAOKE Wireless Mic & Built-in Speaker [pdf] User Manual KARAOKE Wireless Mic, Mic, Mic Built-in Speaker
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------