

DIALN[®]
G10 Android
Tablet Bundle
with Rugged Case



DIALN G10 Android Tablet Bundle with Rugged Case User Manual

[Home](#) » [DIALN](#) » DIALN G10 Android Tablet Bundle with Rugged Case User Manual 

Contents

- [1 DIALN G10 Android Tablet Bundle with Rugged Case](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Overview](#)
- [6 Getting started](#)
- [7 Application](#)
- [8 General Information](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

DIALN[®]

DIALN G10 Android Tablet Bundle with Rugged Case



Product Information

Specifications:

- Activation/Lock Button
- Volume Shifting Buttons
- Headset Connector
- Reset Button
- Back and Front Selfie Cameras
- Charging Port Type-C
- SD Card Slot
- Speaker
- Mic

Product Usage Instructions

Getting Started

Set Up

Use a card pin to stick the sim tray. Insert or remove the Nano SIM card with the gold contacts facing down. Do not attempt to insert a non-Nano SIM card as it may damage the tablet's SIM card slot.

Powering On the Tablet

Press and hold the Power key for a few seconds to turn on the tablet. Follow the on-screen instructions to set up the tablet for the first time.

Powering Off the Tablet

While the tablet is on, press and hold the Power key until the pop-up menu appears, then select Power off to confirm.

Home Screen

You can organize applications, shortcuts, folders, and widgets on your Home screen for quick access. Swipe up to view additional screens.

Application – Camera

Taking a Picture

To take a picture, open the camera app, aim at the subject, adjust settings, then touch the screen or press the volume key to capture.

Recording a Video

To record a video, open the camera app, select Video mode, start recording by touching the screen, stop by

touching again. You can pause and save screenshots during recording.

FAQ

- **Q: Can I use a non-Nano SIM card in the tablet?**

- A: No, using a non-Nano SIM card may damage the tablet's SIM card slot. Only use Nano SIM cards.


- **Q: How do I access the notification panel?**

- A: Touch and drag down from the status bar to open the notification panel.

About this Manual

Thank you for choosing DIALN Smart Tablet. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Overview

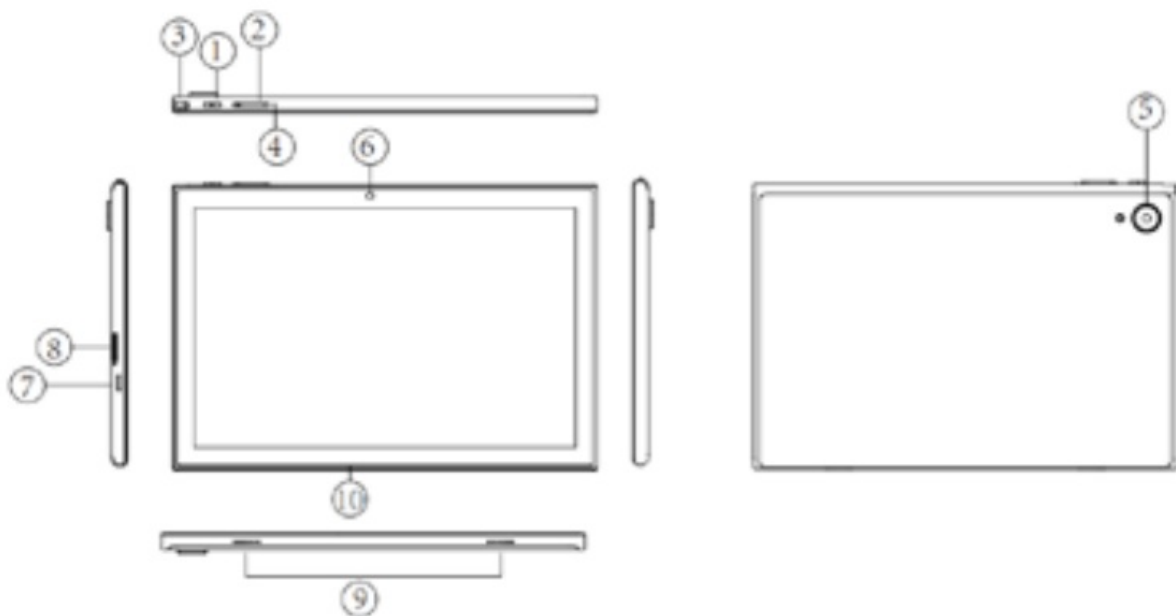

1	Activation/lock button	6	Front camera
2	Volume shifting buttons	7	Charging port Type-C
3	Headset Connector	8	SD Card slot
4	Reset	9	Speaker
5	Back selfie camera	10	Mic

As shown in above tablet figures: major components and interfaces are highlighted, there are 2 hardware keys:

Power key for Tablet to power on/off; Volume keys for volume up and down respectively.

Getting started

Set up

Use card pin to stick sim tray Inserting or removing the Nano SIM card



Following the instructions illustrated in above picture, you can insert the Nano SIM card into the SIM tray with gold contacts facing down, or remove the Nano SIM card from the sim tray. This tablet supports Nano SIM card only. Do not attempt to insert a non-Nano SIM card as it may damage the tablet's SIM card slot

Powering on the tablet

Press and hold the Power key for a few seconds to power on your tablet.

Set up your tablet for the first time

The first time you power on the tablet, you should set it up following the below steps:

1. Select the tablet's language, and then press "Start".
2. Connect to Wi-Fi, then enter password.
3. Set up Gmail and Services by following the prompts, view Terms and select "I agree".
4. Set up the "Protect your tablet feature". This feature prevents others from using your tablet without your permission.
5. Next, the Google Services page will be displayed. Choose the services you wish to use and select "Accept" from the options at the bottom of your screen.

Note: Even without a SIM card installed, your tablet will still power on and you will be able to connect to a Wi-Fi network and use some of the tablet features.

Powering off your tablet

While the tablet is on, press and hold the Power key until the pop-up menu appears, select Power off to confirm

Home screen

You can organize all of the items (applications, shortcuts, folders and widgets) that you use most frequently to your Home screen for quick access. Touch the Home key to get back to the Home screen. Swipe the Home screen upward to view additional screens



Status bar
Status/Notification
Touch and drag down to
open the notification

Search bar
Touch text box to enter
text

Touch an icon to open an
application, folder, etc.

Favorite tray applications
Touch to open an application.
Touch and hold to move an
application.

Application

1. Camera



Touch the camera icon on Home screen, you can use the camera APP to take photos and videos, and then share with people, further you can select a photo as your wallpaper.

2. Taking a picture



To take a picture, touch the camera icon on Home screen to open camera APP, aim the lens at the subject, make necessary adjustments, then touch or press volume key to take a photo.

3. Recording a video



To record a video, touch the camera icon on Home screen, touch Video. Then touch to start




recording and touch again to stop recording. You can pause the recording by clicking the icon in the



upper right corner, click the icon to save screenshot when recording, the video is saved automatically when ending the recording.






4. Photo gallery

Touch the Photos  icon on Home screen, you can view, share, edit, delete your pictures/videos saved on your tablet or memory card.


5. Photo

When viewing photos, you can view photos in a slideshow, view photo details. You also have options to share photos, use photo as contact photos or as wallpapers, etc.








6. Video

Similarly, when viewing video items, select a desired video, touch to play the video. Further, touch  the video, you can select  to share or  select to delete or  to edit the video, you can have more choices by touch the menu , then pick an option, Loop video on, View in, Delete from device, Slideshow, or Help & feedback.


7. Clock

Touch clock  on Home screen, you can set alarm, clock, timer, stopwatch, etc.


8. Sound recording








Touch Sound Recorder  on home screen to open the APP, touch  to start recording, touch  to pause recording. Once done, touch to save the recording. Other options can be found by touching  to display Recording list. You can replay any item on the list by touching it. Long press any item on the list to bring up further options for you to choose:  to share,  to delete, and  for more options (such as Rename, set as ringtone, etc.)

9. FM Radio



Plug in headphone firstly. Touch FM radio  on home screen and click "On", you can listen to music and news on FM radio.

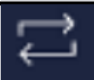10. Playing music

Touch YTMusic  on Home screen to play music or recorded files. Note some files which may not support the format or exceed the limit may not play properly. Select a music file and you can control playback with following icons.

Icons	Functions
	Touch to pause playback
	Touch to resume playback
	Touch to skip backward, or scan backward
	Touch to skip forward, or scan forward
	Touch to change the repeat mode
	Touch to activate shuffle mode
	Touch to show the current playlist

Calendar

Touch Calendar  on Home screen, you can use the calendar to add events and manage events. To delete or edit an event you have added, touch the event to bring up options  to edit, "Save" to save the event, to select "Delete" or "Duplicate" and confirm when prompted.

General Information

Website

As our valuable customers, you can find our company and products information at our Website www.dialn.tech, plus frequently asked questions on this tablet. You are welcome to contact us via email for any question and comment you may have.

Protection against theft



Your mobile tablet is identified by an IMEI (mobile tablet serial number) shown on the packaging label and in the product memory. Please keep this IMEI number in a safe place. It may be requested by the police or your operator if your mobile tablet is stolen.

Disclaimer

There may be certain differences between the user manual description and the operation of mobile tablet, depending on the software release of your mobile tablet or specific operator services.

Google, Android, Google Play, YouTube and other marks are trademarks of Google LLC.

Documents / Resources

<div><div><div>G10</div></div><div><div>User Manual</div></div></div>	<div>DIALN G10 Android Tablet Bundle with Rugged Case [pdf] User Manual</div> <div>G10 Android Tablet Bundle with Rugged Case, G10, Android Tablet Bundle with Rugged Case, Tablet Bundle with Rugged Case, Bundle with Rugged Case, Rugged Case, Case</div>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.