

**DIALN**  
X10 Pulse  
Tablet



# DIALN X10 Pulse Tablet User Manual

[Home](#) » [DIALN](#) » DIALN X10 Pulse Tablet User Manual 

**Contents**


- [1 DIALN X10 Pulse Tablet](#)
- [2 Overview](#)
- [3 Getting started](#)
- [4 Home screen](#)
- [5 Application](#)
- [6 Video](#)
- [7 Clock](#)
- [8 FM Radio](#)
- [9 General Information](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)



## DIALN X10 Pulse Tablet



### Overview

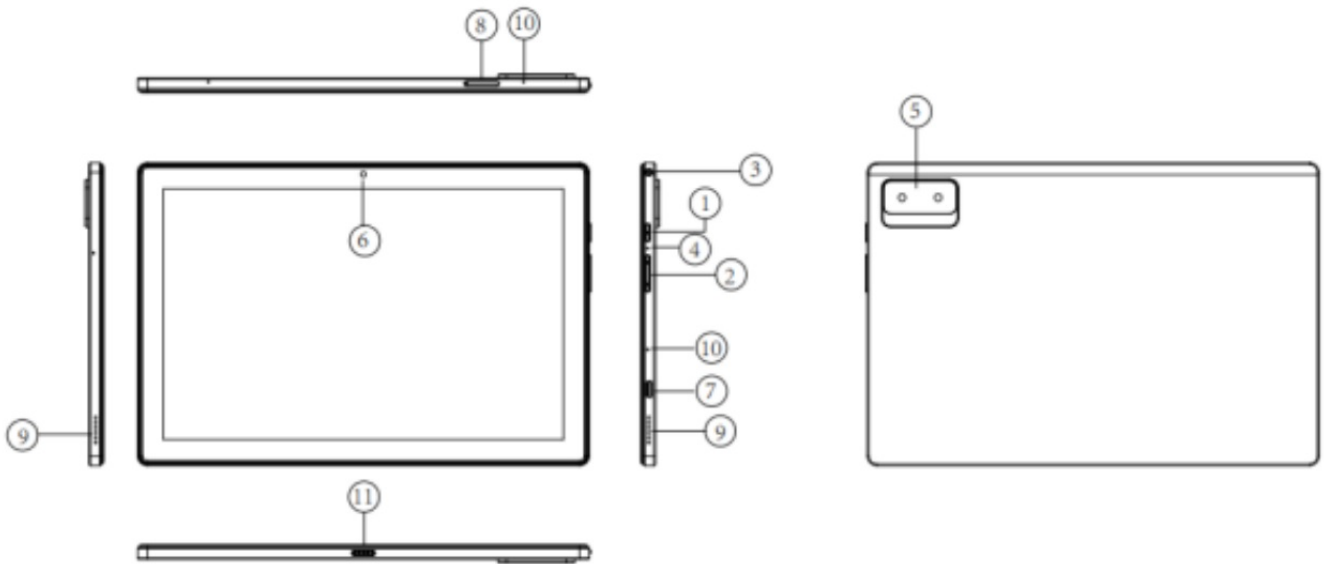

1. Activation/lock button
2. Volume shifting buttons
3. Headset Connector
4. Reset
5. Back selfie camera
6. Front Camera
7. Charging port Type-C
8. SD Card slot
9. Speaker
10. Mic
11. DC docking

As shown in the above tablet figures: major components and interfaces are highlighted, there are 2 hardware keys: The power key for the Tablet to power on/off and the volume keys for volume up and down respectively.

## Getting started

### Set up

- Use a card pin to stick the SIM tray Inserting or remove the Nano SIM card



- Following the instructions illustrated in the above picture, you can insert the Nano SIM card into the SIM tray with gold contacts facing down, or remove the Nano SIM card from the SIM tray.
- This tablet supports Nano SIM cards only.
- Do not attempt to insert a non-Nano SIM card as it may damage the tablet's SIM card slot.

### **Powering on the tablet**

Press and hold the Power key for a few seconds to power on your tablet.

### **Set up your tablet for the first time.e**

The first time you power on the tablet, you should set it up following the below steps:

1. Select the tablet's language, and then press "Start".
2. Connect to Wi-Fi, then enter your password.
3. Set up Gmail and Services by following the prompts, viewing Terms, and selecting "I agree".
4. Set up the "Protect your tablet feature". This feature prevents others from using your tablet without your permission.
5. Next, the Google Services page will be displayed. Choose the services you wish to use and select "Accept" from the options at the bottom of your screen.

**Note:** Even without a SIM card installed, your tablet will still power on and you will be able to connect to a Wi-Fi network and use some of the tablet features.

### **Powering off your tablet**

While the tablet is on, press and hold the Power key until the pop-up menu appears, and select Power off to confirm.

### **Home screen**

You can organize all of the items (applications, shortcuts, folders, and widgets) that you use most frequently on your Home screen for quick access. Touch the Home key to get back to the Home screen. Swipe the Home screen

upward to view additional screens.



Status bar  
Status/Notification  
Touch and drag down to  
open the notification

Status bar  
Status/Notification  
Touch and drag down  
to open the notification

- To use an icon to open an application, folder, etc. Favorite tray applications
- Touch to open an application.
- Touch and hold to move an application.

## Application

### Camera



Touch the camera icon on the Home screen, you can use the camera APP to take photos and videos, and then share them with people, further, you can select a photo as your wallpaper.

### Taking a picture



To take a picture, touch the camera icon on the Home screen to open the camera APP, aim the lens at the subject, make necessary adjustments, and then touch the shutter button or press the volume key to take a photo.



### Recording a video



To record a video, touch the camera icon on the Home screen, and touch the Video. Then touch




to start recording and touch again to stop recording. You can pause the recording by clicking the



upper right corner, and clicking the icon to save screenshots when recording, the video is saved automatically when ending the recording.








## Photogallery

Touch the Photos  icon on the Home screen, you can view, share, edit, and delete your pictures/videos saved on your tablet or memory card.


### Photo

When viewing photos, you can view photos in a slideshow, and view photo details. You also have options to share photos, use photos as contact photos or as wallpapers, etc.









### Video

Similarly, when viewing video items, select a desired video, and touch  it to play the video. Further, when touching the video, you can select  to share or select  to delete or to  edit the video, you can have more choices by touching the menu , then picking an option, Loop video on, View in, Delete from the device, Slideshow, or Help & feedback.


### Clock

Touch the clock  on the Home screen, you can set the alarm, clock, timer, stopwatch, etc.


### Sound recording








Touch Sound Recorder  on the home screen to open the APP, touch  to start recording, and touch  to pause recording. Once done, touch  to save the recording. Other options can be found by touching to display the Recording list. You can replay any item on the list  by touching it. Long press any item on the list to bring up further options for you to choose:  to share, to  delete, and  for more options (such as Rename, Select, etc.)

### FM Radio


Plug in headphones first. Touch the FM radio  on the home screen and click "On", you can listen to music and news on FM radio.


### Playing music

Touch YTMusic  on Home screen to play music or recorded files. Note some files that may not support the format or exceed the limit may not play properly. Select a music file and you can control playback with the following icons.

Icons	Functions
	Touch to pause playback
	Touch to resume playback
	Touch to skip backward, or scan backward
	Touch to skip forward, or scan forward
	Touch to change the repeat mode
	Touch to activate shuffle mode
	Touch to show the current playlist

## Calendar

Touch Calendar  on the Home screen, you can use the calendar to add events and manage events. To

delete or edit an event you have added, touch the event to bring up options  to edit, “Save” to save the event, select “Delete” or “Duplicate” and confirm when prompted.

## General Information

### Website

As our valuable customers, you can find our company product information on our Website [www.dialn.tech](http://www.dialn.tech), plus frequently asked questions on this tablet. You are welcome to contact us via email for any questions or comments you may have.

### Protection against theft




Your mobile tablet is identified by an IMEI (mobile tablet serial number) shown on the packaging label and in the product memory. Please keep this IMEI number in a safe place. It may be requested by the police or your operator if your mobile tablet is stolen.

### Disclaimer

There may be certain differences between the user manual description and the operation of the Obilele tablet, depending on the software release of your mobile tablet or specific operator services.

- Google, Android, Google Play, YouTube, and other marks are trademarks of Google LLC.

## Documents / Resources

<div><p>X10 Pulse</p><div></div><p>User Manual</p></div>	<p><a href="#">DIALN X10 Pulse Tablet</a> [pdf] User Manual</p> <p>X10 Pulse, X10 Pulse Tablet, Tablet</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.