



## dialog UM-WI-042 DA16200 Provisioning the Mobile App for Android/iOS User Manual

[Home](#) » [dialog](#) » dialog UM-WI-042 DA16200 Provisioning the Mobile App for Android/iOS User Manual 

dialog UM-WI-042 DA16200 Provisioning the Mobile App for Android/iOS User Manual



## Contents

- [1 Terms and Definitions](#)
- [2 Overview](#)
- [3 System Requirement](#)
- [4 Sequence Diagram for Wi-Fi Provisioning](#)
- [5 How to Test Provisioning](#)
  - [5.1 Test Provisioning on Android Phone](#)
  - [5.2 Test Provisioning on iPhone](#)
- [6 Test AWS IoT on Mobile Phone](#)
- [7 Revision History](#)
- [8 Status Definitions](#)
- [9 Disclaimer](#)
- [10 RoHS Compliance](#)
- [11 Contacting Dialog Semiconductor](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)

## Terms and Definitions

- TCP:  
Transmission Control Protocol
- TLS:  
Transport Layer Security
- AP:  
Access Point
- IDE:  
Integrated Development Environment
- SDK:  
Software Development Kit
- AWS:  
Amazon Web Service
- IoT:  
Internet of Things

## Overview

This document describes how to configure the DA16200 Wi-Fi profile information using the Dialog's Wi-Fi provisioning mobile app for Android/iOS.

## System Requirement

### DA16200

Supported SDK Version: 2.3.4.1 or higher

### Android


- Android OS Version: 5.0 (Lollipop) and higher
- IDE: Android Studio 4.1.2
- Compile SDK Version: 30
- Language: Java
- Gradle Version: 4.0.0

## iOS

- Deployment Version: iOS 12.0 and higher
- IDE: Xcode 12.4
- Swift Language Version: Swift 5

## Sequence Diagram for Wi-Fi Provisioning

 Figure 2: DA16200 Factory Reset or Switch Button

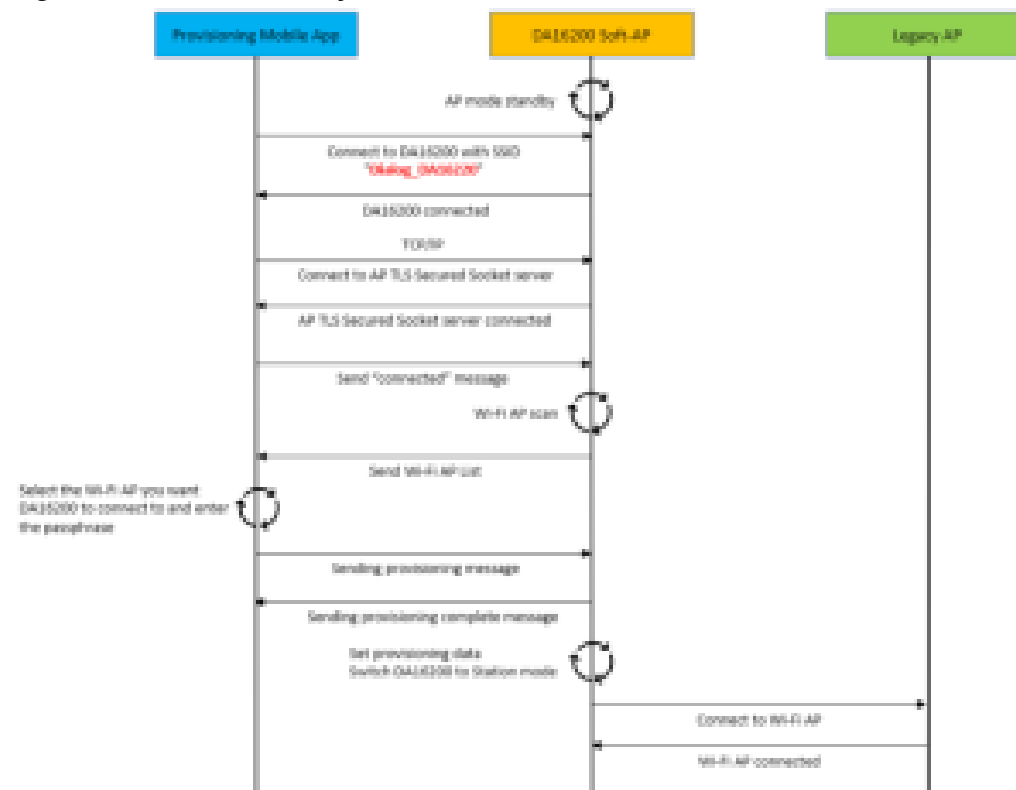


## How to Test Provisioning

Use the Factory Reset or Switch button (depends on the device option) to switch the DA16200 to AP Mode.

Figure 2: DA16200 Factory Reset or Switch Button


Press for 5 seconds for a factory reset.

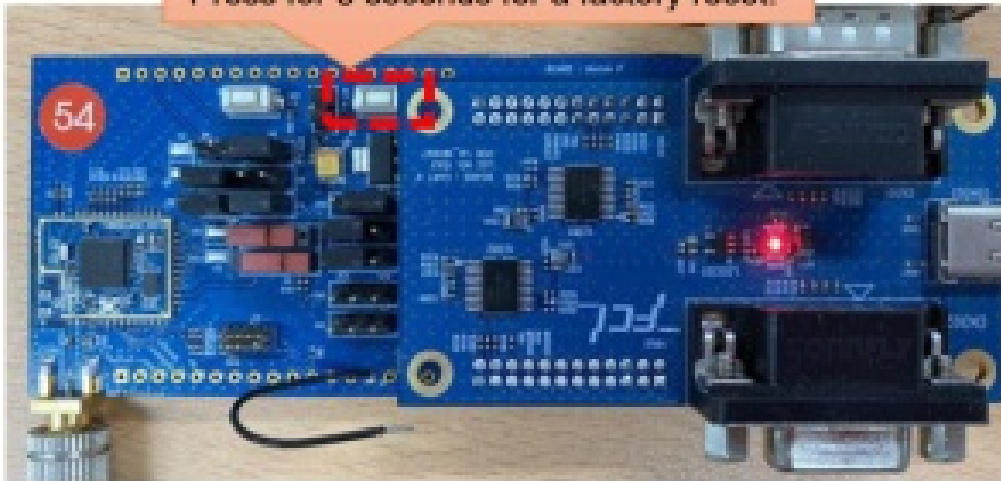


### Test Provisioning on Android Phone

Start the Dialog Provisioning Tool for Android and find the DA16200, and then do the following steps on your Android device:

 1. Click the Start DA16200-based button.
2. Click the I'm ready button.
3. DA16200 with "Dialog\_DA16200" SSID automatically connects to app.
4. When the DA16200 and the phone are connected, click the NEXT button.

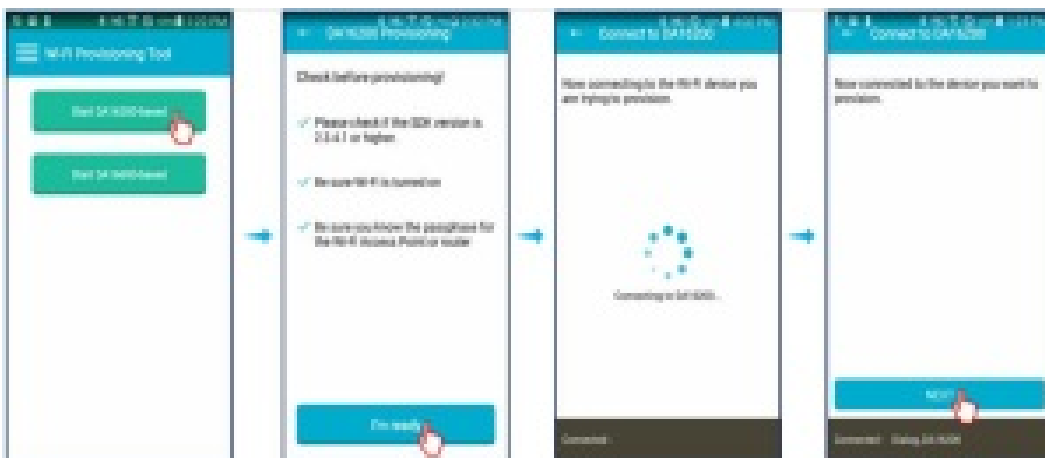

 
5. When the DA16200 and the phone socket are connected, the app receives Wi-Fi network information from the DA16200, and a list appears.
  6. Click the name of the Wi-Fi network you want to connect to in the list.
  7. Enter the password and click the Go! button.
- Wi-Fi provisioning is completed.

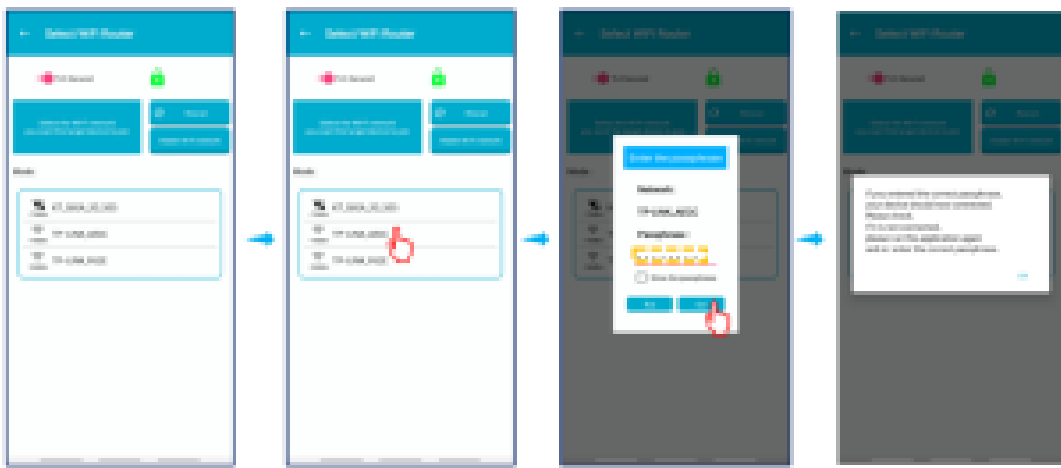

## Provisioning to Hidden Wi-Fi Network

You can connect the DA16200 to a hidden Wi-Fi network by directly entering the SSID and password of Wi-Fi network.

 1. After the app is connected to the DA16200 Wi-Fi, click the Hidden Wi-Fi network button.
2. Enter the SSID and the password of Wi-Fi network, select security option if needed, and then click the OK button.

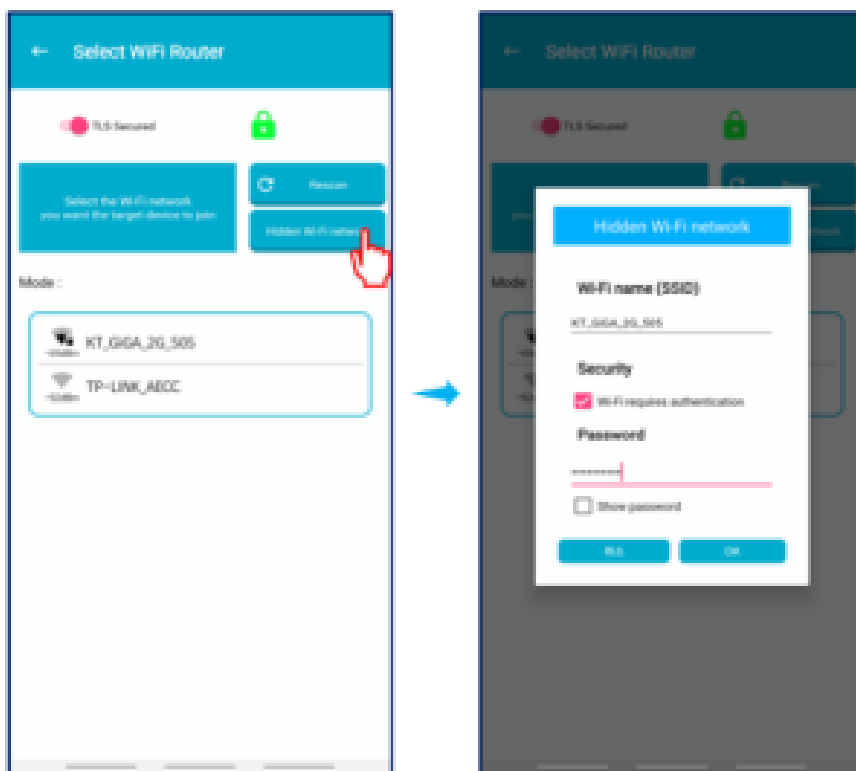

## Socket Switching

You can switch between TLS secured socket and unsecured socket.


A green lock icon is displayed when a secure connection is established; a red lock is displayed if the connection is not secure.



## Test Provisioning on iPhone


Start the Dialog Provisioning Tool for iOS and find the DA16200, and then do the following steps on your iPhone:

 1. Click the Start DA16200-based button.
2. Click the I'm ready button.
3. Click the Join button to connect to the DA16200 with "Dialog\_DA16200" SSID.
4. When the DA16200 and the phone are connected, click the NEXT button.

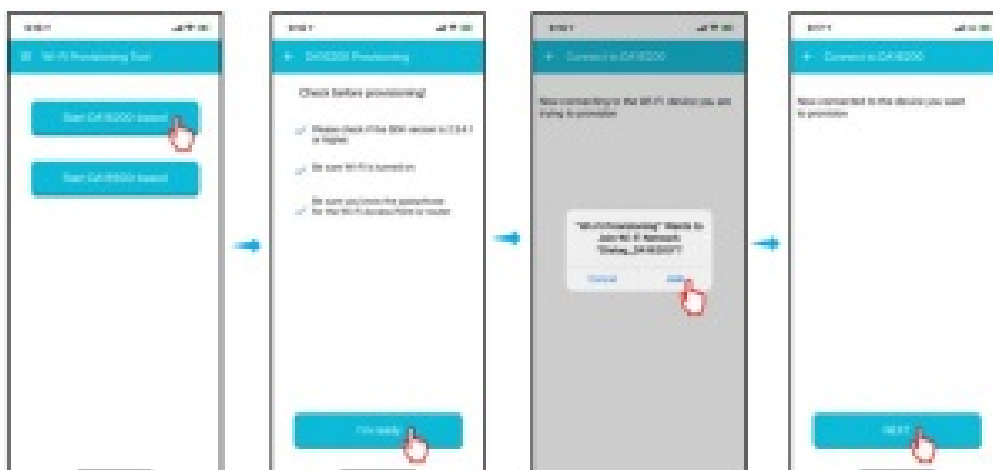

- When the DA16200 and the phone socket are connected, the app receives Wi-Fi network information from the DA16200, and a list appears.
- Click the name of the Wi-Fi network you want to connect to in the list.
- Enter the password, and then click the Go! button.

 
Wi-Fi provisioning is completed.

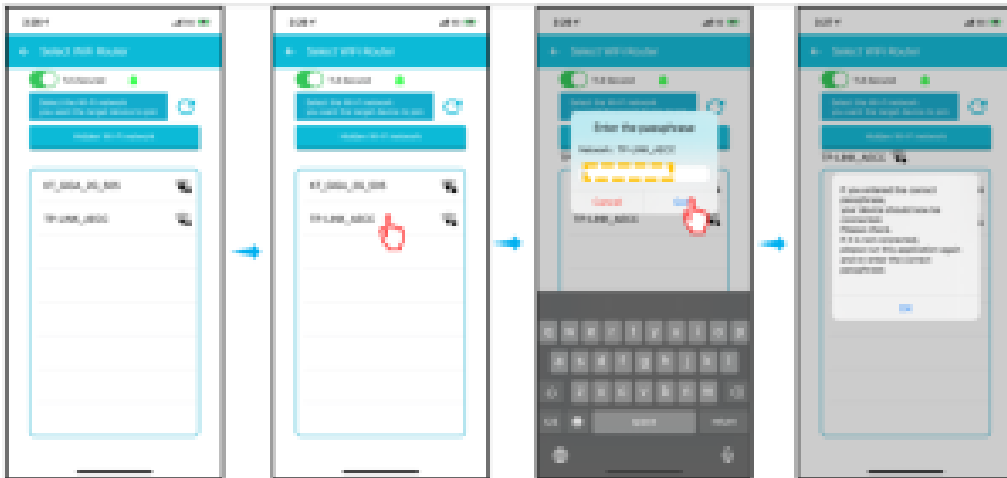

## Provisioning to Hidden Wi-Fi Network

You can connect the DA16200 to a hidden Wi-Fi network by directly entering the SSID and password of Wi-Fi network.

 - After the app is connected to the DA16200 Wi-Fi, click the Hidden Wi-Fi network button.
- Enter the SSID and the password of Wi-Fi network, select security option if needed, and then click the OK button.

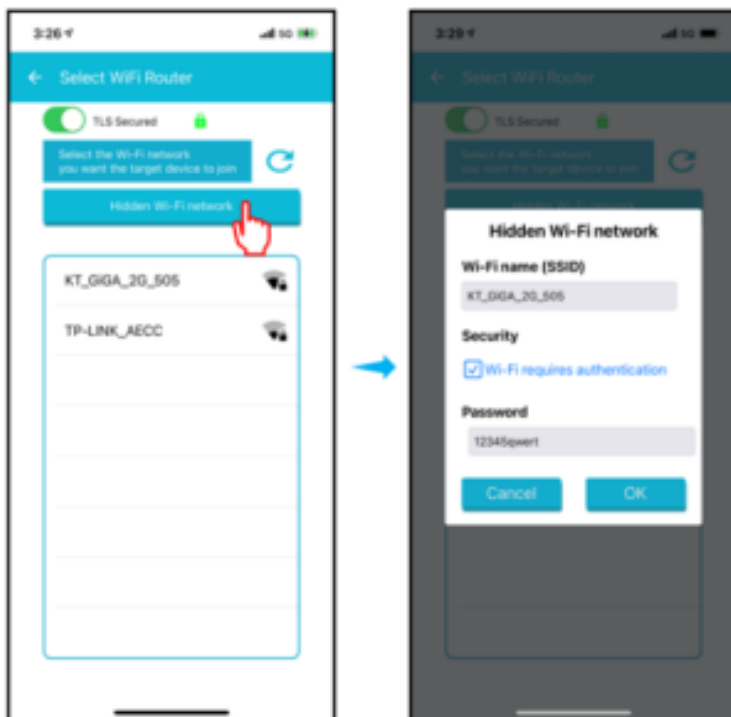

## Socket Switching

You can switch between TLS secured socket and unsecured socket.

A green lock icon is displayed when a secure connection is established; a red lock is displayed if the connection is not secure.



**Test AWS IoT on Mobile Phone**

If the DA16200 is provisioned using an SDK that supports AWS IoT, you can test AWS IoT with “Thing” pre-registered by Dialog Semiconductor.

**NOTE**

Contact Dialog Semiconductor to be assigned a test “Thing” name.

The AWS IoT application works in an environment as shown in **Figure 3**.

**Figure 3: Architecture of AWS for IoT**






Do the following steps on your mobile phone:

1. Click the Menu icon.
2. Click the AWS IoT button.
3. Click the lock icon to open the closed door.
4. The door status changes to open.



If provisioning is not performed in the SDK that supports AWS IoT or if the SDK that does not support AWS IoT is used, a pop-up window appears as shown in **Figure 4**.

 **Figure 4: Does not Support AWS IoT**

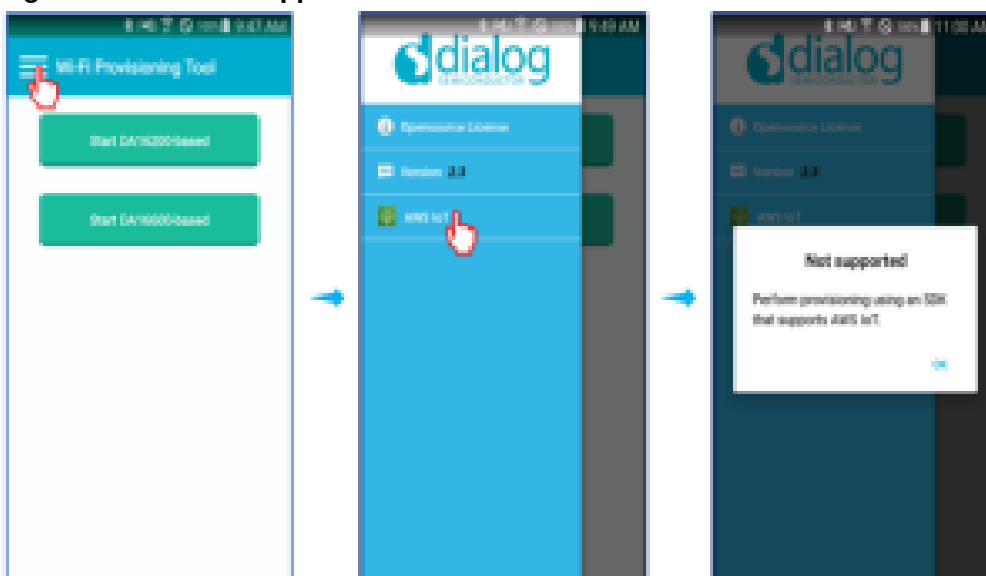

## Revision History

Revision	Date	Description
1.5	14-Jul-2021	Added provisioning to hidden Wi-Fi network.
1.4	13-May-2021	Added AWS IoT application on DA16200.
1.3	21-Apr-2021	Added text to show supported SDK version.
1.2	05-Apr-2021	Changed UI according to operation scenario change.
1.1	24-Mar-2021	Changed UI text.
1.0	05-Mar-2021	First Release.

## Status Definitions

Status	Definition
DRAFT	The content of this document is under review and subject to formal approval, which may result in modifications or additions.
APPROVED or unmarked	The content of this document has been approved for publication.

## Disclaimer

Unless otherwise agreed in writing, the Dialog Semiconductor products (and any associated software) referred to in this document are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of a Dialog Semiconductor product (or associated software) can reasonably be expected to result in personal injury, death or severe property or environmental damage. Dialog Semiconductor and its suppliers accept no liability for inclusion and/or use of Dialog Semiconductor products (and any associated software) in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Information in this document is believed to be accurate and reliable. However, Dialog Semiconductor does not give any representations or warranties, express or implied, as to the accuracy or completeness of such information. Dialog Semiconductor furthermore takes no responsibility whatsoever for the content in this document if provided by any information source outside of Dialog Semiconductor.

Dialog Semiconductor reserves the right to change without notice the information published in this document, including, without limitation, the specification and the design of the related semiconductor products, software and applications. Notwithstanding the foregoing, for any automotive grade version of the device, Dialog Semiconductor reserves the right to change the information published in this document, including, without

limitation, the specification and the design of the related semiconductor products, software and applications, in accordance with its standard automotive change notification process.

Applications, software, and semiconductor products described in this document are for illustrative purposes only. Dialog Semiconductor makes no representation or warranty that such applications, software and semiconductor products will be suitable for the specified use without further testing or modification. Unless otherwise agreed in writing, such testing or modification is the sole responsibility of the customer and Dialog Semiconductor excludes all liability in this respect.

Nothing in this document may be construed as a license for customer to use the Dialog Semiconductor products, software and applications referred to in this document. Such license must be separately sought by customer with Dialog Semiconductor.

All use of Dialog Semiconductor products, software and applications referred to in this document is subject to Dialog Semiconductor's [Standard Terms and Conditions of Sale](http://www.dialogsemiconductor.com), available on the company website ([www.dialogsemiconductor.com](http://www.dialogsemiconductor.com)) unless otherwise stated.

Dialog, Dialog Semiconductor and the Dialog logo are trademarks of Dialog Semiconductor Plc or its subsidiaries. All other product or service names and marks are the property of their respective owners.

© 2021 Dialog Semiconductor. All rights reserved.

## **RoHS Compliance**

Dialog Semiconductor's suppliers certify that its products are in compliance with the requirements of Directive 2011/65/EU of the European Parliament on the restriction of the use of certain hazardous substances in electrical and electronic equipment. RoHS certificates from our suppliers are available on request.

## **Contacting Dialog Semiconductor**

### **United Kingdom (Headquarters)**

Dialog Semiconductor (UK) LTD  
Phone: +44 1793 757700

### **Germany**

Dialog Semiconductor GmbH  
Phone: +49 7021 805-0

### **The Netherlands**

Dialog Semiconductor B.V.  
Phone: +31 73 640 8822

### **North America**

Dialog Semiconductor Inc.  
Phone: +1 408 845 8500

### **Japan**

Dialog Semiconductor K. K.  
Phone: +81 3 5769 5100

### **Taiwan**

Dialog Semiconductor Taiwan  
Phone: +886 281 786 222

## Hong Kong

Dialog Semiconductor Hong Kong

Phone: +852 2607 4271

## Korea

Dialog Semiconductor Korea

Phone: +82 2 3469 8200

## China (Shenzhen)

Dialog Semiconductor China

Phone: +86 755 2981 3669

## China (Shanghai)

Dialog Semiconductor China

Phone: +86 21 5424 9058

## Email:


[enquiry@diasemi.com](mailto:enquiry@diasemi.com)

## Web site:

[www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)



## Documents / Resources

	<p><a href="#">dialog UM-WI-042 DA16200 Provisioning the Mobile App for Android/iOS</a> [pdf] User Manual</p> <p>UM-WI-042, DA16200 Provisioning the Mobile App for Android, DA16200 Provisioning the Mobile App for iOS</p>
---	--