



[Home](#) » [Dickson](#) » **DICKSON PW4 4 Pressure Chart Recorder User Manual** 



DICKSON

Contents [[hide](#)]

- [1 DICKSON PW4 4 Pressure Chart Recorder](#)
- [2 GETTING STARTED](#)
- [3 BATTERY REPLACEMENT](#)
- [4 CHART NOT ROTATING](#)
- [5 FACTORY SERVICE & RETURNS](#)
- [6 CHART REPLACEMENT](#)
- [7 PEN REPLACEMENT](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

DICKSON PW4 4 Pressure Chart Recorder



GETTING STARTED

IMPORTANT

Dickson Chart Recorder accuracy specifications are only valid with the use of authentic Dickson brand charts and pens. The specifications for chart printing, die cutting and paper absorption rates, and the N complementary bleed rate specifications of pens are critical factors in determining system accuracy.

TO BEGIN OPERATION

This recorder comes with 1 AA battery installed.

1. When installing the recorder, (1/4" NPT pressure connection) always tighten the fitting instead of twisting the instrument case. Use a 5/8" wrench. Dickson recommends wrapping the pressure fitting with pipe tape before installing to prevent leaks
2. 24hr or 7 day rotation can be selected by removing the rubber plug on the back of the recorder. Note: PW479 can be set to 24hr only
3. Place a new chart on the recorder
4. Set time by inserting a coin into chart hub and turning clockwise until the current hour is referenced to the time index clip (time index clip is directly to the right and below the pen tip)
5. Remove protective pen cap

6. Turn the recorder on. The on/off switch is located inside the door on the dial plate.

Note: Model PW460 does NOT include an on/off switch

BATTERY REPLACEMENT

The battery compartment is located on the dial plate on the front of the unit. The recorder uses a standard AA battery for up to two years of battery life

CHART NOT ROTATING

1. Make sure the chart paper is not ripped in the center around the Chart Hub
2. Make sure the chart is not hung up or restricted
3. Make sure there is a good battery being used and it is installed correctly

PEN ADJUST


The pen location may be adjusted using the pen adjust screw on the face of the unit

FACTORY SERVICE & RETURNS

Contact Customer Service at 630.543.3747 for a Return Authorization Number (RA) before returning any instrument. Please have the model and serial numbers and PO ready before calling.

Note: Dickson shall not be liable for consequential or incidental damages resulting from failure or malfunction of its products.


CHART REPLACEMENT

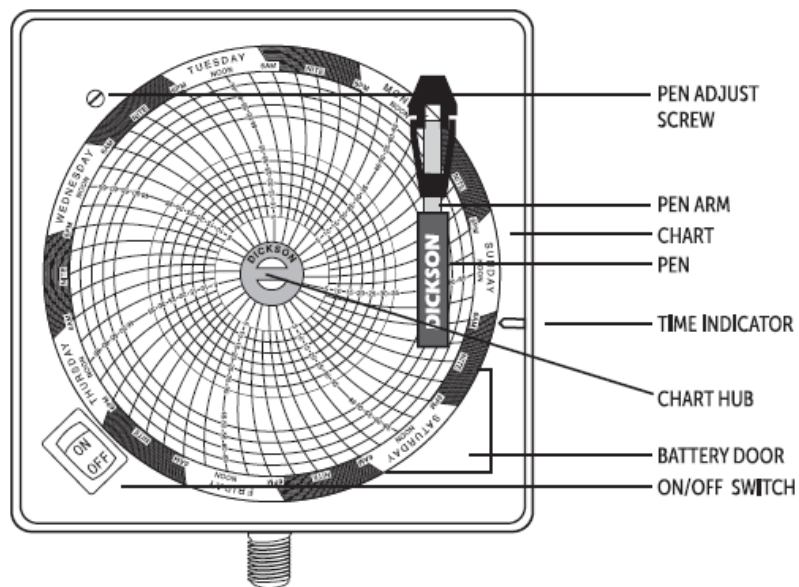


1. Flip pen arm up and away from chart. Slip your finger under the chart and lift the chart off the chart hub
2. Put one new chart on the recorder
3. Make sure the center of the chart, between chart hub, is not torn
4. Set the time by inserting a coin in chart hub and turning clockwise until the current hour is referenced by the time indicator
5. Flip pen arm down

PEN REPLACEMENT

TOP SIDE OF PEN

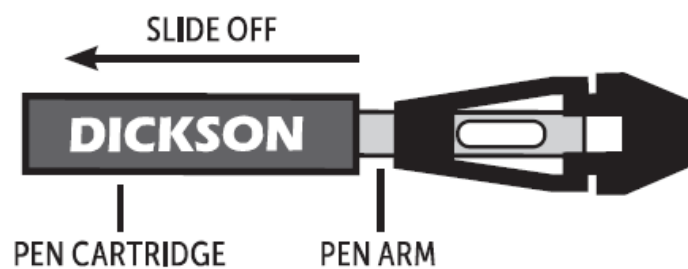

BOTTOM SIDE OF PEN

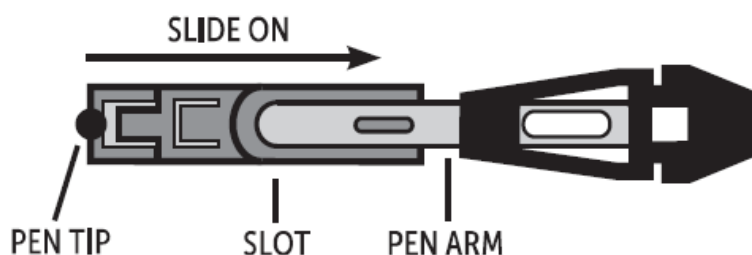


1. Flip pen arm up
2. Slide used pen cartridge off pen arm
3. Slide new pen cartridge on pen arm
4. Make sure end of pen arm comes into contact with pen tip
5. Remove pen cap
6. Flip pen arm down

Need additional support?

- Web: Dickson Data.com
- Telephone: 630.543.3747
- Email: support@dicksondata.com
- 930 S. Westwood Avenue
- Addison. IL 60101

Documents / Resources

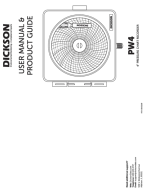	DICKSON PW4 4 Pressure Chart Recorder [pdf] User Manual PW4, PW474, PW470, PW479, PW476, PW4 4 Pressure Chart Recorder, PW4 4, Pressure Chart Recorder, Chart Recorder, Recorder
---	---

References

- [User Manual](#)

■ Dickson

◆ Chart Recorder, Dickson, Pressure Chart Recorder, PW4, PW4 4, PW4 4 Pressure Chart Recorder, PW470, PW474, PW476, PW479, Recorder

—Previous Post

[DICKSON ET855 Universal Input Chart Recorder User Guide](#)

Next Post—

[DICKSON KT8PO Remote Sensing Temperature Recorder User Guide](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

[Manuals+](#), [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.