




DIESE ELECTRONIC 2201H Relay Remote Control Switch User Manual

[Home](#) » [DIESE ELECTRONIC](#) » DIESE ELECTRONIC 2201H Relay Remote Control Switch User Manual 

DIESEL-ELECTRIC



DieseRC
PRODUCT MANUAL
RELAY REMOTE CONTROL SWITCH

Contents


- 1 **PRODUCT INFORMATION**
- 2 **PRODUCT DETAIL**
- 3 **WIRING DIAGRAM**
- 4 **Operating Mode**
- 5 **Troubleshooting**
- 6 **CUSTOMER SERVICE**
- 7 **Documents / Resources**
 - 7.1 **References**

PRODUCT INFORMATION

TYPE—2201H

Technical Data	
Working voltage	AC 85V~250V
Input/output voltage	AC 85V~250V
Output Type	Active output
Quiescent Current	<5mA
Max current	30A
RF frequency	433MHz
Working temperature	-30~+80
Receiving Sensitivity	>97dbm
Amount of storage remote controls	20 pieces
Support encoding	1527 Learning code 2262 fixed code
RF Operating mode	ASK superheterodyne wireless reception
Receiving range	Open space is more than 50 meters
Remote operating mode	Momentary Mode /Toggle Mode /Latched Mode




PRODUCT DETAIL

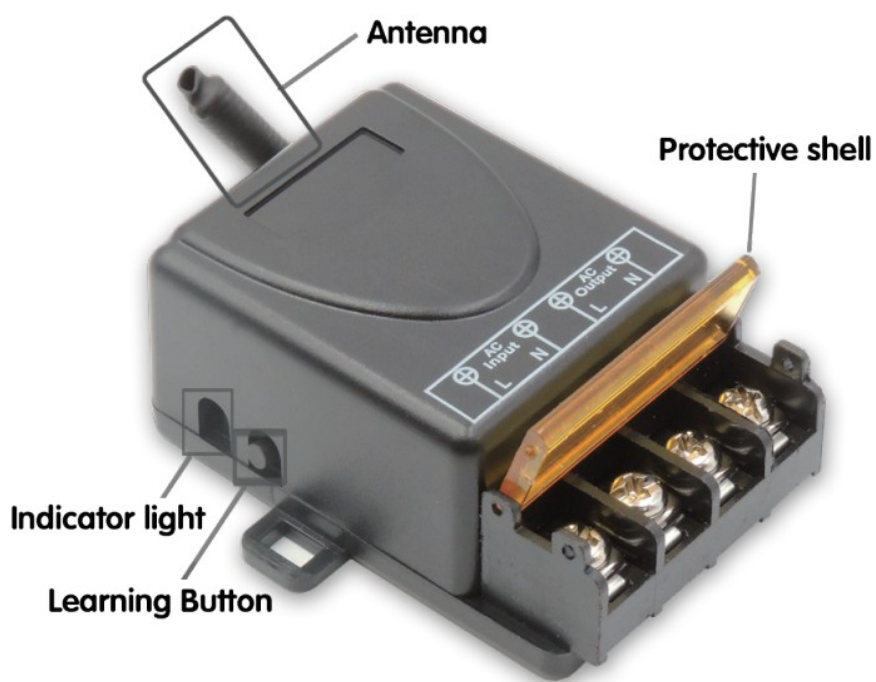

N: Neutral line

L : Living line

WIRING DIAGRAM

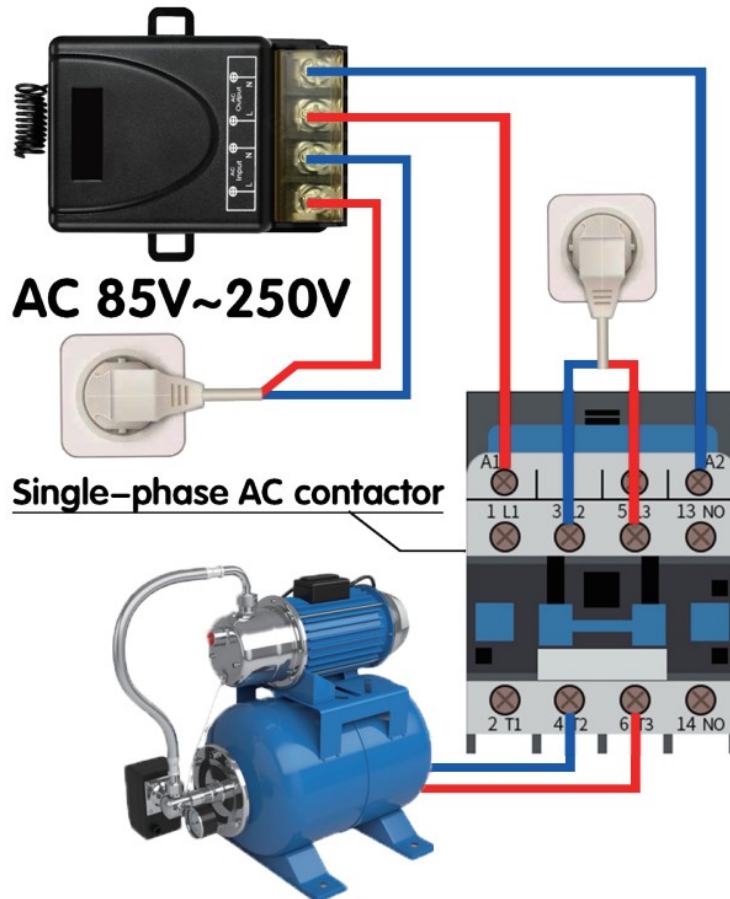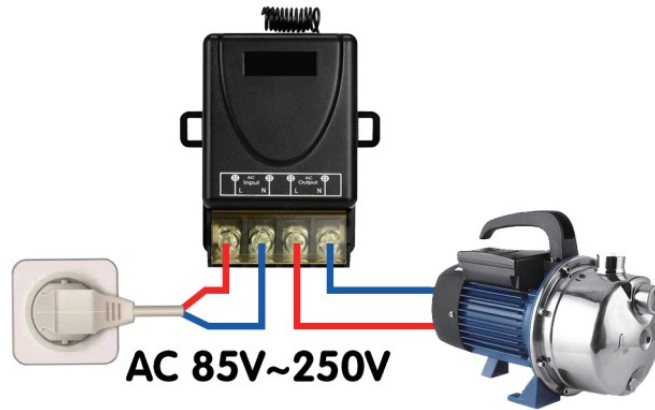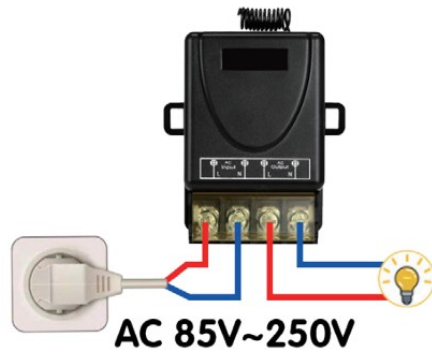

****** NOTE:**

Inductive load power > 2000W Need to connect an AC contactor

Warning

1. Usually the receiver and transmitter have been paired with each other in factory.
If not, please reprogram them.
2. Reset before you want to change the operating mode.
3. After reset, all the remote controls cannot work anymore.

4. Replace the battery in time when the remote transmitter voltage is low. To get the stronger signal transmission.
5. Slightly stretch the antenna on the receiver for better signal reception.
6. The remote transmitter need to have 2 or more buttons, if you want to set up in latched mode.
7. If the inductive load power > 2000W, please be sure to connect an AC contactor.

Operating Mode

Momentary Mode:

1. Press and hold the button, relay will turn on;
2. Release the button, this relay will turn off.

How to program

1. Press the learning button (on the receiver) 1 time. The indicator LED on the receiver will light up;
2. Press one button on the remote transmitter. The indicator LED on the receiver will flashing several times and then light down. Succeed.

Toggle Mode:

1. Press button "A", relay will turn on;
2. Press button "A" again, this relay will turn off.

How to program

1. Press the learning button (on the receiver) 2 times. The indicator LED on the receiver will light up;
2. Press one button on the remote transmitter. The indicator LED on the receiver will flashing several times and then light down. Succeed.

Latched mode:

1. Press button "A", relay will turn on;
2. Press button "B", this relay will turn off.

How to program

1. Press the learning button (on the receiver) 3 times. The indicator LED on the receiver will light up;
2. Press button "A" on the remote transmitter. The indicator LED on the receiver will flashing several times and then light up;
3. Press button "B" on the remote transmitter. The indicator LED on the receiver will light down. Succeed.

Reset

Press the learning button (on the receiver) 8 times. The indicator LED on the receiver will flashing several times and then light down. succeed.

Troubleshooting

If the receiver and transmitter cannot operate normally, try to solve the problem by follow the step below.

1. Please check if batteries power is used up. The indicator LED on remote transmitter does not light up or is dimly lit.
2. Please check if your receiver is wired correctly. It is important to make sure the wiring is correct.
3. Reprogram the receiver and transmitter. Usually this can solve a lot of problem.
4. If the problem still remains, please contact us in time. We will do our best to solve your problem. Email: "dieseelectronic@163.com" or WhatsApp: +86 13502278583

CUSTOMER SERVICE

Work volts: AC 85V~250V

Max current:30Amp



If there is any questions about the products,please contact us firstly. We will do our best to solve your problem. Thank you.

DIESEL-ELECTRIC



Huizhou Wenqiao Electronic Technology Co., Ltd.

Address: 1203, Building T19, Fangzhilonghuwan, Sanhuan South Road,
Huicheng District, Huizhou City, Guangdong Province, China 516000

WhatsApp : +86 13502278583 / +86 18138805271

Email : dieseelectronic@163.com



[DIESE ELECTRONIC 2201H Relay Remote Control Switch](#) [pdf] User Manual
2201H Relay Remote Control Switch, 2201H, Relay Remote Control Switch, Remote Control Switch, Control Switch, Switch

References

- [User Manual](#)