



**digi-tech
4-LD6644-
1 Flip
Alarm
Clock**



digi-tech 4-LD6644-1 Flip Alarm Clock User Manual

[Home](#) » [digi-tech](#) » digi-tech 4-LD6644-1 Flip Alarm Clock User Manual 

Contents

- [1 digi-tech 4-LD6644-1 Flip Alarm Clock](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Introduction](#)
- [5 Intended use](#)
- [6 Suitable for children aged 5 and above.](#)
- [7 Technical specifications](#)
- [8 Explanation of signal words](#)
- [9 Important safety instructions](#)
- [10 Product Description](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



digi-tech 4-LD6644-1 Flip Alarm Clock



Product Information

Specifications

- Item Numbers: 4-LD6644-1, 4-LD6644-2
- Product Name: FLIP ALARM CLOCK
- Intended Use: Displaying time and additional functions
- Indoor Use Only
- Manufacturer Disclaimer: Not liable for damage due to improper use
- Not for commercial use
- Suitable for children aged 5 and above
- Batteries: 2 x 1.5 V AAA LR03/R03

Product Usage Instructions

Package Contents

After purchase, check the delivery contents:

- 1 x Alarm Clock
- 2 x 1.5 V AAA LR03 Batteries
- 1 x Short Manual

Technical Specifications

- Batteries: 2 x 1.5 V AAA LR03/R03

Operating Instructions

1. Read through the operating instructions carefully.
2. Keep batteries out of reach of children.
3. Do not throw batteries into fire.

4. Always insert batteries with correct polarity.
5. Do not deform or damage batteries.
6. Do not mix different brands or types of batteries.
7. Do not mix new and used batteries.
8. Avoid charging batteries.
9. Protect batteries from moisture and liquids.
10. Avoid short-circuiting batteries.
11. Insert batteries with correct polarity always.

Safety Instructions

Important Safety Instructions:

- Danger of death and accidents for toddlers and children!
- Risk of injury due to battery leakage!
- Avoid placing the product near small children.
- This product is not a toy for children.

FAQ

- **Q: Can this alarm clock be used outdoors?**

A: No, the product is only suitable for indoor use.

- **Q: What should I do if the batteries are damaged?**

A: Do not use damaged batteries. Contact the service department for assistance.

FLIP ALARM CLOCK

Introduction

Congratulations on the purchase of your new flip alarm clock (hereinafter referred to as „product“ or „device“). In choosing this item, you have opted for a high-quality product. These operating instructions form an integral part of this product. It contains important instructions pertaining to its safety, use and disposal. Please familiarise yourself with all the operating and safety instructions before using this product. Only use this product as described and for the purposes stated. If you give this product to anyone else, please be sure to pass on these documents. Please keep the packaging and operating instructions for future reference.

Intended use

The product is suitable for displaying the time and for using the additional functions described. Any other use or modification of the product is considered im-proper use.

The product is only suitable for indoor use.

The manufacturer is not liable for damage caused by improper use or incorrect operation. The product is not intended for commercial use.

Note: This product is not a toy — it is an alarm clock.




Suitable for children aged 5 and above.

Package contents



Note: Please check the delivery contents after purchase. Check that all parts are present and not defective. If the delivery is incomplete and/or parts are damaged, do not use the product. Contact the service department (see „Processing in the event of a warranty claim“).

- 1 x alarm clock
- 2 x batteries 1.5 V AAA LR03
- 1 x short manual



 





Technical specifications












- Clockwork, digital
- Dimensions: approx. 125 x 77 x 40 mm
- Weight: approx. 134 g (excl. batteries)
- Operation with
- 2 x 1.5 V AAA LR03/R03 batteries
-  indicator for DC voltage\

Explanation of signal words

 WARNING!	This symbol/word indicates a hazard with a medium level of risk , which, if not avoided, could result in death or serious injury.
 CAUTION!	This symbol/word indicates a hazard with a low degree of risk which, if not avoided, can result in minor or moderate injury.
ATTENTION:	This signal word warns against potential damages to property.
Note:	This signal word is used for additional information.

Explanation of sign

	Improper use of the batteries may result in explosion and leakage of the battery fluid.
	Alkaline battery included
	Battery: 2 x 1.5 V AAA R03/LR03
	DC voltage indicator
	Operating instructions
	Read through these operating instructions.
	digi-tech gmbh uses the CE marking to show compliance with the applicable EU directives.
	Always keep batteries out of the reach of children.

	Do not throw batteries into the fire or place them near fire.
	Batteries must always be inserted with the correct polarity.
	Do not deform or damage batteries.
	Do not open or disassemble batteries.
	Do not mix batteries of different brands and types.
	Do not mix new and used batteries.
	Do not charge batteries.
	Protect batteries from moisture and keep them away from liquids.
	Do not short-circuit batteries.
	Always insert the batteries with the correct polarity.
	Protective gloves must be worn!

Important safety instructions

Safety instructions for the user

WARNING! Danger of death and accidents for toddlers and children!

Children frequently underestimate the risks. Always keep children away from the product.

- This product may be used by children aged 8 years and older and by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge if they are supervised or have been instructed in the safe use of the product and understand the hazards involved. Children are not allowed to play with the product. Cleaning and user maintenance is not to be carried out by children without supervision.
- The packaging material is not a toy. Children can get caught in it and suffocate while playing.
- Do not operate the product if it is damaged.
- Do not expose the product to moisture.

- Only use the product indoors.
- This product does not contain any parts that can be serviced by the consumer.

WARNING! Risk of injury!

Do not apply pressure to the display and keep sharp objects away from it.

- If the display is broken, wear gloves when collecting individual parts thereof.
- If the display liquid comes into contact with your skin, wipe it off with a clean cloth and rinse the skin with plenty of water. If necessary, seek medical attention.
- If the display liquid comes into contact with your eyes, rinse your eyes with plenty of water. Seek immediate medical attention.
- If you swallow display liquid, rinse your mouth with water and drink plenty of water. Seek immediate medical attention.

Battery safety information

WARNING! Danger of death!

- Keep batteries/rechargeable batteries out of the reach of children. If swallowed, seek medical attention immediately!
- Ingestion can result in burns, perforation of soft tissue and death. Severe burns can occur within 2 hours after swallowing.
- Do not use rechargeable batteries.
- Never recharge non-rechargeable batteries.
- Different batteries or new and used batteries must not be used together.
- Do not short-circuit batteries/rechargeable batteries and do not open them. This can result in overheating, fire hazards or explosions.
- Never throw batteries/rechargeable batteries into fire or water.
- Do not subject batteries/rechargeable batteries to mechanical stress.

Risk of battery/rechargeable battery leakage

CAUTION! Risk of injury!

Leaking or damaged batteries/rechargeable batteries can cause burns if they come into contact with skin. Therefore, wear suitable protective gloves in such cases.

- Avoid extreme conditions and temperatures that may affect batteries/rechargeable batteries, e. g. radiators/direct sunlight.
- If batteries/rechargeable batteries leak, prevent chemicals from coming into contact with skin, eyes and mucous membranes. Rinse any affected areas immediately with clear water and seek medical attention.
- In case of leakage from the batteries/rechargeable batteries, remove them from the product immediately to avoid damage.
- Remove the batteries/rechargeable batteries if the product will not be used for a prolonged period.

ATTENTION: Risk of damage of the product

- Only use the specified type of battery/recharge-able battery.
- Insert batteries according to the polarity markings (+) and (-) into the battery/rechargeable battery and the product.
- Clean the contacts on the battery/rechargeable battery and in the battery compartment with a dry, lint-free cloth or cotton swab before inserting them.
- Remove discharged batteries/rechargeable batteries from the product immediately.

RISK!

Damage to the product!

- Do not operate the product if it shows visible signs of damage or defects.
- Do not open the housing or make any changes to the product. Leave the repairs to specialists. To do this, contact the specified service address. Liability and warranty claims are excluded if repairs are carried out independently or from incorrect operation.

Do not place the product in the hands of small children

WARNING!

DANGER TO HEALTH/LIFE!

This product is not a toy for children!

WARNING! CHOKING HAZARD!

The product contains small parts that can be swallowed and lead to injuries.

Never let small children over 5 years of age use the device unsupervised. Small children cannot always correctly identify possible dangers.

Also keep the packaging films away from children. There is a danger of suffocation!

 
Set up the product safely

Place the product on a firm, level surface. The device is not designed for use in rooms with high humidity (e.g., bathrooms). Protect sensitive surfaces before setting up to avoid scratches. Make sure that:


- the product is not placed on a thick carpet or bed when in use;
- no direct heat sources (e.g., heaters) affect the product;
- it is not placed in the path of direct sunlight;
- to avoid contact with splashing and dripping water (do not place objects filled with liquids, e. g., vases, on or next to the product);
- the product is not in the immediate vicinity of magnetic fields (e.g., loudspeakers);
- no foreign bodies can enter the product;
- candles and other open flames must be kept away from this product at all times to prevent the spread of fire.

Product Description

Display

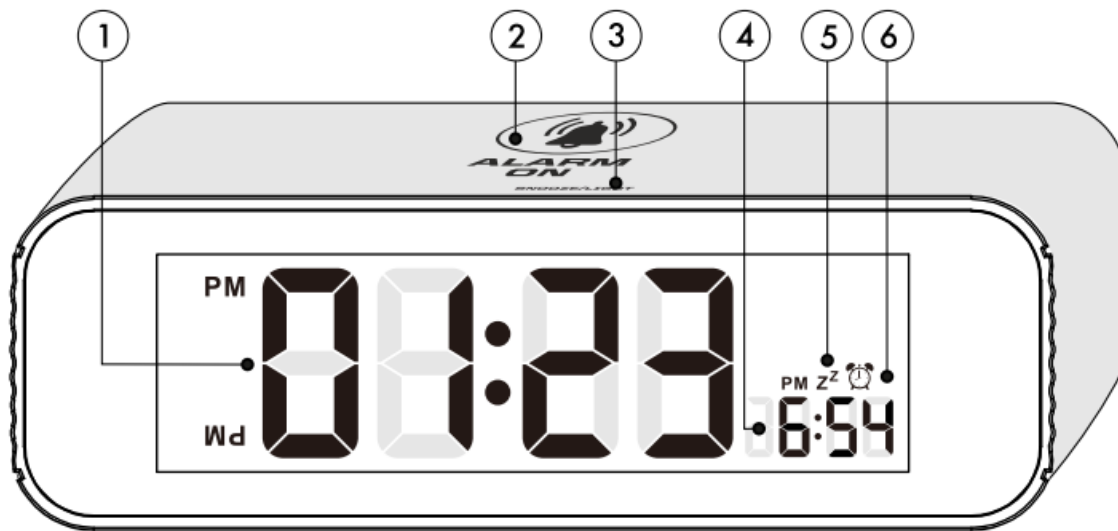


1	Time	2	ALARM/ON
3	SNOOZE/LIGHT button	4	Wake up time
5	Snooze indicator	6	Alarm display

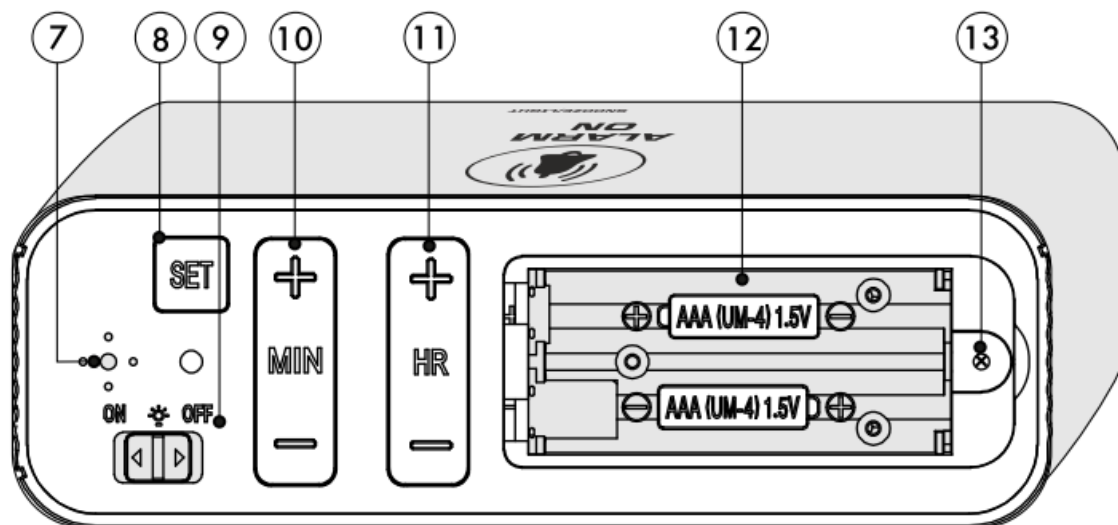 

7	Speaker	8	SET-button
9	Light slide switch ON/OFF	10	MIN +/- button minutes

11	HR +/- button Hours	12	Battery compart- ment
13	Safety screw		

 Bottom

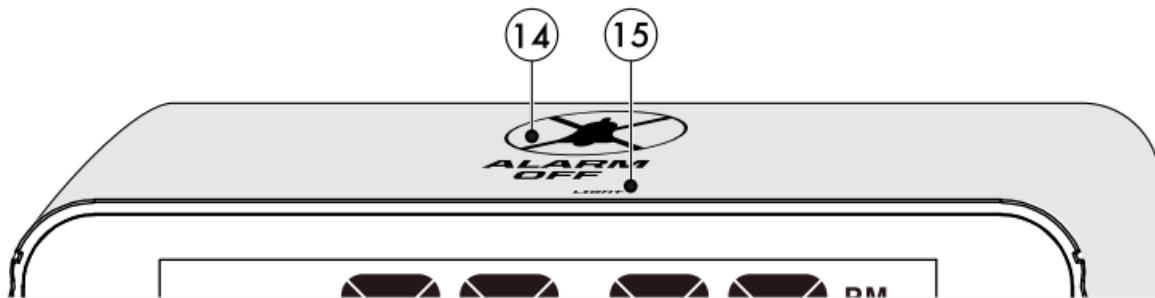

14	ALARM/OFF	15	LIGHT button
----	-----------	----	--------------

Setup

- Loosen the safety screw 13 of the battery compartment cover on the back of the product with a small Phillips screwdriver (not included) and open the battery compartment 12 .
- Insert two 1.5 V AAA LR03/R03 batteries into the battery compartment, making sure the 12 polarity (+/-) is correct.
- Close the battery compartment 12 and tighten the safety screw 13 again.

Quick setting

When setting numeric values, you can use the quick setting by pressing and holding the MIN +/- minute button 10 and the HR +/- hour button 11 . + counts up. – counts down.

Setting the time

- In the normal display, press and hold the SET- button 8 to enter time setting mode.
- 12HR or 24HR flashes. Press the minute button MIN +/- – 10 or the hour button HR +/- 11 to change the value.
- Confirm your setting by pressing
- the SET button 8 . Use the MIN +/- – minutes button 10 to set the minutes.
- Use the hours HR +/- – hours button 11 to set the hours. Confirm your setting by pressing the SET button 8

Alarm

Alarm time setting

- Set the alarm so that ALARM/ON 2 can be seen at the top of the alarm clock. In the normal display, press the minutes button MIN +/- – 10 to set the minutes.
- In the normal display, press the HR +/- – button 11 to set the hours.

Activate or deactivate the alarm

- Set the alarm so that ALARM/ON 2 can be seen at the top of the alarm clock, the alarm is switched on and will sound at the set time.
- Set the alarm so that ALARM/OFF 14 can be seen at the top of the alarm clock, the alarm is off.

Snooze function (SNOOZE)

- When the alarm sounds, touch the SNOOZE/ LIGHT button 3 at the top of the alarm to activate the snooze function. The alarm will sound again after approx. 5 minutes. Deactivate the alarm Turn the alarm clock over so that ALARM/OFF 14 can be seen on the top of the alarm clock. The alarm and snooze function are off.

Background illumination

- Touch the LIGHT button 15 or the SNOOZE/ LIGHT button 3, to turn on the backlight briefly.

Night light

- Slide the light slide switch ON/OFF 9 to ON to turn on the night light. The backlight glows softly.
- Slide the light slide switch ON/OFF 9 to OFF to turn off the night light.

Cleaning instructions

Improper cleaning can damage the product. Do not immerse the product in water or other liquids. Avoid any aggressive cleaning agents, brushes with metal or nylon bristles, or any sharp or metallic cleaning objects such as knives, hard spatulas and the like. These can damage the surface. Clean the product with a soft, dry, lint-free cloth, such as that used for cleaning glasses lenses.

Storage

If the product is not used for a long time, remove the batteries, clean and store the product away from sunlight in a dry, cool place, preferably in the original packaging.

Disposal

The product and packaging material are recyclable. Please dispose of them separately for better waste management. To learn options for disposal of the used product, please contact your municipal or city administration.



Check the labelling on the packaging material when separating waste –they are marked with abbreviations (a) and numbers (b) with the following meaning: 1-7: Plastics 20–22: paper and cardboard 80- 98: Composites.



Disposal of the electrical device



The symbol with the crossed-out dustbin means that electrical and electronic equipment must not be disposed of together with household waste. Consumers are legally obliged to dispose of electrical and electronic equipment at the end of their life separately from unsorted municipal waste. This is to ensure environmentally friendly and resource-saving recycling. Batteries and rechargeable batteries that are not an integral part of the electrical or electronic device and can be removed without being destroyed, must be separated from the device before handing it in at a collection point for designated disposal. The same applies to lightbulbs that can be removed from the device without being destroying. Owners of electrical and electronic equipment who are private individuals can hand them in at the collection points operated by the public waste disposal agencies or at the collection points set up by manufacturers or distributors. Returning used devices is free of charge. This free take-back obligation applies both to purchases in shops and to home deliveries. The place of performance of the obligation to take back is the same as the place of performance of the delivery. Transport costs may not be charged for returned equipment.

In general, distributors have the obligation to ensure the free return of used devices by providing suitable return facilities within a reasonable distance. Consumers have the option to return an old device free of charge to a distributor who is obliged to take it back if they purchase an equivalent new device with essentially the same function. This option also exists for deliveries to a private household. In the case of distance selling retailers, the option of free collection when purchasing a new appliance is limited to heat exchangers, display screen devices, and large appliances that have at least one outer edge with a length of more than 50 cm. The distributor must ask the consumer at the time of concluding the sales contract about the intention to return the product. Beyond this, consumers can hand in up to three old devices of one type free of charge at a distributor's collection point without this being linked to the purchase of a new device. However, the edge lengths of the respective devices must not exceed 25 cm.

Remove the battery without destroying it before disposal and dispose of it separately (see Disposal of batteries).

Disposal of batteries



The accompanying symbol indicates that batteries must not be disposed of with normal household waste. Defective or used batteries must be recycled in accordance with Directive 2006/66/EU and its amendments. Consumers are legally obliged to hand in all batteries, regardless of whether they contain harmful substances, such as:

Cd = cadmium, Hg = mercury, Pb = lead, Li

= lithium or not, to a collection point in their municipality/district or a retail outlet to ensure environmentally friendly disposal and to recover valuable raw materials, such as cobalt, nickel or copper. The return of batteries is free of charge.

WARNING! Environmental damage due to incorrect disposal of batteries/rechargeable batteries!

Some of the possible contents, such as mercury, cadmium and lead, are poisonous and, if not disposed of properly, endanger the environment. Heavy metals, for example, can have harmful effects on the health of humans, animals and plants and accumulate in the environment and in the food chain, and then enter the body indirectly via food.

WARNING!

Risk of explosion!

With used batteries containing lithium (Li = lithi-um), there is a high risk of fire. Therefore, special attention must be paid to the proper disposal of used and rechargeable batteries containing lithium. Incorrect disposal can also lead to internal and external short circuits due to thermal effects (heat) or mechanical damage. A short circuit can lead to a fire or an explosion and have serious consequences for humans and the environment. For this reason, tape off the poles of lithium-based batteries prior to disposal in order to avoid an external short circuit. Batteries that are not permanently installed in the device must be removed and disposed of separately before disposing of the device. Please return batteries only when fully discharged! Use rechargeable batteries instead of disposable batteries whenever possible.



Simplified EU declaration of conformity

Digi-tech gmbh hereby declares that the Flip Alarm Clock 4-LD6644-1, 4-LD6644-2 complies with the guidelines RoHS 2011/65/EU and EMC 2014/30/EU.

You can download your operating instructions and declaration of conformity here: www.digi-tech-gmbh.com/downloads

Then click on the magnifying glass and enter the article number 452205_2310.

The digi-tech gmbh warranty

This device has a 3-year warranty valid from the date of purchase. In the event of defects in this device, you have statutory rights against the seller of the product. These statutory rights are not limited by our warranty set out below.

Warranty terms

The warranty period begins on the date of purchase. Please keep the receipt. This document is required as proof of purchase. If a material or manufacturing defect appears within three years of the date of purchase of this device, we will replace or repair the device – at our own discretion – free of charge. This warranty service is subject to the condition that the defective device and the proof of purchase (receipt) are presented within the three-year period and that a brief written description describing the nature of the defect and when it occurred is provided. If the defect is covered by our warranty, we will either repair your device or send you a replacement. The repair or replacement of the product does not restart the warranty period.

Warranty period and statutory claims for defects

Statutory warranty rights do not extend the warranty period. This also applies to replaced and repaired parts. Any damage or defects already present at the time of purchase must be reported immediately after unpacking. After the warranty has expired, any repairs are subject to a charge.

Scope of Warranty

The device was carefully manufactured according to strict quality guidelines and carefully checked before delivery. The warranty applies to material or manufacturing defects. This warranty does not cover parts of the product that are subject to normal wear and tear which can therefore be regarded as consumables or damage to fragile parts, e. g. switches, batteries or parts made of glass. This warranty is void if the product has been damaged or improperly used or maintained. For proper use of the device, all instructions given in the manual must be strictly observed. Any use or action that is advised against or warned against in the operating instructions must be avoided at all costs. The product is designed exclusively for private and not for commercial use. The warranty expires if incorrect or improper handling occurs, force is used or repairs were carried out by someone other than our authorised service branch.

Processing in the event of a warranty claim

To ensure that your request is processed quickly, please follow the instructions below:

- For all inquiries, please have the receipt and item number (452205_2310) ready as proof of purchase.
- The item number can be found on the type plate, as an engraving, on the title page of your manual (bottom left) or on a sticker on the back or underside of the product.
- If functional errors or other defects occur, please contact the following service de-partment by phone or email first.



You can download these instructions and many other manuals, product videos and software at www.lidl-service.com.

This QR code will take you directly to the Lidl service page (www.lidl-service.com), where you will be able to access your operating instructions by entering the item number (452205_2310).



Service

Inter-Quartz GmbH, Valterweg 27A, 65817 Eppstein, GERMANY

Email: support@inter-quartz.de

Telephone: +49 (0)6198 571825

00800 5515 6616



Supplier

Please note that the following address is not a service address. Contact the Service Office named above first.
digi-tech gmbh, Valterweg 27A, 65817 Eppstein, GERMANY




Year of manufacture: 2024

IAN 452205_2310,

Itemno.: 4-LD6644-1, 4-LD6644-2

Documents / Resources

	<p>digi-tech 4-LD6644-1 Flip Alarm Clock [pdf] User Manual</p> <p>4-LD6644-1, 4-LD6644-2, 4-LD6644-1 Flip Alarm Clock, 4-LD6644-1, Flip Alarm Clock, Alarm Clock, Clock</p>
---	---

References

- [de/](#)
- [Sie sehen hier eine soeben freigeschaltete Homepage](#)
- [Downloads | digi-tech GmbH](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.