



# DigiDragon 706Z Computer Series Tablet User Manual

[Home](#) » [DigiDragon](#) » DigiDragon 706Z Computer Series Tablet User Manual 

## Contents

- [1 DigiDragon 706Z Computer Series Tablet](#)
- [2 ATTENTION](#)
- [3 Desk Touch panel](#)
- [4 first use](#)
- [5 Equipment Operation interface](#)
- [6 Equipment basic ser](#)
- [7 FCC Caution](#)
  - [7.1 Problem solution](#)
- [8 BASIC FONCTION](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



**DigiDragon 706Z Computer Series Tablet**



 
## ATTENTION

This handbook contains important security measures and the correct use of the product information. in order to avoid accidents. Pis make sure to read the manual carefully before using the device.

- Please don't be at a high temperature. moisture or very dust place
- Please don't be at a high temperature. Especially, in summer doesn't put the device in the car when Windows is Closed.
- Avoid falls or Violent collision of the device. don't make the TFT display screen violent tremor. This could cause the TFT display screen abnormal or damaged.
- Please choose the appropriate volume, Use headphones that should not be too big a volume. If feel tinnitus. Lower the volume or stop using it
- please charge In the following condition.
  - The battery power ICONS shows have no power
  - The system automatically shuts off, startup after power off soon
  - Operation buttons no response
  - The machine that the top right corner show red icons
- When the device is in the format or ongoing upload and download file, please don't suddenly disconnect. This could cause application errors.
- For those who because of damage to the product, repair, or other causes erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product; don't use alcohol, Thinner, or benzene to scrub products
- Don't use the device one of the places prohibiting to use of electronic equipment in regional (such as the plane)
- Please don't use the Tablet PC when you are driving or walking down the street,
- USB just only be used for data transmission

The company reserves the right to improve products, products specification and design have any change, The information is subject to changes without prior notice. (This tablet is no waterproof function) ( Remark | All pictures in this manual are just for your reference. products specification and design have any change. The information is subject to changes

## Desk

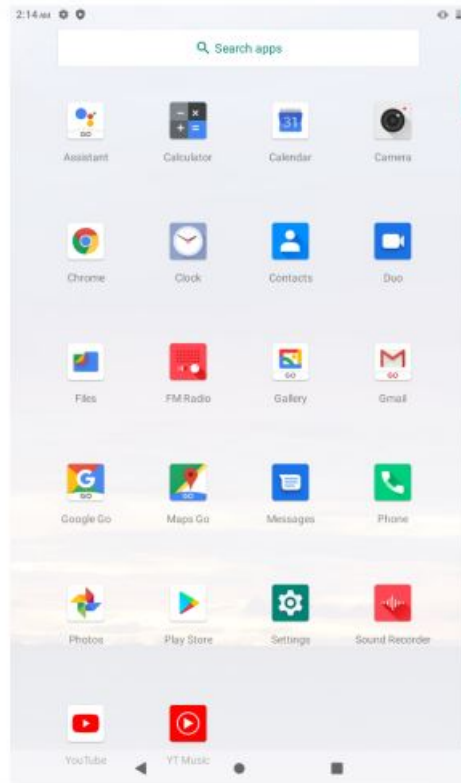

## Touch panel

Capacitive touch panel: In The Operation, to click, dragging on the touch panel

## POWER

**startup:** Long Press and hold the power button. the system will enter the main interface

**shutdown:** In the main menu interface, press the power button for about 5 seconds to shut down, The system can hini the “power off” option, Click”ok”. you can safely shut down.

**Lock screen:** Short press the Power button to lock the screen or unlock the screen.

## Remark

1. When power is empty. the system will shut down automatically. 2. illegal turn oH the device,restar1 will scan and restore the disk.it may take a longer time to enter Into the system

## BACK

Short Press BACK button will return the last interface,

## MIC Recording

## Volume+, Volume-

the buttons on top Volume +, Volume-achieve changes in the volume.

## earphone jack

3.5 mm standard earphone jack

## **Video output Interface**

HDMI output interlace

## **TF card**

TF-CARD SOit: external T-FLASH card

## **Mini USB**

MiniUSB jack: you can use it to connect the computer for data transmission, charging, and external connection  
USB flash drive

## **DC Adapter**

For charging. your tablet battery

## **Recovery**

When the Tablet is under the condition of the crash, upgrade the firmware.

## **first use**

### **Battery management and charge**

 
Before first use, please set the device's battery is fully charged Just need to connect the adaptor or USB interlace, then you can charge The first two times charging please keep about 6 hours, alter that you just need 4 hours to charge.

[ Remark]: This tablet uses Built-in type polymer battery. The charge must be to choose standard adaptor (Input: AC110-240V 50/60Hz Max, 180MA .. Output: DC5.0~5.5V/1.5A), this device without supply OC charging, USB interface can charge, Choose USB interlace to charger During the charging, the battery icon will scroll When finished charging, the battery icon will become green and stop rolling In order to prolong the service life of the machine, suggest use out battery power before charge it[Remark]:

1. If you long time don't use this Tablet, , in order to avoid power consumption caused damage. pis charge/play the battery once a month,
2. After the low battery shut down. connect DC stapler, the device will remind low battery, charging, need to wait some time until the battery is enough to power to enter into the main menu.
3. Device charging should be in standby status to reach normal charging time. Because of device and screen consumption.it may cause longer charging me.

### **Connection with PC**

U Use a USB cable to connect the device to the PC, the device will pop up in the use connection window. click Turn o,e storage to "?\_nnect to PC

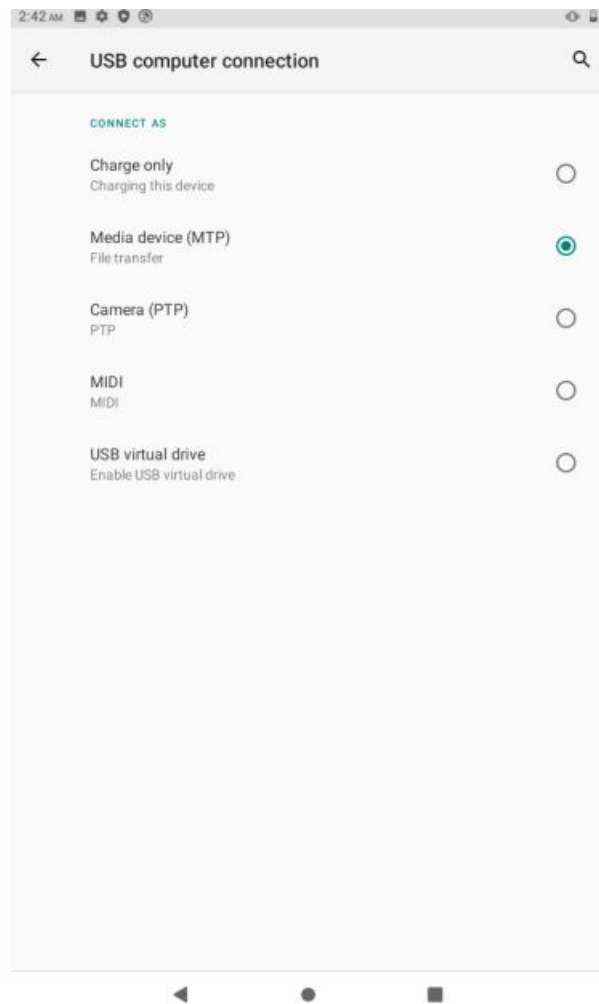


Into the load mode, you can copy, and delete the file on the device and the file on the memory card.


## Equipment Operation interface
 
### The main interface describe


After s1artup will enter the main interface

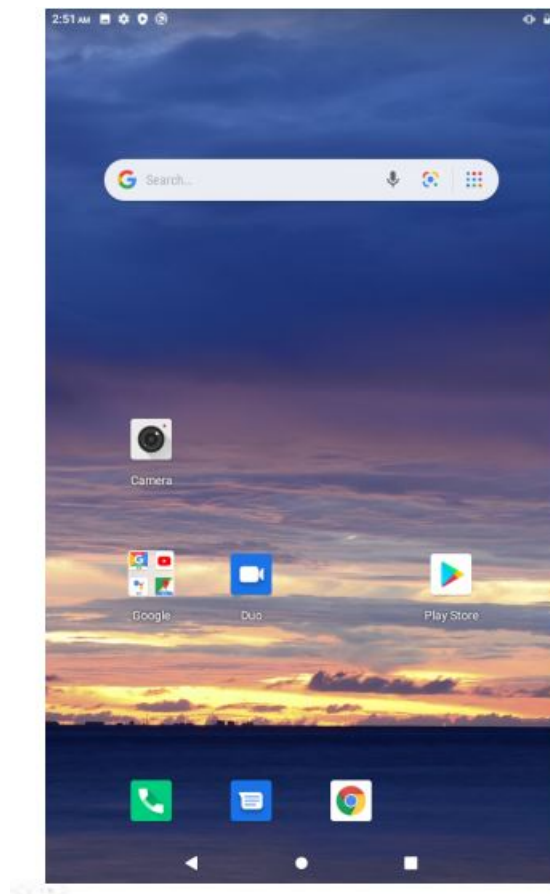

 In the main interface, you can Management the main interface software ICONS: long-press the icons for 3 seconds, after the icons will bigger, then you c.,n drag them anywhere in the interface

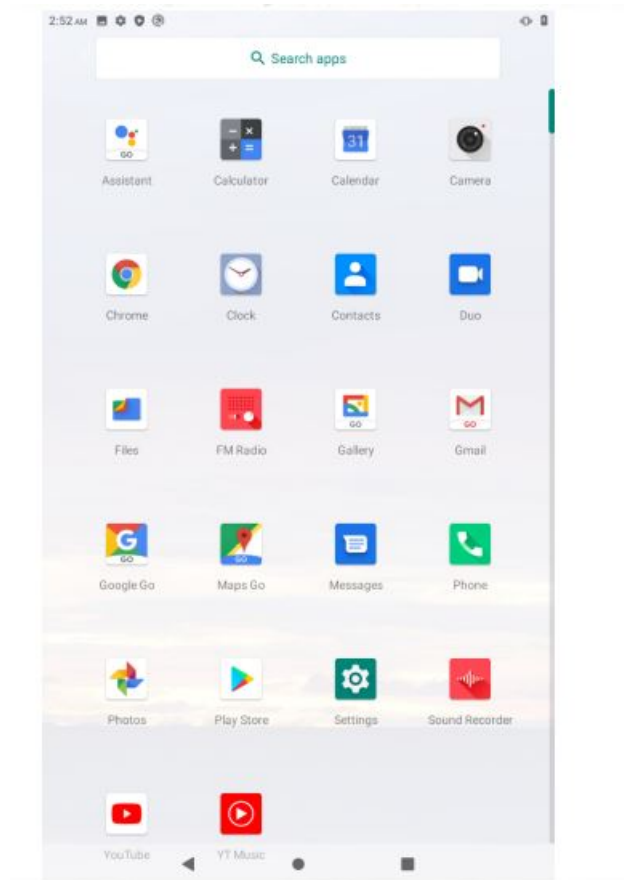

 Delete icons: long-press the icons 3 seconds, drag the icons lo the Recycle Bin icon, once ii become red, Loosen your hand, after that you can delete icon You touch the screen keep a time, appear the dialog box” Add yo Home screen” as shown below

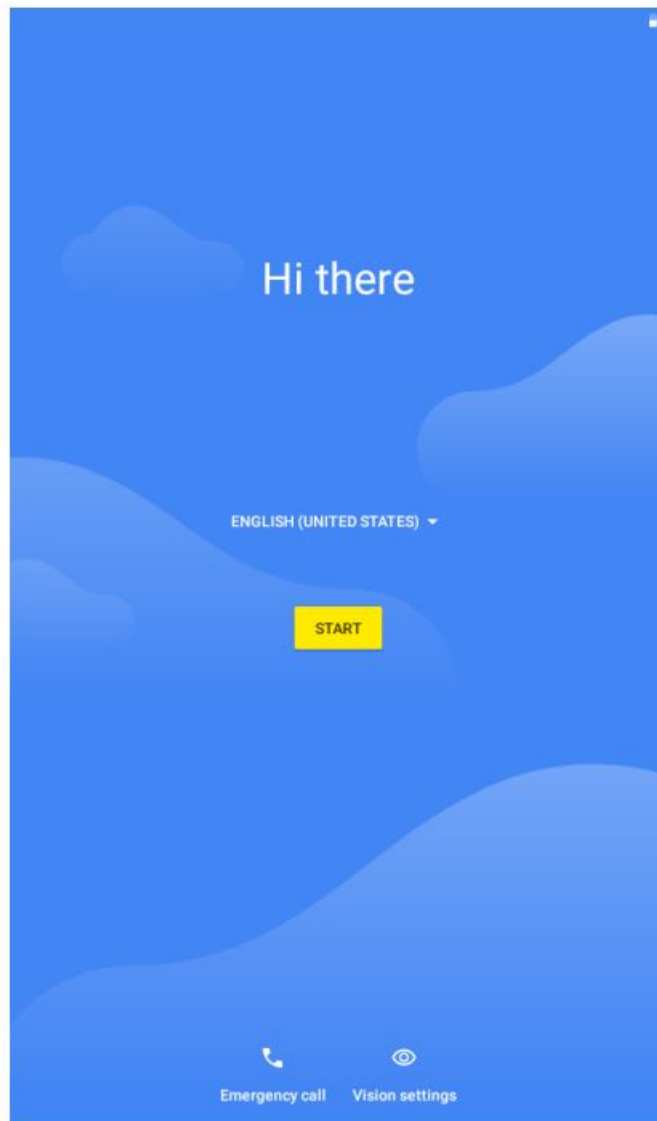


### **status bar describe**

The status bar above the screen Top left display,nain Interface software. T-Flash cc:1rd. USB connection status and so on Top right displays the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

### **Use touch panel**

The device is equipped with a 7 -touchscreen. Following the main touch, the screen area is described and describes some of the tips for how to use the touch screen. No matter which interface you are on the screen can go hack to the main screen by pressing the soft key m on the bottom right, comer of the main screen.

 
**[Attention]** The main screen soft key Functions as the machine back key In different applications, by tapping the back soft key in the bottom right, comer on the touch screen, you can return to its interface on the upfront. In different applications, by tapping the menu key lon the upper right comer of the touch screen, the screen will appear with the operation setting interface as follows,{Remar1t}: The main screen soft key functions as the machine man

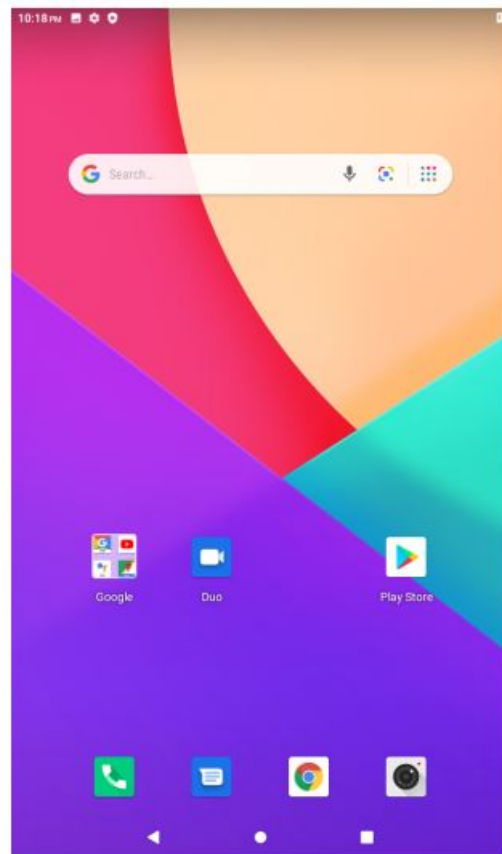


In the main interface, you can touch the icon to open the APPs In different browsers (file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.


## Equipment basic ser

 **Setting:** Click setting icons B, enter setting interface

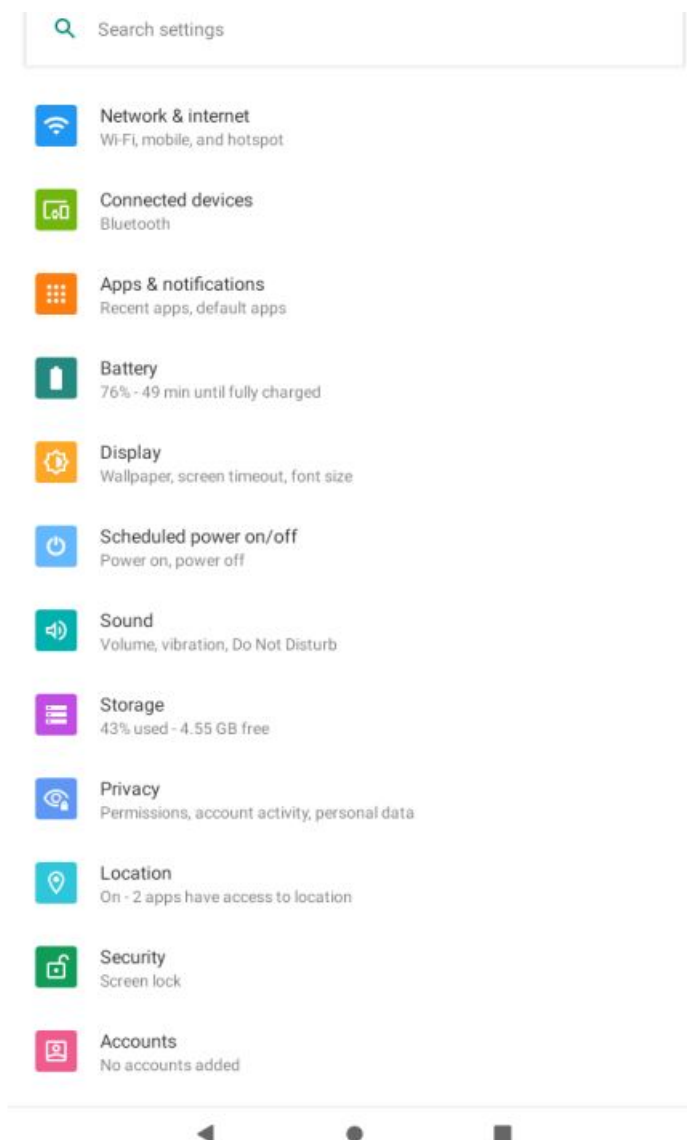

  Silent mode, Volume, Notification ringtone, Audible selection. Screen lock sounds

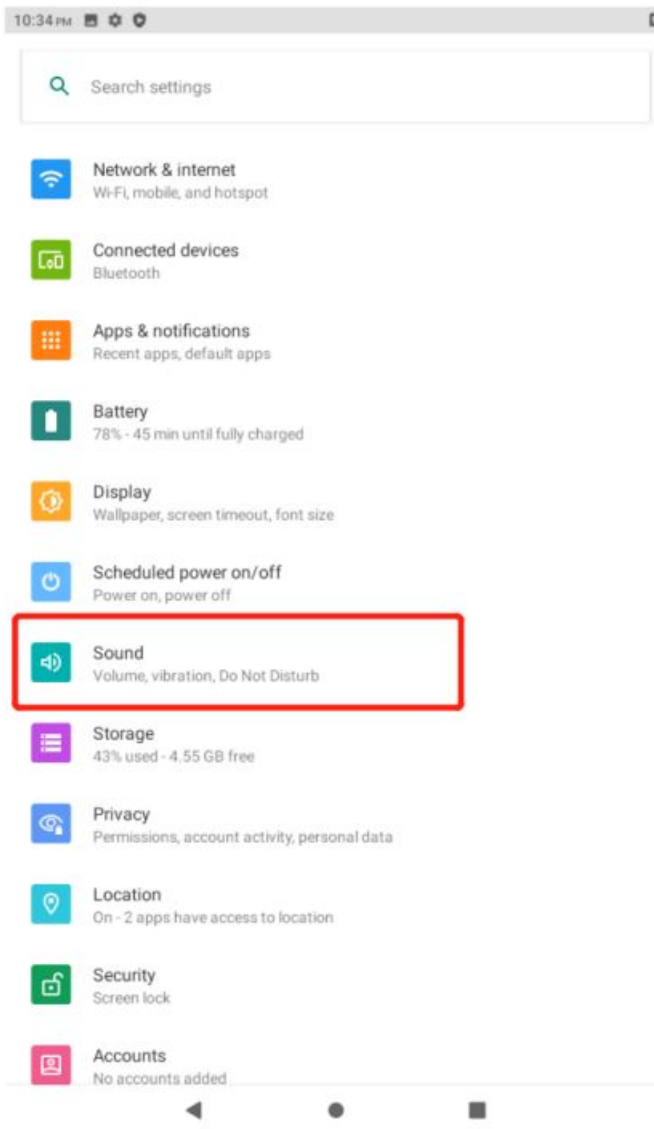

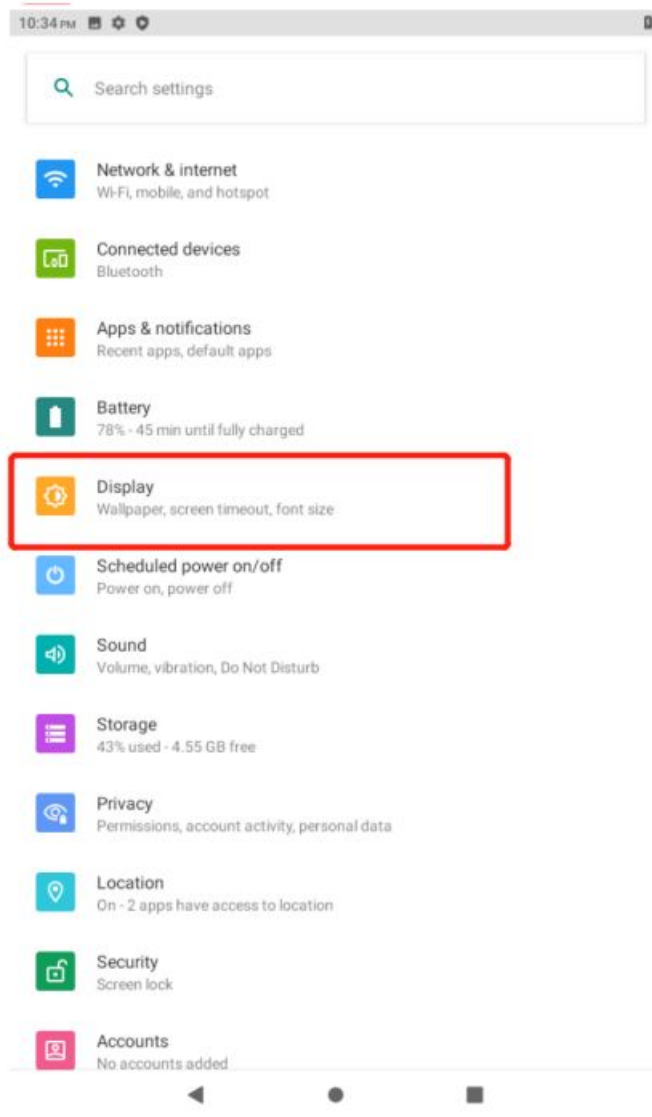

## FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV techni help.

 
### Radiation Exposure Statement

The device has been tested and complies with FCC SAR Select Language: 54 kind of national languages are available Remark: Android system can support 54 kinds of language, now many interface just support 14 languages,

Android keyboard: Android keyboard setting Sound on Key-press Auto-capitalisation Show suggestions: Display suggested words while typing Auto-complete: Spacebar and punctuation automatically insert highlighted work


### Date & time setting

Set dale, set time, Select time zone and select date format

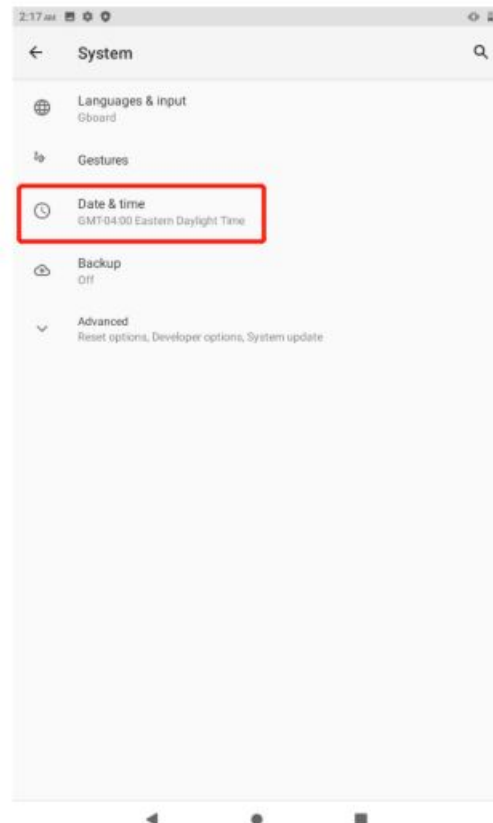


### Developer options

 Choose use work pattern: OTG/HOST/SLAVE

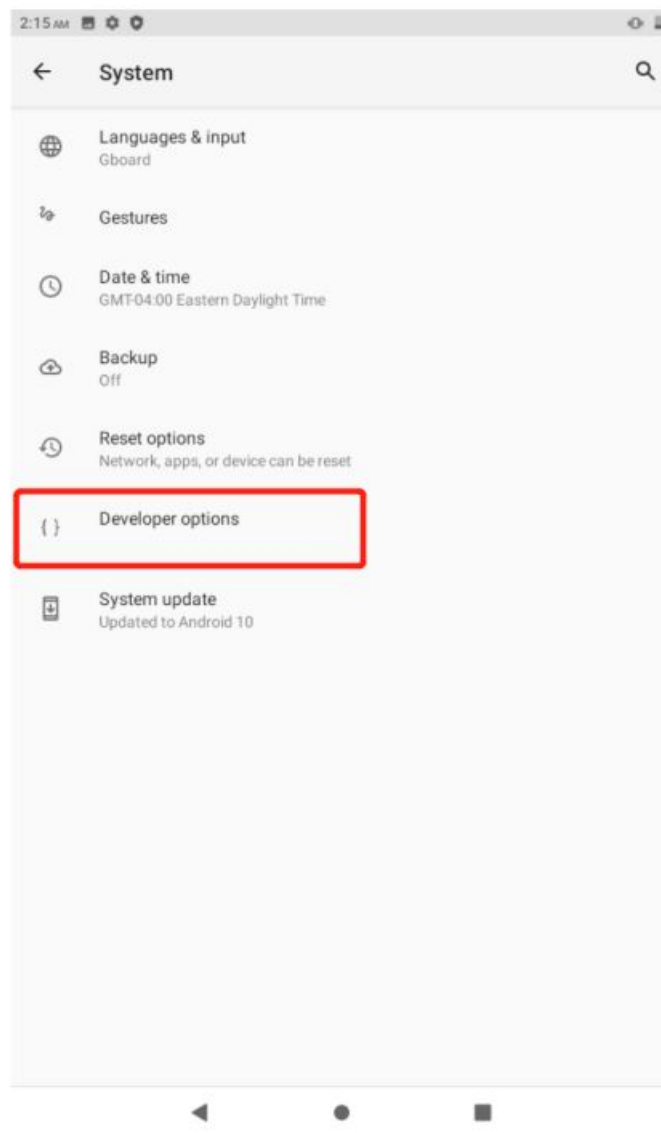

**About tablet**

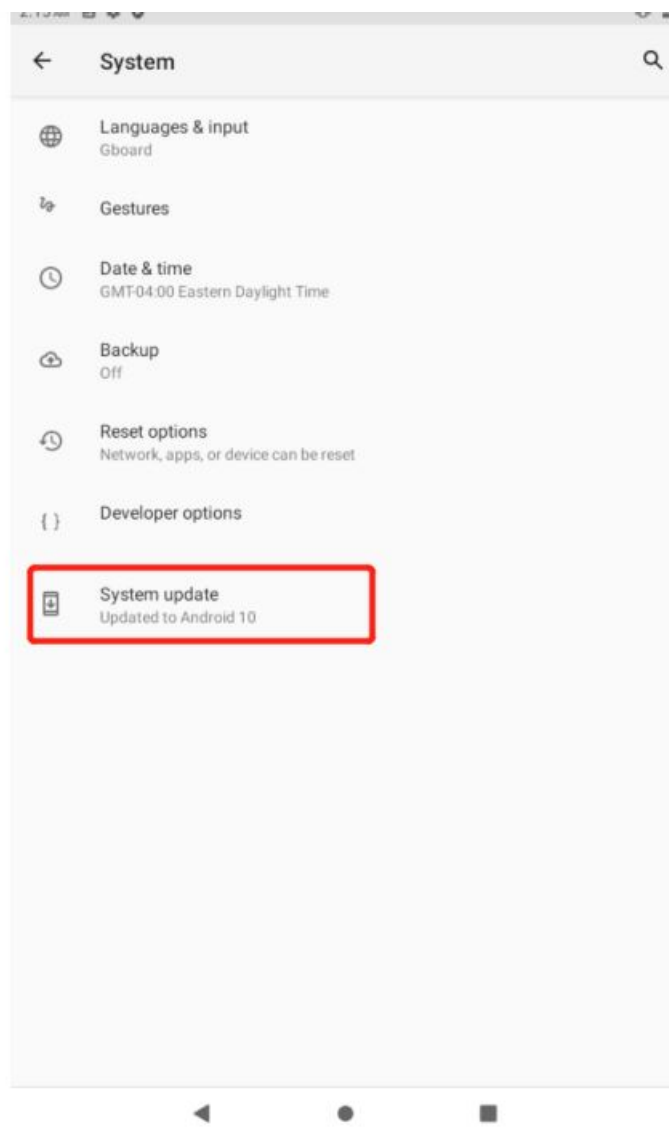 

### App installer

This Tablet can support Android APP in mali<et by the third party, most Apps can install in the networks. can copy to NANO FLASH or SD card. Click the App installer icon, will appear Install, manage, Exit options. Install; Click install, enter Apk install interface Separately for the Internal Memory disk and SO Card disk. Select the APK you would like to Install. Click it to Install. go back to the main menu. will display the installed app you just selected. Remark: some 3'• APP must install properly by memory card. downloaded 3" party app may not install properly on the device. Manage: click manage, enter third PARTYany interface Cllclc Install Icon, will enter Acllon interface.

### Problem solution

#### The device can't open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't open, pis contact with the supplier

After startup the screen or the opening picture has been appearing, the device appears shutdown

1. Power is not enough. please charge Headset can't hear the voice

2. Please check the volume whether set to 0
3. Check the music file whether damaged. Try playing other music, if the file has been damaged may lead to serious noise or hop sounds

Can copy files or play music and so on

 
1. Please check between computer and device is the correct connection
2. check the memory storage space is already full
3. check the USB cable is good or not
4. USB connection is disconnected

## BASIC FUNCTION

OS	android8.1/android9.0/ android10.1
CPU	Quad-core ARM Cortex A7 processor , up to 1.3GHz
RAM	Support LPDDR3/LPDDR2, up to 512MB(LPDDR3), max 2G Byte
ROM	Nand flash 4GB/8GB/16GB/32GB/64GB Optional
LCD	7" optional HD display
Touch panel	Capacitive Touch panel Optional
2D/3D	Single core ARM Mali-T820, up to 600MHz
Graphic	Support OpenGL ES1.1/2.0/3.1/3.2 3D graphic
WIFI wireless	Single band 2.4GHz, support 802.11b/g/n

3G	Built-in 3G Module(option), WCDMA/HSDPA,support calling、message、 Wifi ad hoc
TF expansion	for optional 3G module to realize 3G communication.External MICRO SD(TF)slot,Max. 32GB TF card.
USB	USB high speed 2.0 .Can be connected to the computer to copy files.
VPU	Maximum support hardware decoding 720P and 1080i, and 480 video encoding.
Gravity	Built-in 3D gravity sensor, to make screen realize 360 degree rotation.
Audio	support gravity sense operation game. AC'97 full-duplex codec, support AAC\AMR\MP3\WMA\WAV\MIDI and so on.
Video	WMV/ASF/MP4/3GP/AVI/MKV/VC-1/DIVX/MPEG-2/MPEG-4 /H.263/ H.264 720P HD 1080i
Game	Support several of entertainment games based on Android platform.
Web	Support many internet applications like web, social, video, chatting and so on.
E-book	Assemble e-book tool to read based on Android platform.
Photo Frame	Built-in photo player, and take it as a photo frame or calendar.
Office	Support various of office software based on Android platform, to realize office functions, Such as Word\Excel\PPT\PDF.

## Documents / Resources

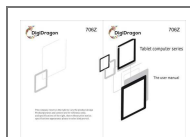

[DigiDragon 706Z Computer Series Tablet](#) [pdf] User Manual  
706Z, 2AW7S706Z, 706Z, Computer Series Tablet