



DigiDragon 708Z Computer Series Tablet User Manual

[Home](#) » [DigiDragon](#) » DigiDragon 708Z Computer Series Tablet User Manual 

Contents

- 1 DigiDragon 708Z Computer Series Tablet
- 2 Package List
- 3 Desk
 - 3.1 Touch Panel
 - 3.2 POWER
 - 3.3 BACK
 - 3.4 MIC
 - 3.5 Volume +, Volume-
 - 3.6 Video Output Interface
 - 3.7 TF Card
 - 3.8 Mini USB
 - 3.9 DC Adapter
 - 3.10 Recovery
- 4 First Use
 - 4.1 Battery Management and Charge
 - 4.2 Connection with PC
- 5 Equipment Operation Interface
 - 5.1 Main Interface Describe
 - 5.2 Status Bar Describe
 - 5.3 Use Touch Panel
- 6 Equipment Basic Set
 - 6.1 Silent Mode, Volume, Notification Ringtone, Audible Selection, Screen Lock Sounds
 - 6.2 Application
 - 6.3 Privacy
 - 6.4 Storage
 - 6.5 Language & Keyboard
 - 6.6 Date & Time Setting
 - 6.7 Developer Options
 - 6.8 About Tablet
- 7 Apps Install and Manage
 - 7.1 App Installer
- 8 Problem Solution
 - 8.1 Device Can't to Open
 - 8.2 After Startup the Screen or the Opening Picture has been Appear, the the Device Appear Shutdown
 - 8.3 Can Copy File or Play Music and So On
 - 8.4 Basic Function
- 9 FCC Caution
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts





The company reserves the right to vary the product design Product pictures and content are for reference only, and specifications of the right, then without prior notice, specifications appearance please to sales kind prevail.

Package List

1. Tablet



2. Charger



3. Plastic Case



4. USB Cable

**Attention:**

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

 
- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, if feel tinnitus, Lower the volume or stop using it.
- Please charge In the following condition,
 1. The battery power ICONS shows have no power
 2. The system automatically shut off, startup after power off soon
 3. Operation buttons no response
 4. The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol, Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street.
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

[Remark] All pictures in this manual is just for your reference, products specification and design have any change, The information is subject to changes without prior notice.

Desk

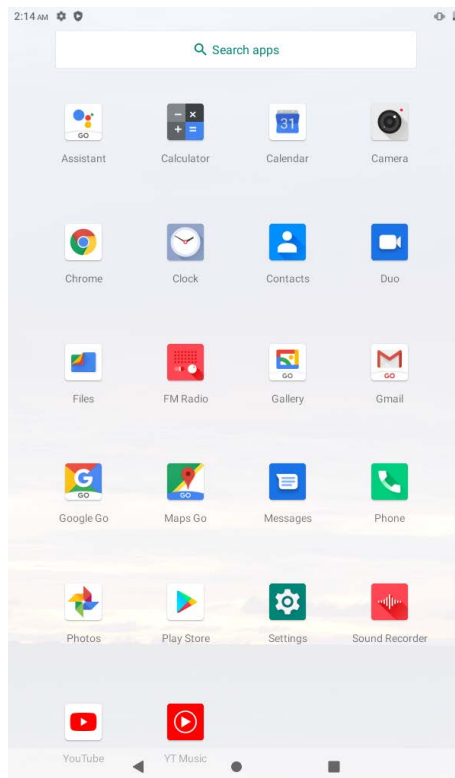

Touch Panel

Capacitive Touch Panel: In the operation, to click, dragging on the touch panel

POWER

Startup; Long Press and hold the power button, the system will enter the main interface shutdown: In the main menu interface, press the power button about 5 second to shutdown, The system can hint “power off” option, Click^ok”. you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark

1. When power is empty, system will shut down automatically.
2. Illegal turn off the device. Restart will scan and restore the disk, it may take longer time to enter into system

BACK

Short Press BACK button will return the last interface.

MIC

Recording

Volume +, Volume-

The buttons on top Volume +, Volume-achieve changes in the volume. 1.6 earphone jack
3.5 mm standard earphone jack

Video Output Interface

HDMI output interface

TF Card

TF-CARD slot: external T-FLASH card

Mini USB

MiniUSB jack: you can use it to connect the computer for data transmission, charging and external connection
USB flash drive

DC Adapter

For charging, your tablet battery

Recovery

When the Tablet under the condition of the crash, upgrade firmware.

First Use

Battery Management and Charge

Before first use, please set the device's battery is fully charged
Just need to connect the adaptor or USB interface, then you can charge
The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

[Remark]: This tablet using Built-in type polymer battery, charge must be to choose standard adaptor (Input: AC110-240V 50/60Hz Max: 180MA., Output: DC5.0~5.5V1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger.

During the charging, the battery icon will scroll.

 
When finished charging, battery icon will become green and stop rolling In order to prolong the service life of the machine, suggest use out battery power before charge it

Remark:

1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage, please charge/play the battery once a month.
2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.
3. Device charging should be in standby status for reach normal charging time. Because with device and screen consumption. It may cause longer charging time.

Connection with PC

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC

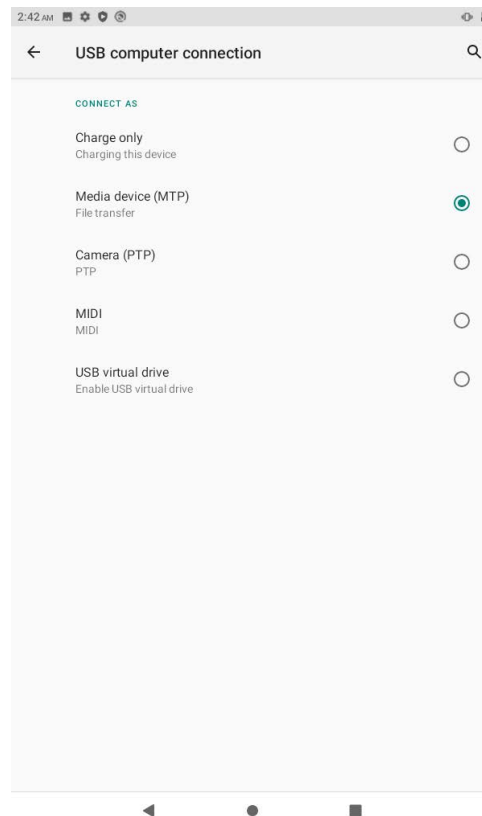


Into the load mode, you can copy, delete the file on the device and the file on the memory card.


Equipment Operation Interface

Main Interface Describe

 After startup will enter the main interface

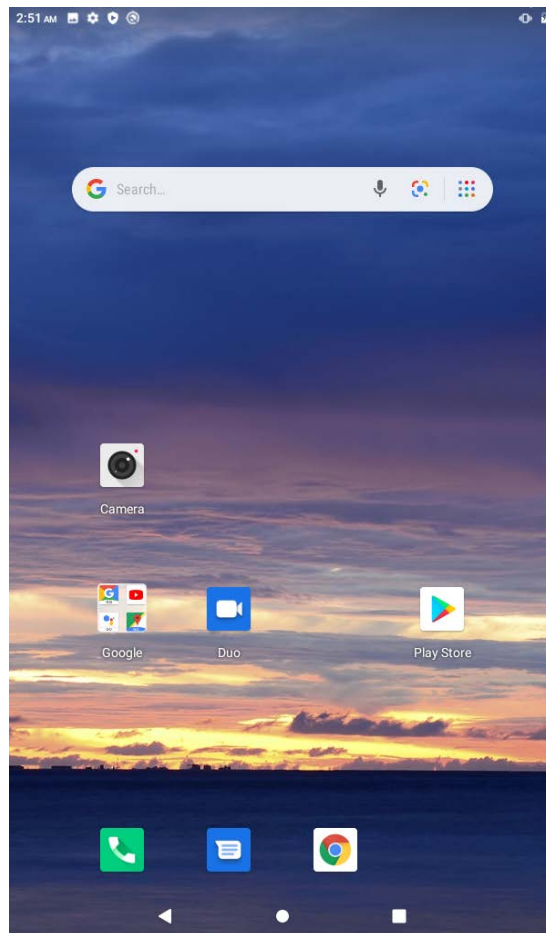

 In the main interface, you can:
 Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then You can drag anywhere in the interface

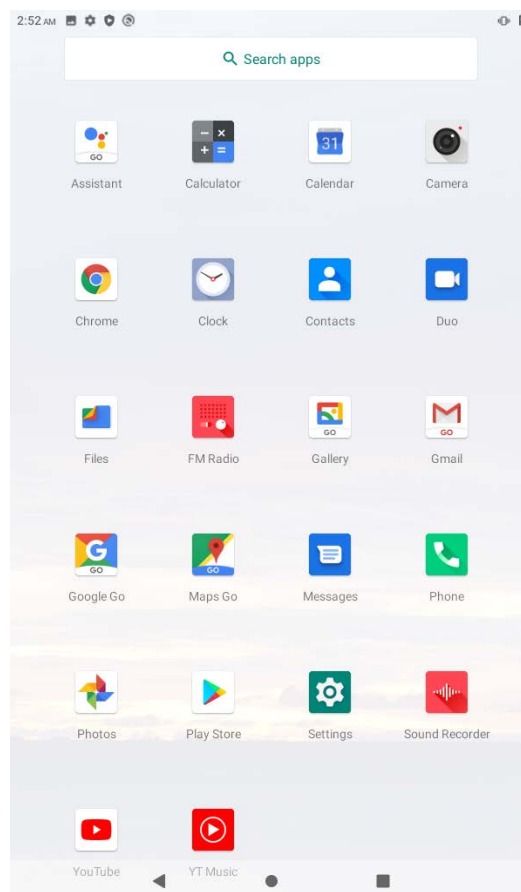

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

Remarks: Please touch You touch the screen keep a time, appear the dialog box” Add Home screen”

Status Bar Describe

- The status bar above of the screen
 - Top left display main interface software, T-Flash card, USB connection status and so on
 - Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

Use Touch Panel

Device equipped with a 7" touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

 
No matter which interface you are on the screen, can go back to main screen through pressing the soft key [•] on the bottom right corner of the main screen.

[Attention] The main screen soft key Functions as the machine back key

In different applications, by tapping the back soft key FVbn the bottom right corner on the touch screen, you can return to its interface on the up floor.

In different applications, by tapping the menu key Hon the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

[Remark] : The main screen soft key H functions as the machine menu

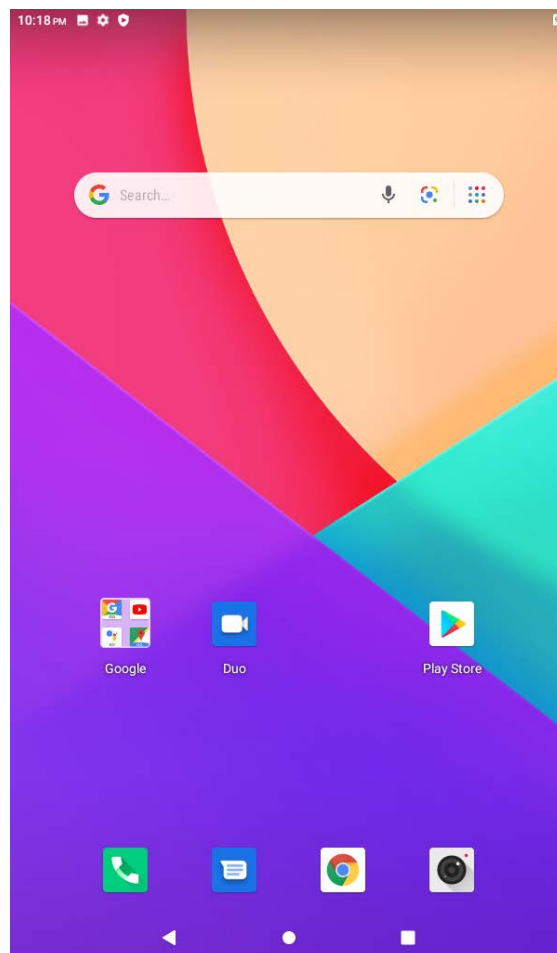


In the main interface, you can touch the icon to open the APPs

In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down



to roll.

Equipment Basic Set

 Setting: Click setting icons a, enter setting interface

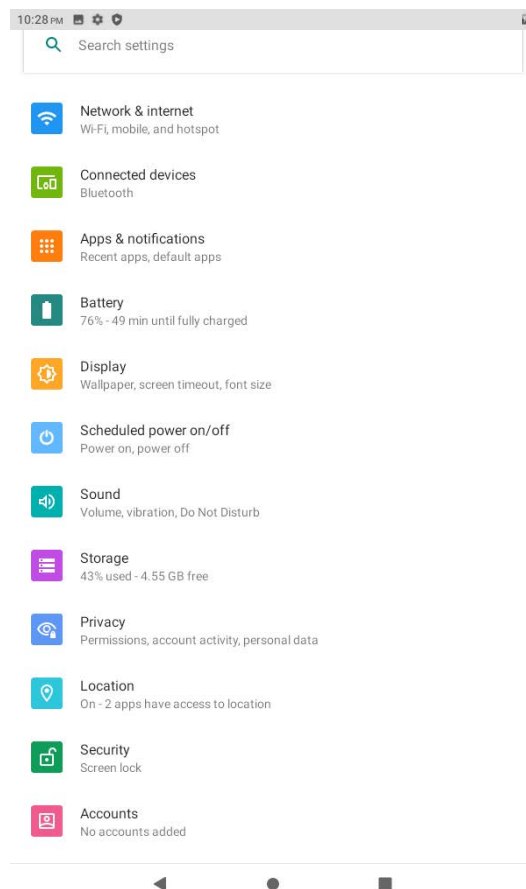


  Silent Mode, Volume, Notification Ringtone, Audible Selection, Screen Lock Sounds

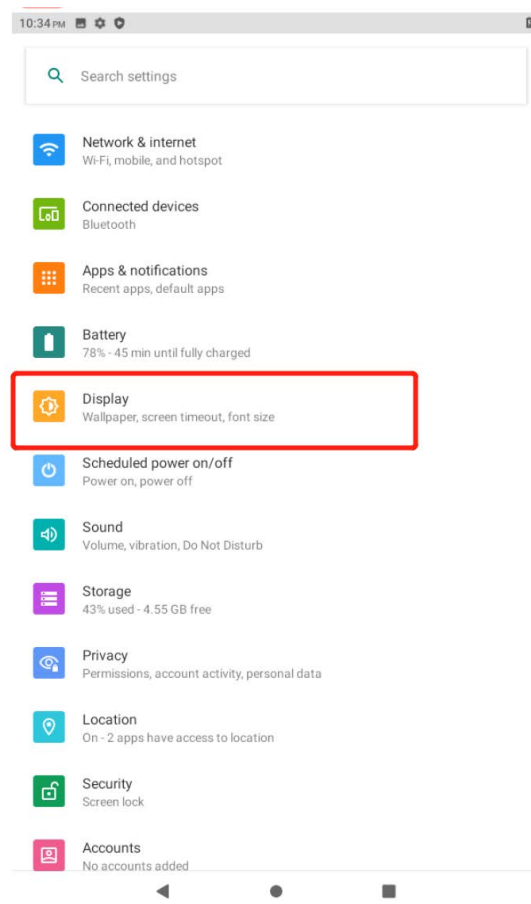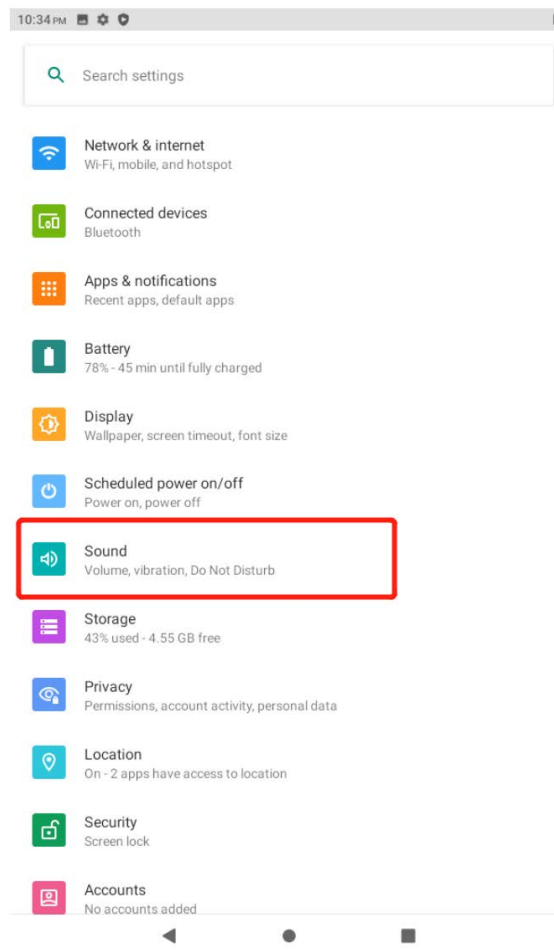

Application

 
Manage applications

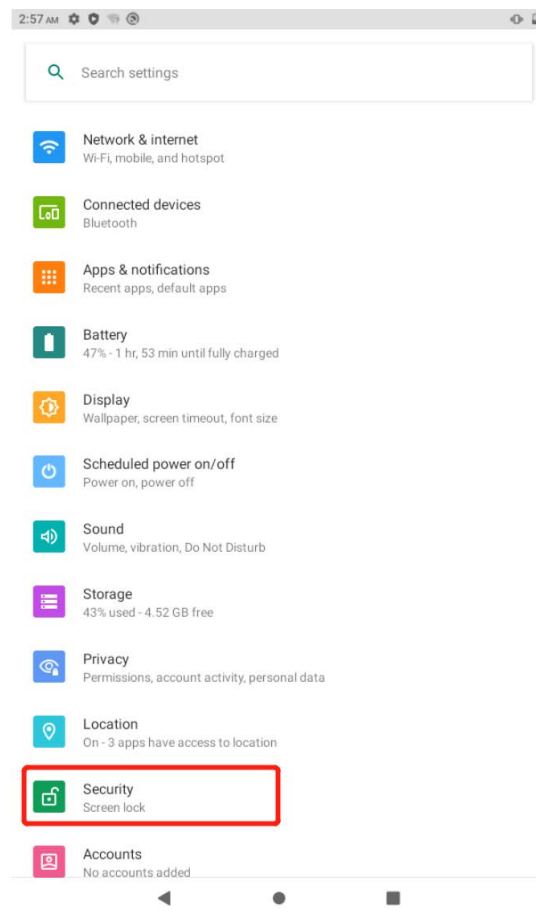

Unknown sources: Click “Unknown Sources”, then click “OK”
Manage application: manager and uninstall
Application


Privacy

 Factory data reset

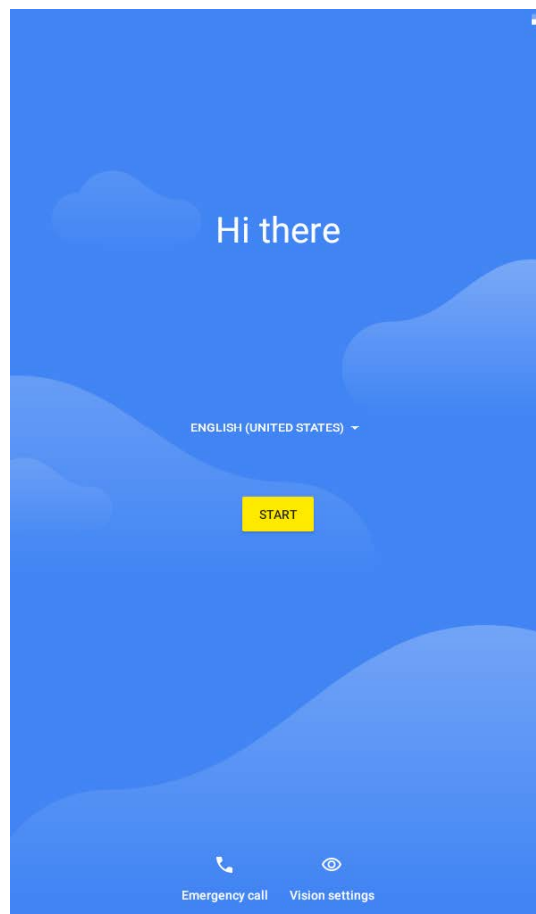

Storage

 
Remove TF card, view of the available storage space

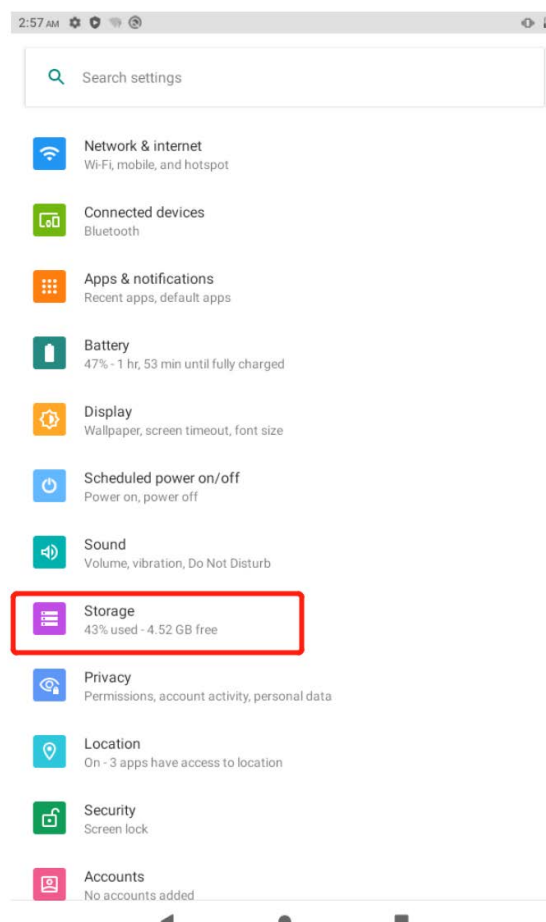

option “delete SD card”, so that can safety to remove SD card

Language & Keyboard

 Setting: (Language), text input and automatic error correction options.

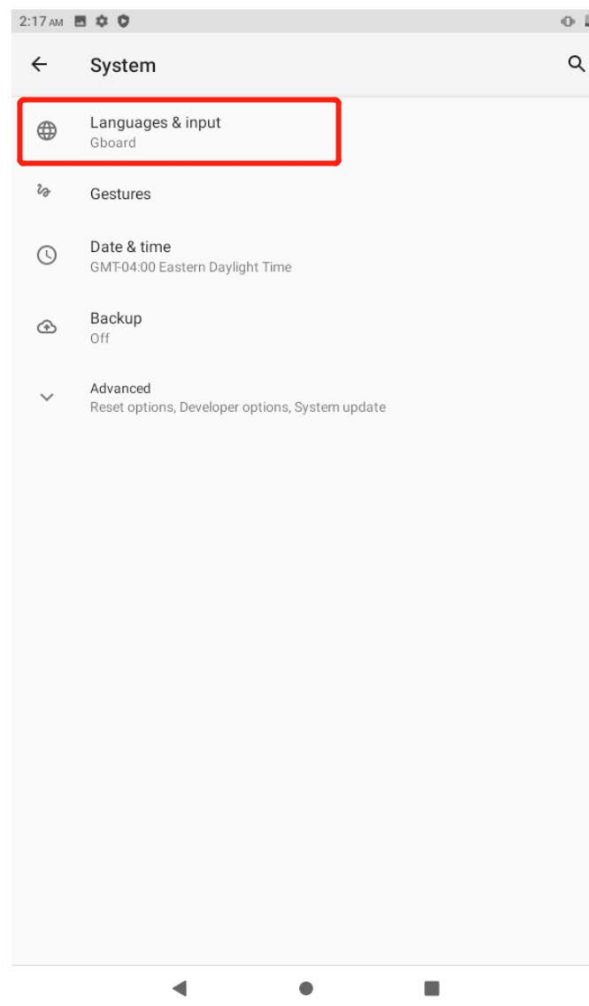

Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now menu interface just support 14 language,

Android keyboard: Android keyboard setting

Sound on Key-press

 
Auto-capitalization

Show suggestions: Display suggested words while typing

Auto-complete: Spacebar and punctuation automatically insert highlighted word


Date & Time Setting

Set date, set time, Select time zone and select date format

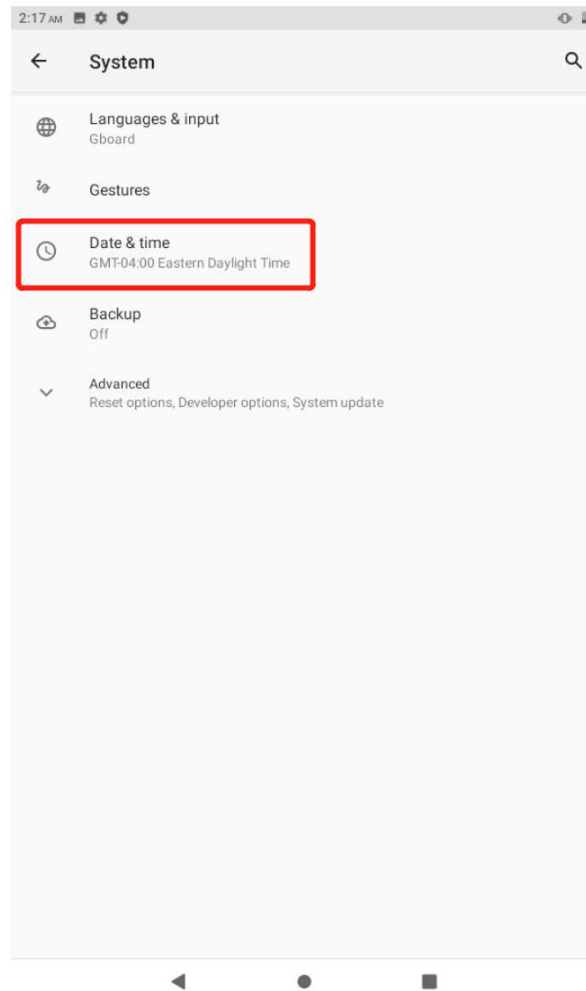


Developer Options

 Choose USB work pattern: OTG/HOST/SLAVE.

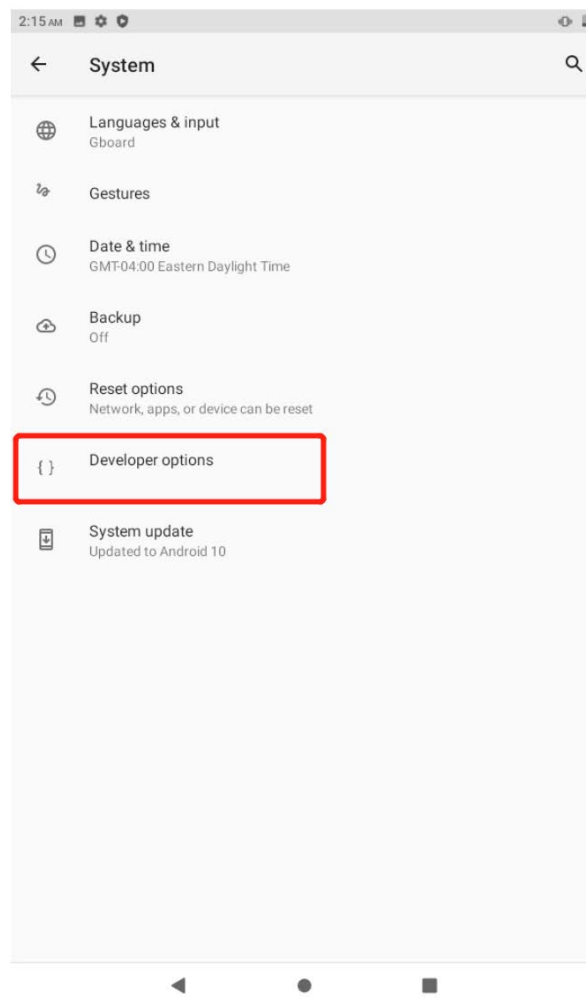

About Tablet

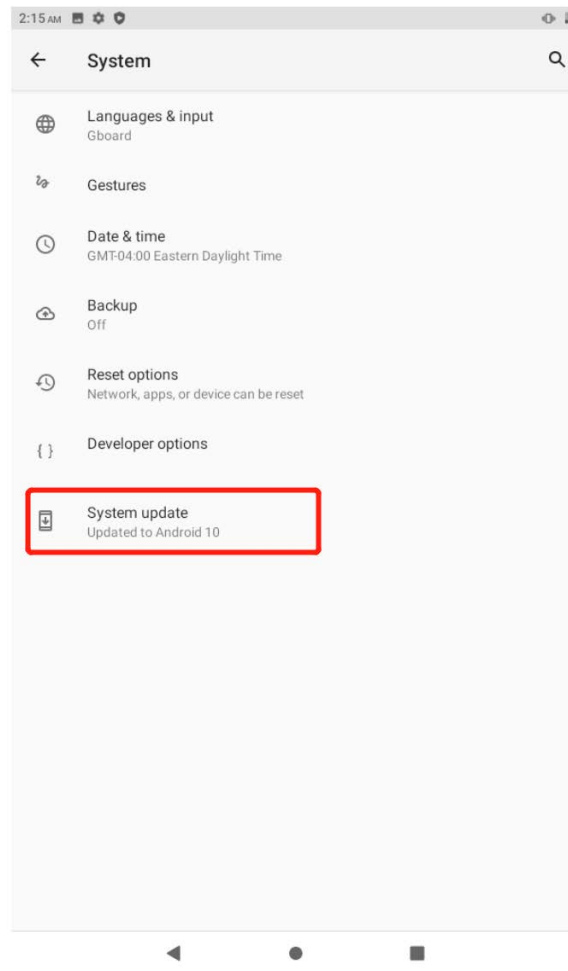 

Apps Install and Manage

App Installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click App installer icon, will appear Install, manage, Exit options.

Install: Click install, enter APK install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card .downloaded 3rd party app may not install properly on device.

Manage: click manage, enter third party interface Click install icon, will enter Action interface

Problem Solution

Device Can't to Open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, please contact with the supplier

After Startup the Screen or the Opening Picture has been Appear, the the Device Appear Shutdown

1. Power is not enough, please charge Headset can't hear the voice

2. Please check the volume whether set to 0
3. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds

Can Copy File or Play Music and So On

1. Please check between computer and device is correct connection
2. Check the memory storage space is already full
3. Check the USB cable is good or not
4. USB connection is disconnected

Basic Function

- **OS:** Android 8.1 / Android 9.0 / Android 10.1
- **CPU:** Quad-core ARM Cortex A7 processor, up to 1.3 GHz
- **RAM:** Support LPDDR3/LPDDR2. upto 533MHZ(LPDDR3), max 2G Byte
- **ROM:** Nand flash 4GB/8GB/16GB/32GB/64GB Optional
- **LCD:** 7" option HD display
- **Touch panel:** Capacitive Touch panel Optional
- **2D/3D:** Single core ARM Mali-T820, up to 600MHz
- **Graphic:** Support OperGLES1.1/2.0/3.1/3.2 3D graphic
- **WIFI Wireless:** Single band 2.4GHz, support 802.11b/g/n

1. 3G

Built-in 3G Module(option), WCDMA/HSDPA, support calling, message, WiFi ad hoc

2. TF Expansion

For optional 3G module to realize 3G communication. External MICRO SD(TF)slot, Max. 32GB TF card.

3. USB

USB high speed 2.0 .Can be connected to the computer to copy files.

4. VPU

Maximum support hardware decoding 720P and 1080i, and 480 video encoding.

5. Gravity

Built-in 3D gravity sensor, to make screen realize 360 degree rotation.

6. Audio

Support gravity sense operation game. AC97 full-duplex codec, support AAC\AMR\MP3\WMA\WAV\MIDI and so on.

7. Video

WMV/ASF/MP4/3GP/AVI/MKV/VC-1/DIVX/MPEG-2/MPEG-4 /H.263/ H,264 720P HD 1080i

8. Game

Support several of entertainment games based on Android platform.

9. Web

Support many internet applications like web, social, video, chatting and so on.

10. E-book

Assemble e-book tool to read based on Android platform.

11. Photo Frame

Built-in photo player, and take it as a photo frame or calendar.

12. Office

Support various of office software based on Android platform, to realize office functions, Such as Word\Excel\PPT\PDF.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been tested and comply with FCC SAR limits

For body-worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with a plastic case. The users must use this plastic case. The product is shipped with a plastic case (see the packing list). Use of other plastic cases may not ensure compliance with FCC RF exposure guidelines.

Documents / Resources

	DigiDragon 708Z Computer Series Tablet [pdf] User Manual 708Z, 2AW7S708Z, 708Z Computer Series Tablet, Tablet
---	--

References

- [User Manual](#)