



# digital essentials SP-0138A Citadel Mini Dancing Lights Bluetooth Speaker Instruction Manual

[Home](#) » [DIGITAL ESSENTIALS](#) » digital essentials SP-0138A Citadel Mini Dancing Lights Bluetooth Speaker Instruction Manual 



**CITADEL  
MINI DANCING LIGHTS | BLUETOOTH SPEAKER**

## Contents

- [1 Instruction Manual](#)
- [2 Product Overview](#)
- [3 Package Contents](#)
- [4 Technical Specification](#)
- [5 Power ON/OFF](#)
- [6 Wireless Connection](#)
- [7 Wired Connection](#)
- [8 Micro SD / TF Card and USB Flash Drive](#)
- [9 FM Radio Mode](#)
- [10 Answering a Call](#)
- [11 Charging your Wireless speaker](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)


## Instruction Manual

Thank you for purchasing the Citadel LED Light-Up Wireless Speaker. This manual provides more information about this wireless speaker, please read the instructions before using it.



## Product Overview

1.

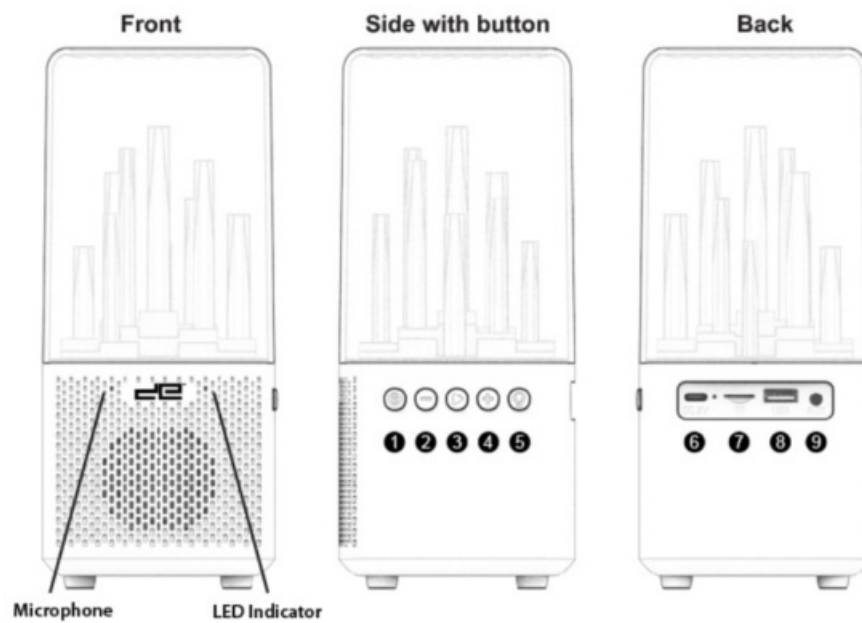

Power / Mode

2. Volume Down / Previous Song
3. Play / Pause
4. Volume Up / Next Song
5. Light Mode Control
6. USB Type-C Charging Port
7. Micro-SD Card Slot
8. USB Flash Drive Port (Not for charging)

## 9. 3.5mm Aux-In Port

### Package Contents

Citadel LED Light-Up Wireless Speaker x 1  
USB TYPE-C Charging Cable x 1  
Instruction Manual x 1

### Technical Specification

Driver Diameter: 52 MM  
Impedance: 4 Ohms  
Playing Time: 6.5 Hours  
Charging Time: 4.5 Hours  
Power Supply: Li-Ion Battery 3.7V 1800 mAh  
Bluetooth Range: 32.8 feet  
Micro SD card support up to 16GB USB Type-C Charging Cable Included

### Power ON/OFF

Power on Press the power button for 3 sec to turn ON the speaker. Power off Press the power button for 3 sec to turn OFF the speaker.

### Wireless Connection

Pair a Wireless speaker with your mobile device

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet.
2. Power on the wireless speaker.
3. Activate the Bluetooth function on your phone within range and select “**CITADEL LED SPK**” from the list shown.
4. You will hear a beep sound when pairing is successful.

### Reconnect the Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

### Wired Connection

**Connect the speaker to any audio device that has a 3.5mm audio jack in order to listen to music.**

1. Connect one end of the 3.5mm Aux-in cable on your speaker Aux-in port.
2. Plug the other end of the 3.5mm Aux-in cable into your audio device.
3. Power on your speaker.
4. Play your music track and adjust the volume by your audio device and speaker simultaneously.

•3.5mm Aux-in cable not included

### Micro SD / TF Card and USB Flash Drive

After you insert a micro SD / TF card or USB flash drive, switch on the speaker and press the Mode button repeatedly until it turns to MP3 mode with a voice notification of “MP3 mode” and plays the music automatically. Music can be controlled by pressing: Play / Pause, “+” (for a skip to the next song), and “-” (for a skip to the previous song).

## FM Radio Mode

Plug-in USB Type-C cable as FM antenna.

Press the Mode button until the speaker is changed to radio mode with a voice notification —“FM mode”.

Press and hold the Play / Pause button for 2 seconds, the speaker can search all the FM radio channels and store them automatically.

Stored channels can be switched by pressing the “+” or “-” button once. Press the Play / Pause button once to mute or resume the FM radio.

If you find any FM radio stations are missing after switching to radio mode, please search all the stations again.

Press the Mode button repeatedly, the speaker will switch between Bluetooth mode, MP3 mode, and radio mode cyclically.

## Answering a Call

Press the Play / Pause button to answer a phone call.

Press the Play / Pause button again to end the call.

Press and hold the Play / Pause button to reject the call

### NOTE:

- For best performance, stand within 1ft. (30cm) from the speaker and face the microphone during your call.

## Charging your Wireless speaker

1. Use the USB Type-C charging cable provided with this wireless speaker.
2. Connect the USB Type-C plug to USB Type-C charging port on the speaker, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The light will turn red while charging and will turn off once fully charged.

### NOTE:

- You must select a qualified charger from a regular manufacturer.
- You must charge the Wireless speaker if it has been not used for more than 6 months.



## FAQ

- **If the wireless speaker cannot be paired with your device, please try the following:**

Ensure that your speaker is in pairing mode or reconnection mode. Ensure that the Bluetooth search function of your mobile device is activated.

- **If the wireless speaker cannot be recharged:**

If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.



#### Safety instructions for the lithium battery and charging the product

- The input voltage to the product is DC 5V 1A.
- In order to charge the product in a safe manner and reliable conditions, please only adopt a certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F.
- Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire.
- Switch off the product after use
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of the Lithium battery packs can lead to an explosion, heat generation, fire development, or smoke development.

#### FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement: The device has been evaluated to meet the general RF exposure requirements. This equipment should be installed and operated with a minimum distance of 20cm between the radiator& your body.



FCC ID: 2ADM5-SP-0138A

DISTRIBUTED BY: MI DWOOD BRANDS, LLC

500 VOLVO PARKWAY, CHESAPEAKE, VA 23320

MADE IN CHINA

**Keep All Relevant Information for Future Reference**



Documents / Resources

	<a href="#">digital essentials SP-0138A Citadel Mini Dancing Lights Bluetooth Speaker</a> [pdf] Instruction Manual SP-0138A, SP0138A, 2ADM5-SP-0138A, 2ADM5SP0138A, SP-0138A Citadel Mini Dancing Lights Bluetooth Speaker, SP-0138A, Citadel Mini Dancing Lights Bluetooth Speaker
---	--

[Manuals+](#).