



DIGITAL WATCHDOG DWC-P230WMW IP Camera Vari Focal Lens User Guide

[Home](#) » [DIGITAL WATCHDOG](#) » DIGITAL WATCHDOG DWC-P230WMW IP Camera Vari Focal Lens User Guide



DIGITAL WATCHDOG DWC-P230WMW IP Camera Vari Focal Lens User Guide



Contents

1 WHAT'S IN THE BOX

2 STEP 1 – PREPARING TO MOUNT THE CAMERA

3 STEP 2 – POWERING THE CAMERA

4 STEP 3 – INSTALLING THE CAMERA

5 STEP 4 – CABLING

6 STEP 5 – MANAGING THE SD CARD

7 STEP 6 – DW® IP FINDER™



 

 
8 STEP 6 – WEB VIEWER

9 Documents / Resources

9.1 References

10 Related Posts

WHAT'S IN THE BOX

Quick setup and download guides		1	Star Wrench (T-20)		1
PoE injector		1	Moisture absorber and installation guide (recommended)		1 set
Terminal block		1			

ACCESSORIES REQUIRED TO INSTALL THE CAMERA (SOLD SEPARATELY)

Wall mount bracket: DWC-P230WMW

Ceiling mount bracket: DWC-P230MW

Flush mount: DWC-P230FMW

Parapet mount: DWC-PZPARA

NOTE: Mounting accessories are required and sold separately.

NOTE: Download all your support materials and tools in one place.

 
1. Go to: <http://www.digital-watchdog.com/resources>
2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
3. Click 'Search'. All supported materials, including manuals and quick start guide (QSGs) will appear in the results



Attention: This document is intended to serve as a quick reference for the initial set up. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

STEP 1 – PREPARING TO MOUNT THE CAMERA

1. The mounting surface must bear five times the weight of your camera.
2. Avoid allowing cables to become pinched or abraded during installation. If the plastic wire jacket of the electrical line is damaged, it could result in an electrical short or fire.
3. Before the installation, remove the lens protection cap and tape.
4. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

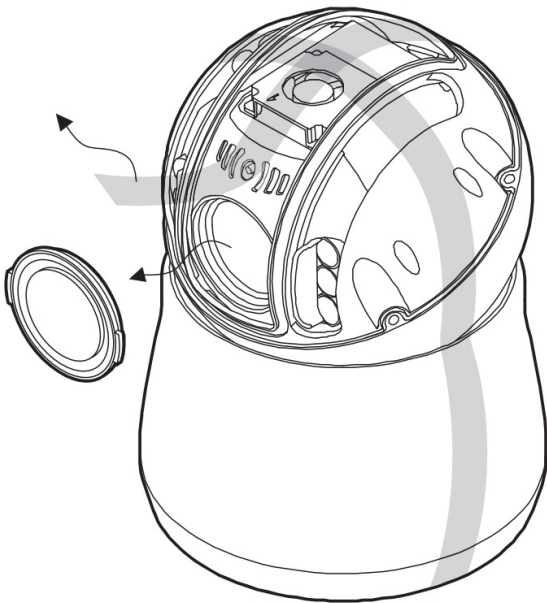


5. Ensure that this product is supplied power by a UL Listed Power Supply Unit marked "Class 2" or "LPS" or "PS2" and rated 24Vac, 1.46A min or 24 Vdc, 1.67A or Poe(802.3bt) 0.88A min.
6. The wired LAN hub providing power over the Ethernet (Poe) in accordance with IEEE 802.3bt shall be a UL Listed device with the output evaluated as a Limited Power Source as defined in UL60950-1 or PS2 as defined in UL62368-1.
7. Unit is intended for installation in a Network Environment 0 as defined in IEC TR 62102. As such, associated Ethernet wiring shall be limited to inside the building.
8. Install the moisture packet in the base of the camera module. a. Remove the moisture absorber from the packaging. b. Place the moisture absorber under the camera's lens module as shown in the picture on the

right.

NOTE: The camera will generate enough heat to dry moisture during operation. In most cases it will not need the moisture absorber for more than the first day. In cases where the camera can experience moisture issue, users must keep the moisture absorber in the camera. The moisture absorber has an approximately 6-month lifecycle, varying depending on the environment.

WARNING: It is highly recommended that you install the moisture absorber when mounting the camera. The moisture absorber prevents moisture from being captured inside the camera's housing, which may cause image performance issues and damage the camera

 9. The camera requires a mounting accessory, sold separately, to complete the installation. Using the accessory's mounting template, mark and drill the necessary holes in the mounting surface.

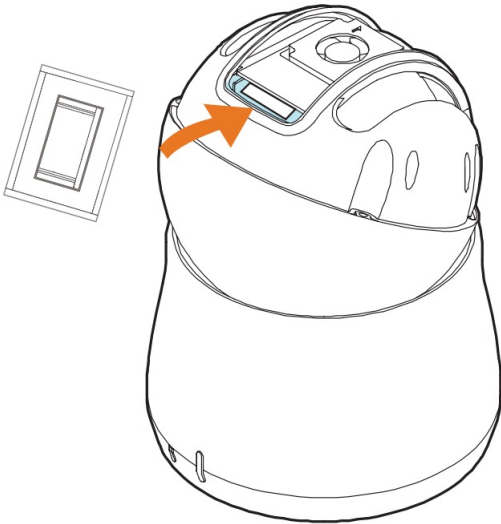

STEP 2 – POWERING THE CAMERA

Pass the wires through and make all necessary connections. See STEP 4 for more information.

1. When using a PoE Switch or the PoE injector included with the camera, connect the camera using an Ethernet cable for both data and power.
2. When not using a PoE Switch or the PoE injector included with the camera, connect the camera to the switch using an Ethernet cable for data transmission and use a power adapter to power the camera.


Power requirements

PoE IEEE 802.3bt class5
(PoE injector included),
DC24V, AC24V


Power consumption

DC24V: 40W, 1666mA
AC24V: 35W, 1485mA
PoE: 42W, 1750mA

 
STEP 3 – INSTALLING THE CAMERA

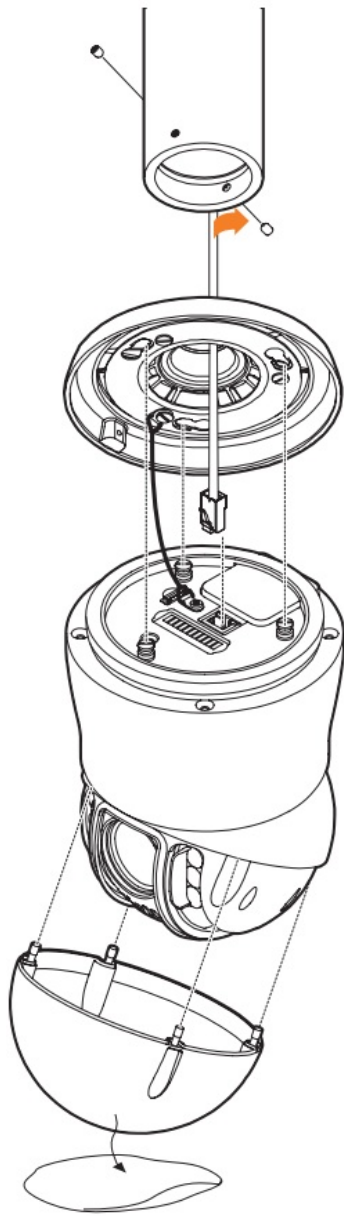

 1. Install the mounting accessory (sold separately) to the mounting surface according to the installation guide.
2. Pass wires through the mounting bracket.
3. Connect the camera's base into the mounting accessory's neck, and secure using the screws on the side of the mounting accessory neck.
4. Open the camera's base by rotating the base clockwise to the unlock position. Make sure the camera's safety wire is connected between the camera base and the camera module.

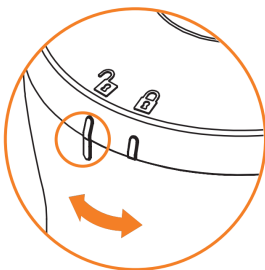


UNLOCK

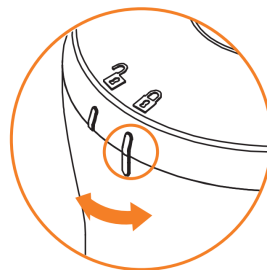 

LOCK


5. Connect all wires to the camera. See STEP 2 and STEP 4 for more information.
6. Attach the camera's body to the base and mounting accessory by rotating the base counter-clockwise to the lock position.
7. Place the dome on the camera module by securing the screws at the base of the dome.

 8. Remove the protection film when the installation is complete.

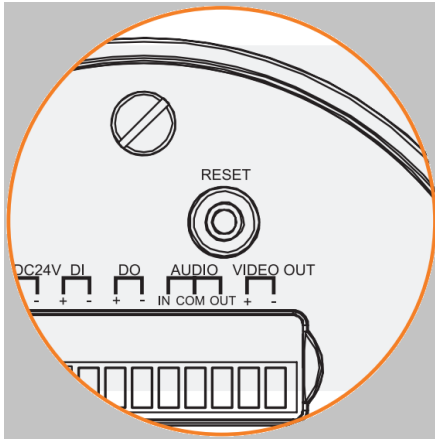

Resetting the camera: To reset the camera, press the reset button in the control board at the base of the camera. Pressing the button for five (5) seconds will initiate a camera-wide reset of all the settings, including the network settings

 STEP 4 – CABLING

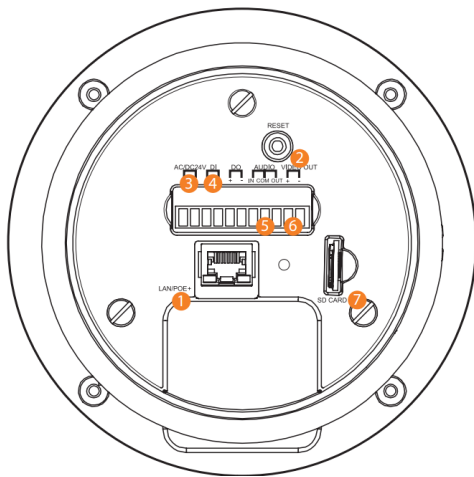


No	Connector	Description
1	Network connection	To connect an RJ45 cable to the camera. See STEP 2
2	Reset button	Reset the camera to its default settings
3	Power	When using a non-PoE switch, connect the camera to an adequate power adapter to power the camera.
4	Alarm input and output	Connect an external sensor input and alarm output to the camera's terminal block
5	Audio input and output	Use the camera's audio-in port to connect a microphone or "line out" port of an amplifier.
6	Video output	Use the local video output for a camera image preview during the installation.
7	SD card slot	Insert an SD card for local recording. Set STEP 5

STEP 5 – MANAGING THE SD CARD

Use the diagram below to connect external devices such as audio and alarm inputs and outputs to the camera.

 1. To install the camera's SD Card, locate the SD card slot at the base of the camera.
2. Insert a class 10 SD card into the SD card slot by pressing the SD card into the slot until it clicks into position.
3. To remove the SD card, press the card inward to release it from the card slot.

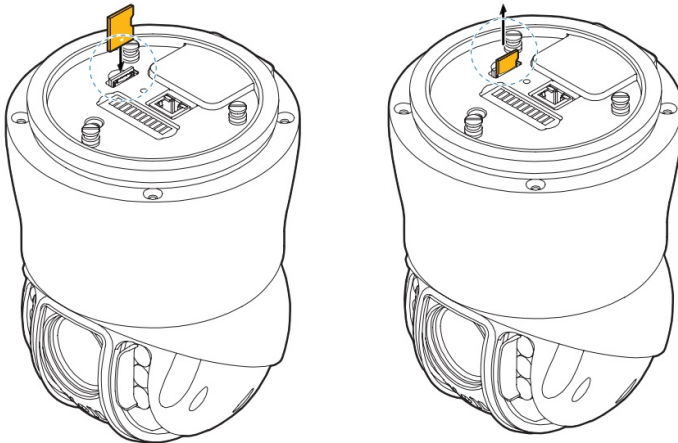

STEP 6 – DW® IP FINDER™

Use the DW® IP Finder™ software to scan the network and detect all MEGApix® cameras, set the camera's network settings or access the camera's web client

Thumbnail view

Select network to scan: Local Area Connection [192.168.8.186]

Filter results: All

Scan network

Show/hide thumbnail view: Thumbnail

Refresh thumbnail view

Bulk IP assignment

Bulk password assignment

Firmware upgrade

Selected camera's username and password

Thumbnail	Name	IP Address	Model	MAC Address	Netmask	Gateway	Port	DHCP	Version	Ping Test	IP Config	Uptime
	DWC-MPT230X	192.168.150.3	DWC-MPT230X	00:07:0B:19:10:1A	255.255.255.0	192.168.150.1	80	Disabled	1.9.94-X2_release	Ping	OK	28day 14hrs 1mins
	DWC-MV44WA	192.168.150.4	DWC-MV44WA	00:00:F1:21:53:8F	255.255.255.0	192.168.150.1	80	Disabled	A2.01.02_20180619	Ping	OK	39day 13hrs 54mins
	DWC-PZ21M69T	192.168.150.4	DWC-PZ21M69T	00:00:F1:21:29:21	255.255.255.0	192.168.150.1	80	Disabled	A5.01.03_20180403	Ping	OK	56day 16hrs 46mins
	DWC-PVX16V4	192.168.150.4	DWC-PVX16V4	00:00:F1:21:5C:AD	255.255.255.0	192.168.150.1	80	Disabled	52.01.03_20180309	Ping	OK	56day 16hrs 46mins
	DWC-P9M1T8R	192.168.150.61	DWC-P9M1T8R	00:0A:81:1A:00:14	255.255.255.0	192.168.150.1	80	Disabled	-	Ping	OK	---
	DWC-PV9M2T8R	192.168.150.62	DWC-PV9M2T8R	00:0A:81:1A:26:E7	255.255.255.0	192.168.150.1	80	Disabled	-	Ping	OK	---
	DWC-MF44WA	192.168.150.63	DWC-MF44WA	00:00:F1:20:FB:00	255.255.255.0	192.168.150.1	80	Disabled	A2.01.02_20180619	Ping	OK	28day 14hrs 0mins

Firmware version

Camera's uptime

Open IP configuration settings

Ping camera

Camera's network information

Camera's name, IP and MAC addresses

 
Network Setup

1. To install the DW IP Finder, go to: <http://www.digital-watchdog.com>
2. Enter "DW IP Finder" on the search box at the top of the page.
3. Go to the "Software" tab on the DW IP Finder page to download the installation file.
4. Follow the installation to install the DW IP Finder. Open the DW IP Finder and click 'Scan Devices'. It will scan the selected network for all supported devices and list the results in the table. During the scan, the DW® logo will turn gray.
5. When connecting to the camera for the first time, a password must be set. To set up a password for your camera:
 1. a. Check the box next to the camera in the IP Finder's search results. You can select multiple cameras.
 2. b. Click "Bulk Password Assign" on the left.
 3. c. Enter admin/admin for the current username and password. Enter a new username and password to

the right.

Passwords must have a minimum of 8 characters with at least 4 combinations of uppercase letters, lowercase letters, numbers and special characters. Passwords cannot contain the user ID.

4. **d.** Click “change” to apply all changes.
6. Select a camera from the list by double-clicking on the camera’s image or click on the ‘Click’ button under the IP Conf. column. The pop-up window will show the camera’s current network settings, allowing admin users to adjust the settings as needed.

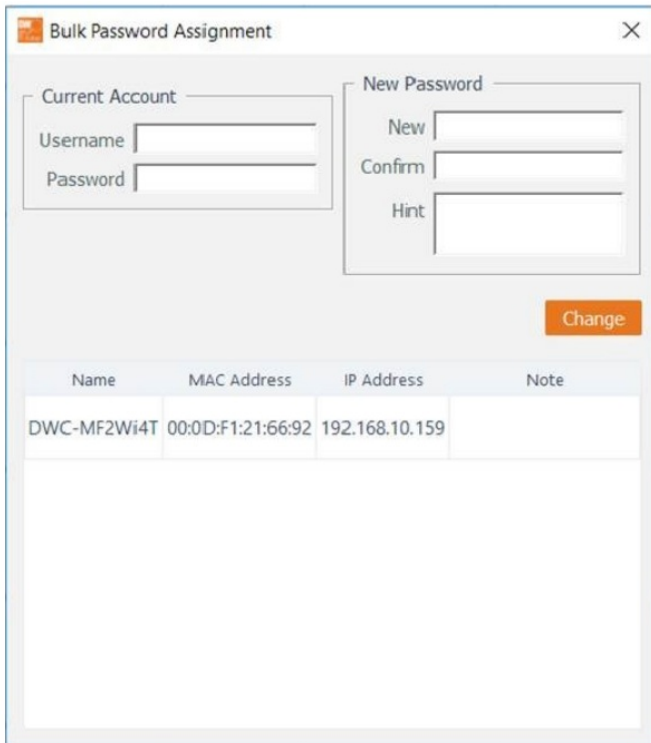

The image shows a 'Bulk Password Assignment' window. It contains two main sections: 'Current Account' and 'New Password'. The 'Current Account' section has fields for 'Username' and 'Password'. The 'New Password' section has fields for 'New', 'Confirm', and 'Hint'. Below these sections is an orange 'Change' button. At the bottom of the window is a table with four columns: 'Name', 'MAC Address', 'IP Address', and 'Note'. The table contains one row with the following data: 'DWC-MF2Wi4T', '00:0D:F1:21:66:92', '192.168.10.159', and an empty 'Note' field.

Name	MAC Address	IP Address	Note
DWC-MF2Wi4T	00:0D:F1:21:66:92	192.168.10.159	

7. To access the camera’s web page, click on the ‘View Camera Website’ from the IP Config window.
8. To save changes made to the camera’s setting, enter the username and password of the camera’s admin account and click ‘Apply’
 1. Select DHCP to allow the camera to receive its IP address automatically from the DHCP server.
 2. Select “Static” to manually enter the camera’s IP address, (Sub)Netmask, Gateway and Disinformation.
 3. The camera’s IP must be set to static if connecting to Spectrum® IPVMS. Contact your network administrator for more information
 4. Default TCP/IP information: DHCP.
 5. Port forwarding must be set in your network’s router to access the camera from an external network.

Camera Settings

Camera Name

DWC-MD421TIR

MAC Address

00:0D:F1:20:A4:9E

IP Configuration Mode

☒ DHCP
 ☐ Static IP

IP Address

192.168.1 .101

Netmask

255.255.255.0

Gateway

192.168.1 .1

DNS

192.168.40 .1

Ports

Web Port

80

Control Port

0

Video Port

0

Audio Transmit

0

Audio Receive

0

Username

admin

Password

•••••

Restore default camera configuration

 
View Camera Website

Apply

Reboot

Cancel

STEP 6 – WEB VIEWER

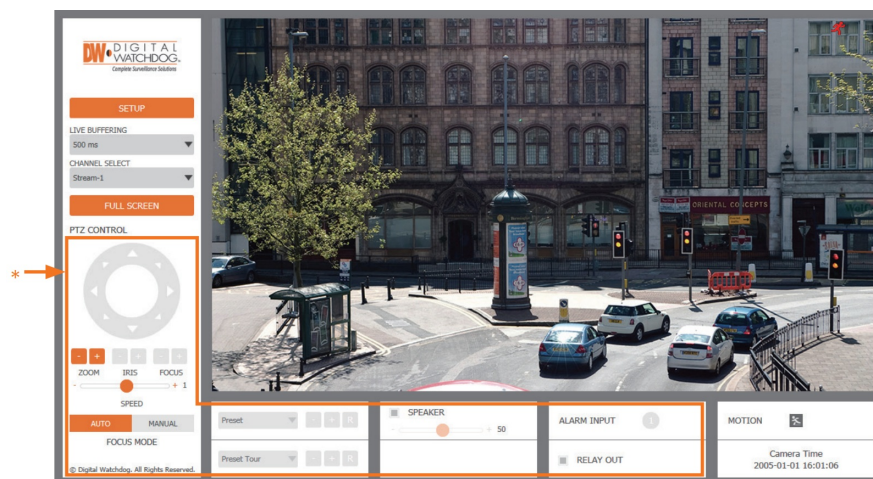

Once the camera's network settings have been setup properly, you can access the camera's web viewer using the DW® IP Finder™.

To open the camera's web viewer:

1. Find the camera using the DW® IP Finder™.
2. Double-click on the camera's view in the results table.

3. Press the 'View Camera Website'. The camera's web viewer will open up in your default web browser.
4. Enter the camera's username and password you setup in the DW® IP Finder™. If you did not setup a new username and password via the DW® IP Finder™, you will not be able to view the video from the camera. A message will direct you to setup a new password for the camera to view the video.

5. When accessing the camera for the first time, install the VLC player for web files to view video from the camera.

NOTE: Some menu options may not be available based on the camera model. See the full manual for more information.

NOTE: Please see the full product manual for web viewer setup, functions and camera settings options.

Copyright © Digital Watchdog. All rights reserved.
Specifications and pricing are subject to change without notice

Technical Support Hours:

9:00AM – 8:00PM EST, Monday through Friday

Tel: +1 (866) 446-3595 / (813) 888-9555

digital-watchdog.com



Documents / Resources

	<p>DIGITAL WATCHDOG DWC-P230WMW IP Camera Vari Focal Lens [pdf] User Guide DWC-P230WMW, DWC-P230CMW, DWC-P230FMW, DWC-PZPARAM, DWC-P230WMW IP Camera Vari Focal Lens, DWC-P230WMW, IP Camera Vari Focal Lens, Vari Focal Lens, Focal Lens, Lens</p>
--	---

References

- [DW Digital Watchdog I Welcome](#)
- [DW Digital Watchdog I Welcome](#)
- [DW Resources](#)

Manuals+.