

DIGITALAS YET610 Universal Infrared Sensors User Guide

Home » DIGITALas » DIGITALAS YET610 Universal Infrared Sensors User Guide 🖺



Contents

- 1 DIGITALAS YET610 Universal Infrared Sensors
- **2 TECHNICAL SPECIFICATIONS**
- **3 CONNECTING THE SENSOR**
- **4 MOUNTING THE SENSOR**
- **5 Documents / Resources**
- **6 Related Posts**



DIGITALAS YET610 Universal Infrared Sensors






MODEL: YET610

TECHNICAL SPECIFICATIONS

- Technology Infrared RECEVER
- RANGE 15m
 - Range can be reduced to 30% in bad weather conditions:for,rain, dust,etc.
- Infra-Red Frequency 1.92 KhZ
- POWER SUPPLY 12 to 24V DC/AC
- WAVE LENGTH 940nm
- INPUT RX 15mA TX 30mnA
- OPERATING TEMPERATURE-10C to 70C
- RELAY OUTPUT TA max 36V
- **DIMENSIONS** 100X35X40MM

CONNECTING THE SENSOR

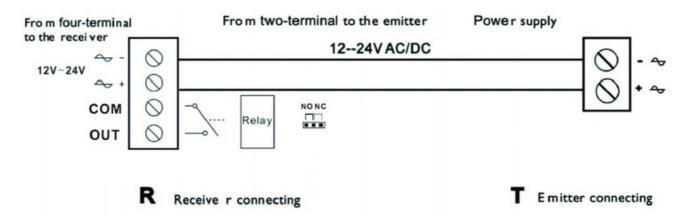


Installation

The best install height should big in 20 cm, install distance to be no smaller than 2 meters. Install should make red outside the protection equip perpendicularity to place.and is on-line at same level. Install should install first to receive part, and install the blast-off part again. When together at always a line. receive the OFF light in the machine In order to put out, then fix. connect the line to install completion namely.

Attention:

Because this product's shoot power compare big, so when the shoot machine with receives the machine distance too near an hour will appear to have no phenomenon of reaction, at this time should draw back one meter at least behind again try. When installing distance very near, discover not an intelligent phenomenon, can shoot and receive the medium of the condensing lens removed, can immediately raise an intelligent degree.

MOUNTING THE SENSOR

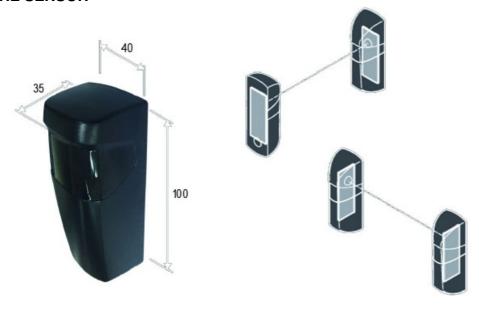

Rotation through 180Ű allows the alignment of the photocells irrespective of the way they are fixed to the base

Documents / Resources



DIGITALAS YET610 Universal Infrared Sensors [pdf] User Guide

YET610 Universal Infrared Sensors, YET610, Universal Infrared Sensors, Infrared Sensors, Sensors

Manuals+,