



digitech 2-in-One Waterproof 360 Speake XC5242 User Manual

[Home](#) » [Digitech](#) » digitech 2-in-One Waterproof 360 Speake XC5242 User Manual 

digitech



**2-In- Waterproof 360° Speaker
with Bluetooth® Technology**

User Manual XC5242

Contents

- 1 [Box Contents: x](#)
- 2 [Features:](#)
- 3 [Product Diagram:](#)
- 4 [Bluetooth Pairing](#)
- 5 [Specifications:](#)
- 6 [Frequently Asked Questions:](#)
- 7 [Documents / Resources](#)
 - 7.1 [References](#)
- 8 [Related Posts](#)

Box Contents: x

1×2 In-Waterproof 360° Speaker
1 ×2-Way USB Charging Cable

 
Features:

- 2-In-1 Separated Speaker Design
- 360° Stereo Surround Sound
- True Wireless Stereo (TWS)
- Waterproof
- Rechargeable Battery
- Hands-free Calls


Product Diagram:



Bluetooth Pairing


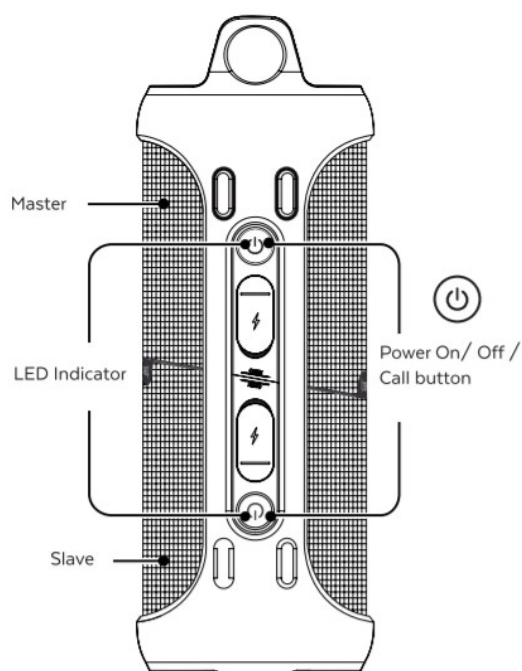


Step 1 – Power On :


Press and hold both the power button  of the master and slave speaker simultaneously for up to 2 seconds. The speaker will turn on, and you will hear a beeping sound. The LED indicator of the bottom (slave) speaker will stay blue and the top (master) speaker will begin flashing.

Step 2 – Pair Your Smartphone:

  Open your smartphone settings and ensure Bluetooth® is enabled. Scan for devices and “Digitech XC5242” will appear. Once it appears; press the button and the speaker will connect.

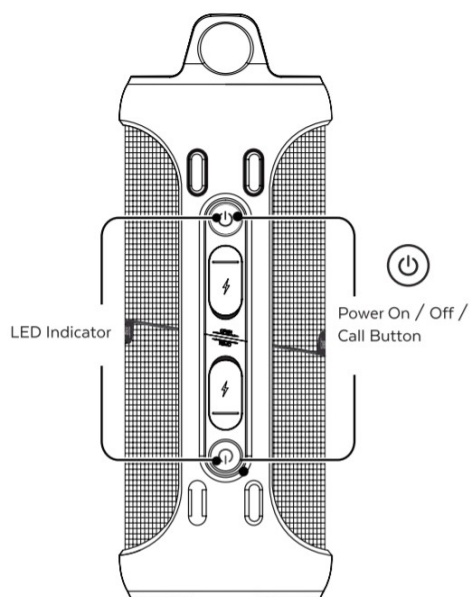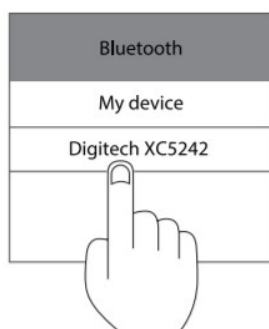

 Step 3 – Pairing Successful: The blue LED indicator will stay lit once the pairing is complete, you can now start playing music.

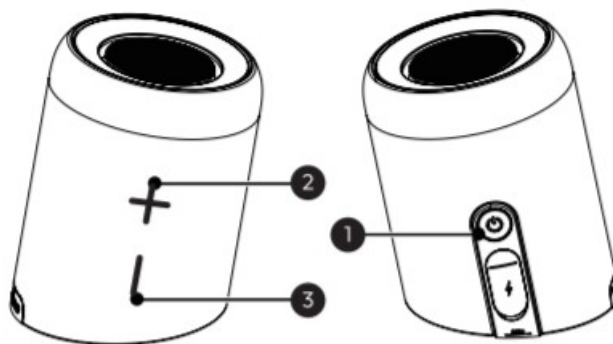

Bluetooth® Operation:

Power On/Off / Call Button:

Power: Press and hold the power button ❶ for up to 2 seconds to power on and off

Play/Pause: Press the power button ❶ to play or pause

Accept Incoming Calls: Press the power button ❶ to answer an incoming call

Refuse Incoming Calls: Press the power button ❶ twice to reject a call

Hang Up: Press the power button ❶ to hang up the call once you have already accepted it

Volume Up/Next Track:

Volume Up: Press the volume up button to turn the music up

Next Track: Press and hold the volume up button to skip to the next track

Volume Down/Previous Track:

 
Volume Down: Press the volume down button to turn the music down

Previous Track: Press and hold the volume down button to skip to the previous track

TWS Disconnect: Press the power button three ❶ times to disconnect the TWS pairing.

Bluetooth® Disconnect: Press the power button ❶ two times to disconnect the current Bluetooth® device connected


Note: The volume buttons on both speakers control the main volume no matter which speaker you control while they're both connected.

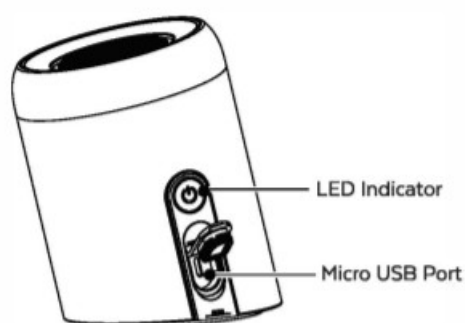


LED Status Indicator:

LED	Description
Blue Flashing	Bluetooth Pairing, Out Of Bluetooth Range
Blue On	Bluetooth Connected Successfully
Red On	Charging
Red Flashing	Low Battery
LED Off	Fully Charged, Power Off

 True Wireless Stereo (TWS) Pairing:

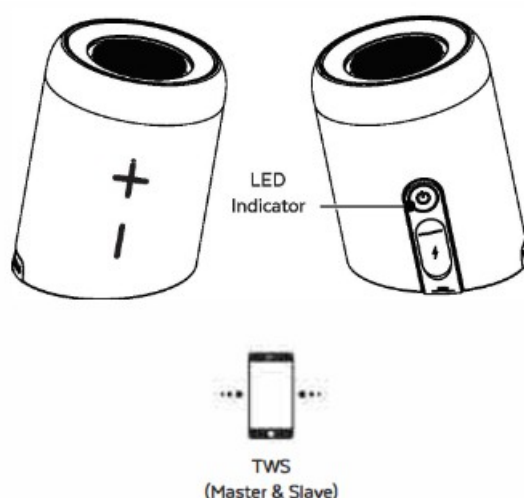

By default, the speaker is connected as one which can be controlled by the main volume buttons on the front of the speaker. If you take off the silicon rubber cover, twist and rotate the speakers to separate them into twin speakers providing you true left and right stereo audio.

Press and hold the power button  simultaneously on both speakers for up to two seconds. It will connect automatically to one another once the Bluetooth is successful. You can also just turn on one speaker if you prefer and control it using the power and volume buttons.

Specifications:

Bluetooth® Version:	5.0
Output Power:	15WRMS (2 x 7.5WRMS)
Transmission Range:	Up to 10m
Frequency Response:	68Hz-20KHz
IP Rating:	IPX7
Playback Time:	3-15 Hours
Charging Time:	3-4 Hours
Battery:	Li-ion 3.7V, 1500mAh x 2
Power:	5VDC, 1A (Micro B USB)
Power Consumption:	500mA(Max)
Dimensions:	210(H) x 84(Dia)mm

Frequently Asked Questions:

Q. What USB Charger should I use?

A. Any 5VDC, 1A USB mains power adaptor can be used or a standard USB 500mA computer port.

Q. Why is there background noise when playing music?

A. The speaker has a Bluetooth® range of up to 10m, reduce the distance to improve the sound coming from the speaker.

Q. Why does the speaker shut down when it's working?

A. When there is no Bluetooth® device paired, the speaker will automatically shut down after 10 minutes to save battery.

Q. Why won't the speaker connect to a phone that has been previously paired?

A. Remove the speaker's pairing name "Digitech XC5242" from the Bluetooth® device list of your smartphone. Press the Bluetooth® disconnection button to restart the pairing mode.

Q. Why won't the speaker turn on?

A. Please leave the speaker plugged into a charger and try to turn it on after a few minutes due to a flat battery.

Distributed by:

TechBrands by Electus Distribution Pty. Ltd.

 
320 Victoria Rd, Rydalmere NSW 2116 Australia

Ph: 1300 738 555 Int'l: +61 2 8832 3200 Fax: 1300 738 500

www.techbrands.com

Made in China

Documents / Resources



[digitech 2-in-One Waterproof 360 Speaker XC5242](#) [pdf] User Manual
2-in-One, Waterproof 360, Speaker, XC5242, digitech

References

- [🌐 Electus Distribution - Home](#)