



## DIGITECH Mini LED Disco Ball User Manual

[Home](#) » [Digitech](#) » DIGITECH Mini LED Disco Ball User Manual 

### Contents

- [1 DIGITECH Mini LED Disco Ball User Manual](#)
- [2 Mini LED Disco Ball User Manual SL-3513](#)
  - [2.1 #](#)
  - [2.2 Feature:](#)
  - [2.3 Description:](#)
- [3 Operation:](#)
- [4 Specifications:](#)
- [5 Read More About This Manual & Download PDF:](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## DIGITECH Mini LED Disco Ball User Manual



### Mini LED Disco Ball User Manual SL-3513

#	Feature:	Description:
1	LED Cover	Protects the LEDs
2	LEDs	3 x 1 W RGB LEDs rotate 360° automatically or by sound activation
3	DC Power Socket	Connect to a 12VDC mains power supply (not included) with 2.5mm DC plug
4	Adjustable Knob	Allows you to adjust the angle of the light
5	On/Off Switch	Press to turn the light on or off
6	USB Power Socket	Connect to the Micro B USB charging cable and suitable USB power source
7	Battery Compartment	Insert 3 x AA alkaline batteries (not included) to power the unit
8	Suction Mount Clip	Allows you to lock the suction mount in place
9	Suction Cup Mount	Unscrew the base stand to find the suction cup mount for attaching to a window or glass
10	Base Stand	2-in-1 base stand that also includes a suction cup mount inside

### Operation:

1. Insert 3 x AA batteries (not included) in to the battery compartment located at the bottom of the mini disco ball.
2. If you wish to power the unit permanently; you can connect the micro B USB power cable to the USB power socket of the mini disco ball. The opposite end of the USB charging cable needs to be plugged into a suitable SVDC USB mains power adaptor or a USB port of a computer or power bank.
3. Alternatively you can connect a 12VDC mains power adaptor (not included) with a 2.5mm DC plug to power the unit. This is not required if you're powering the unit by USB or batteries.
4. Push the power switch to on in order for the mini disco ball to start working automatically.

