



digitech SL-3540 3 in 1 Ball Laser and Strobe Party Light User Manual

[Home](#) » [Digitech](#) » digitech SL-3540 3 in 1 Ball Laser and Strobe Party Light User Manual 

Contents

- [1 digitech SL-3540 3 in 1 Ball Laser and Strobe Party Light](#)
- [2 Box Contents](#)
- [3 Product Diagram](#)
- [4 Installation](#)
- [5 Operation](#)
- [6 Remote Control](#)
- [7 Safety](#)
- [8 Specifications](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

digitech

digitech SL-3540 3 in 1 Ball Laser and Strobe Party Light



Box Contents

- 1 x 3-In-1 Party Light
- 1 x Infrared Remote Control 1 x Mounting Bracket
- 1 x Mains Power Cable
- 2 x Laser Lock Keys

Product Diagram



#	Feature:	Description:
1.	Laser	Red and green twin lasers
2.	Ball Light	Displays red, green, blue and white colours
3.	Fan (Rear)	Helps cool the party light
4.	Mains Power Socket (Rear)	Connect the mains power cable to the power socket located on the rear of the unit and plug into a 240VAC wall socket
5.	Adjustable Knob	Adjust the tightness for the mounting bracket
6	Infrared Port	Used for the infrared remote control
7.	Mode Switch	Select between automatic and sound activated modes
8.	On/Off Power Switch (Rear)	Press to switch the power on and off
9.	Microphone (Rear)	Listens to the beat of the music for sound activation mode
10.	LED's	Includes 8 LED's which flash red, green, blue and white

Installation

1. Unscrew the adjustable knobs on each side of the party light.
2. Attach the mounting bracket and align it with the screw holes.
3. Insert the adjustable knobs on each side and tighten in place.

Note: It is suggested to use a safety cable and attach it the safety rope ring located on the rear of the unit when attaching to a lighting stand.

4. Insert the mains power cable in to the rear power socket of the unit and the opposite end of the cable to a 240VAC mains wall socket.

Operation

1. Press the power switch located on the rear of the unit to on.
2. Press the mode switch to automatic if you wish for the party light to operate automatically and cycle through the disco ball, laser and strobe LEDs.
3. Press the mode switch to sound activation if you wish for the party light to operate to the beat of music played nearby.

Remote Control

Feature:	Description:
Power	Press to turn the unit on or off
Mode	Change between automatic and sound activation modes
Sen+ / Sen-	Press to increase or decrease the light sensitivity
Flash	Press to activate the flashing of the strobe light
Speed+ / Speed-	Press to increase or decrease the flashing of the strobe light
Laser	Press to activate the laser light
Colour	Select the colour between red and green lasers
Speed	Press to change the speed of the lasers
LED	Press to select the disco ball LED
Red / Green / Blue / White	Press to select between the different colours of the LEDs
Jump	Press to jump between one colour to another for the disco ball LED
Gradual	Press to change the colour slowly for the LED disco ball
Flash	Press to change the flash of the disco ball LED
Motor	Change the motor speed of the LEDs

Safety

1. Do not open the case of the party light to avoid damage and injury.
2. Keep the party light away from high temperatures as it may cause damage to the unit.
3. Do not expose the party light to water or liquids to prevent the unit from damage.
4. The unit must be installed in a well ventilated area.
5. It is suggested to use a safety cable when fixing this unit to a mounting stand or wall to prevent the unit from falling.
6. It is suggested to clean the unit's lenses every 2-3 months with a soft cloth so the unit can display the light properly.
7. Keep the remote control away from children as it contains button cell batteries which may be harmful. Contact a doctor immediately if swallowed .

WARNING

KEEP BUTTON BATTERIES OUT OF REACH OF CHILDREN

- If swallowed a lithium button battery may lead to serious or fatal injury in as little as 2 hours, due to chemical burns and potential perforation of the oesophagus.
- Non-lithium button batteries can cause serious injuries if it is swallowed or placed inside any part of the body.
- All button batteries must be kept away from children regardless if they are new or used.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons

Information Centre on 13 11 26 (Australia) or 0800 764 766

(New Zealand) for fast, expert advice.


- If your child is having difficulty breathing contact 000 (Australia) or 111 (New Zealand).
- Dispose of used button batteries immediately and safely out of the reach of children. A battery can still be dangerous even when it can no longer operate the device.
- As soon as you have finished using a button battery, put sticky tape around both sides of it. This will make it harder for children to swallow the button battery and avoid the risk of the battery catching fire.

Immediately dispose of button batteries immediately out of reach of children, or recycle using a child resistant container and take used cells to your local battery collection centre.

Specifications

- LED: 8 x 1 W RGBW (Strobe) 4 x 3W RGBW (Ball)
- Laser: 120mW (Red), 30mW (Green)
- Modes: Automatic, Sound Activated
- Remote Control Battery: 1 x CR2025 (Included) Power: 240VAC, 50-60Hz
- Power Consumption: 30W
- Dimensions: 210(W) x 140(D) x 125(H)mm

Documents / Resources

	<p>digitech SL-3540 3 in 1 Ball Laser and Strobe Party Light [pdf] User Manual</p> <p>SL-3540 3 in 1 Ball Laser and Strobe Party Light, SL-3540, 3 in 1 Ball Laser and Strobe Party Light, Ball Laser and Strobe Party Light, Strobe Party Light, Party Light, Ball Laser Party Light, Light</p>
---	--