



digitech Turntable In Built Speakers User Manual

[Home](#) » [Digitech](#) » digitech Turntable In Built Speakers User Manual 

**digitech Turntable In Built
Speakers User Manual**



Turntable with In-Built Speakers



User Manual GE-4105

Contents

- [1 Box Contents:](#)
- [2 Product Diagram:](#)
- [3 Operation:](#)
- [4 Replacing The Stylus:](#)
- [5 Installing A New Stylus:](#)
- [6 Safety:](#)
- [7 Specifications:](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Box Contents:



1 x Turntable with In-Built Speakers

1 x 45RPM Adaptor




1 x Mains Power Adaptor

Product Diagram:



#	Feature:
1.	Plastic Lid
2.	Turntable Platter
3.	45RPM Adaptor
4.	Tonearm
5.	Lift Lever
6.	Auto & Manual Stop Switch
7.	Speed Control Adjustment
8.	Stylus
9.	In-Built Speakers
10.	Power / Volume
11.	RCA (L & R) Output
12.	5VDC Power Socket

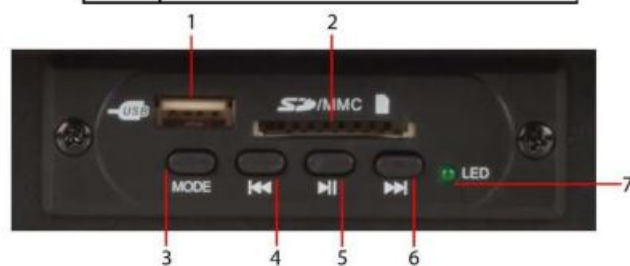

#	Feature:
1.	USB Slot
2.	SD Card Slot
3.	Mode Button
4.	Previous Track
5.	Play/Pause
6.	Next Track
7.	LED Status Indicator

Operation:

Mains Connection:

Connect the mains power adaptor to a standard 240VAC wall socket and connect the plug to the socket of the turntable.

Amp Connection:

Connect audio plugs to Alert input on your mixer or amplifier:

- Red plug into R/H channel input.

Playing Record:

- Place the record of your choice on the turntable. If it is a 45rpm, do
Not forget to place the adapter on the record spindle.
- Choose the desired playing speed using the Speed select switch between 33.3, 45 and 78rpm.
- Turn on the Rotary Power Switch.
- Release the tone arm lock.
- Push in the arm with your hand lightly.
- Place the stylus vertically over the first track of the record the turntable will start turning automatically.
- Put down the cartridge slowly to the record then the turntable will play.
- When a record comes to the end, the turntable will stop automatically if the Auto-stop switch is in the ON position. If the switch is in the off position, then it will be suitable for Long Play records.

Note:

- Lift up the tone arm and put it on the rest.
- Replace the protective cap on the stylus and close the tonearm lock.
- Turn off power at mains.

Replacing The Stylus:

-Refer to the figures 1-8



1 push the arm lock to release the tone-arm.



2 take off cap of the cartridge to expose the needle out.



3 separate the cartridge from the socket lightly.



4 take off the audio-line from the cartridges completely.




to fit a new one just in opposite deals. insert the audio-line accordingly, and install the cartridge to the socket lightly.

NOTE: Please exercise extreme care whilst performing this operation so as to avoid the tone arm and audio line wires from any damage.

Installing A New Stylus:

-Refer to the figures 5 & 6

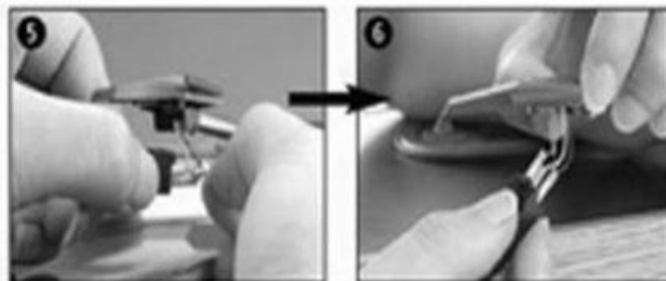

NOTES

We advise you to clean your records with an anti-static cloth to gain maximum enjoyment from them and to make them last.

We would also point out that for the same reason your stylus should be replaced periodically {approximately every 250 hours}

Dust the stylus from time to time using a very soft brush dipped in alcohol (brushing from back to front of the cartridge)

WHEN TRANSPORTING YOUR RECORD PLAYER DO NOT FORGET TO:

- Replace the protective cap on the stylus.
- Put the rest clip into the pick-up arm.

Safety:

1. Do not open the case of the turntable to avoid damage and injury.
2. Keep the turntable away from high temperatures as it may cause damage to the turntable and speakers.
3. Do not expose the turntable to water, moisture or liquids to prevent the unit from damage.
4. Make sure the mains power adaptor is connected correctly to a standard 240VAC wall socket.
5. If using a replacement or third party mains power adaptor; make sure the voltage and current match the specifications as 5VDC, 1.

Specifications:

Turntable Drive System: Belt Drive

Cartridge Type: Ceramic Stereo Stylus

Inputs: USB, SD

Output: 1 x External Speaker, 1 x RCA (L & R)

Speed: 33/45/78RPM

Speakers: 2 x 3W

Frequency Response: 160Hz-14KHz

USB/SD Capacity: Up to 32GB

Power: 5VDC, 1 A

Dimensions: 430(W) x 350(0) x 120(H)mm

Distributed by:

TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia


Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com

Documents / Resources

	<p>digitech Turntable In Built Speakers [pdf] User Manual Turntable In Built Speakers, GE-4105</p>
---	--