



## digitech USB Retro Arcade Game Controller User Manual

[Home](#) » [Digitech](#) » digitech USB Retro Arcade Game Controller User Manual

# digitech

USB Retro Arcade Game Controller



User Manual  
XC-5802

## Contents [ [hide](#)

### 1 Product Diagram:

### 2 Operation:

### 3 Turbo (TB) Function:

### 4 Safety:


### 5 Specifications:

### 6 Documents / Resources

#### 6.1 References

### 7 Related Posts

## Product Diagram:

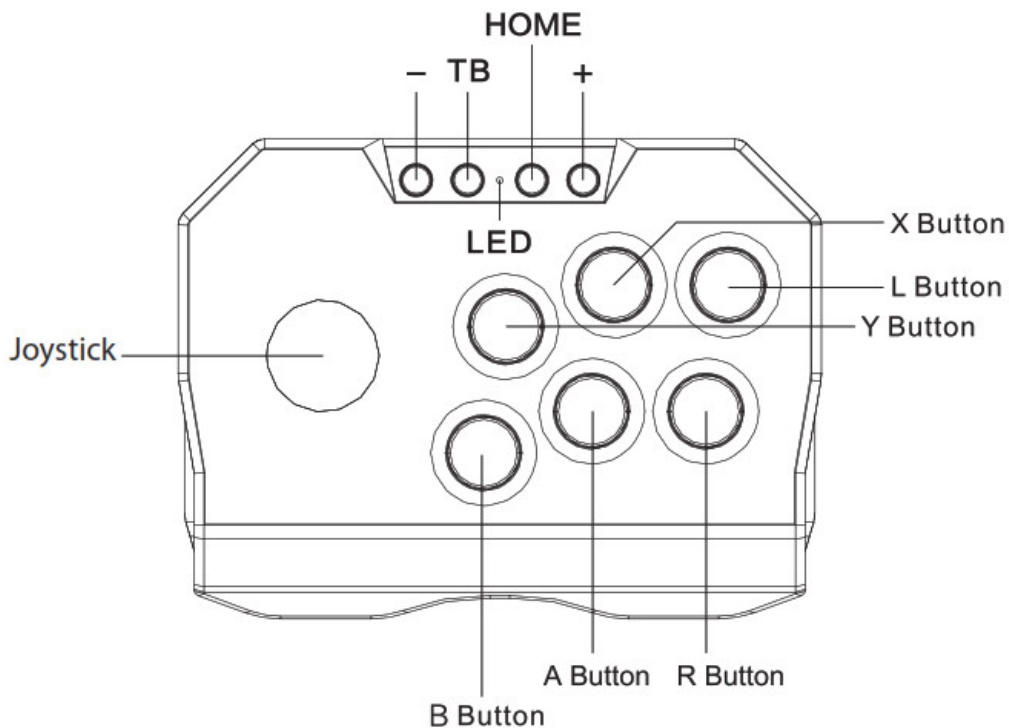

## Operation:

1. Plug the USB Cable in to a PC, Raspberry Pi, Nintendo Switch, PS3, or Android TV's USB port.

**Note: This unit may only be compatible for certain arcade games because the games have different button configurations.**

2. The LED indicator will light up to indicate that it's working.
3. If you're using it on Nintendo Switch arcade games, ensure the "Pro Controller Wired Communication" has been turned on in the settings.
4. If you're using this game controller with a PC, you can choose between D\_Input and X\_Input modes. Press the - and + button at the same time for up to 5 seconds to change the mode.

## Turbo (TB) Function:

1. Depending on which games are being played; you can press and hold the A button and then turn the TB (Turbo) button to on.
2. Press and hold the A button and the TB (Turbo) button again to turn the function off.
3. Pressing all 6 buttons can achieve turbo mode by the manual settings depending on the game type.

**Note: Once the unit restarts; the turbo function will be turned off. You will need to turn on the turbo function again.**

### Safety:

1. Do not pull apart the casing of game controller to avoid damage and injury.
2. Keep the game controller from high temperatures as it may cause damage to the unit.
3. Do not expose the game controller to water, moisture, or liquids.

### Specifications:

**Compatibility:** PC Arcade, Raspberry Pi, Nintendo Switch, PS3 Arcade & Android TV Arcade

**Connector:** USB 2.0

**Power:** 5VDC, 500mA

**Cable Length:** 3.0m

**Dimensions:** 200(W) x 145(D) x 130(H)mm

### Distributed by:

Electus Distribution Pty. Ltd.

320 Victoria Road, Rydalmere

NSW 2116 Australia

 
Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

[www.techbrands.com](http://www.techbrands.com)

### Documents / Resources

	<a href="#">digitech USB Retro Arcade Game Controller</a> [pdf] User Manual XC-5802, XC5802, Arcade, Controller
---	--

### References

- [🌐 Electus Distribution - Home](#)