

DIGITECH XC-5802 USB Retro Arcade Game Controller User Manual

Home » Digitech » DIGITECH XC-5802 USB Retro Arcade Game Controller User Manual




Contents

- 1 Product Diagram:
- 2 Operation:
- 3 Turbo (TB) Function:
- 4 Safety:
- **5 Specifications:**
- 6 Documents /

Resources

- **6.1 References**
- 7 Related Posts

Product Diagram:

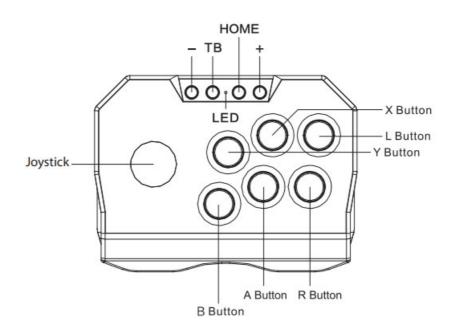

Operation:

- 1. Plug the USB cable into a PC, Raspberry Pi, Nintendo Switch, PS3, or Android TV's USB port.
 - Note: This unit may only be compatible with certain arcade games because the games have different button configurations.
- 2. The LED indicator will light up to indicate that it's working.
- 3. If you're using it on Nintendo Switch arcade games, ensure the "Pro Controller Wired Communication" has been turned on in the settings.
- 4. If you're using this game controller with a PC, you can choose between D_Input and X_Input modes. Press the and + button at the same time for up to 5 seconds to change the mode.

Turbo (TB) Function:

- 1. Depending on which games are being played; you can press and hold the A button and then turn the TB (Turbo) button to on.
- 2. Press and hold the A button and the TB (Turbo) button again to turn the function off.
- 3. Pressing all 6 buttons can achieve turbo mode by the manual settings depending on the game type.
 - Note: Once the unit restarts; the turbo function will be turned off. You will need to turn on the turbo

function again.

Safety:

- 1. Do not pull apart the casing of the game controller to avoid damage and injury.
- 2. Keep the game controller from high temperatures as it may cause damage to the unit.
- 3. Do not expose the game controller to water, moisture, or liquids.

Specifications:

Compatibility: PC Arcade, Raspberry Pi, Nintendo Switch, PS3 Arcade & Android TV Arcade

Connector: USB 2.0 Power: 5VDC, 500mA Cable Length: 3.0m

Dimensions: 200(W) x 145(D) x 130(H)mm

Distributed by:
Electus Distribution Pty. Ltd.
320 Victoria Road, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200

Fax: 1300 738 500 www.techbrands.com

Documents / Resources



<u>DIGITECH XC-5802 USB Retro Arcade Game Controller</u> [pdf] User Manual XC-5802, USB Retro Arcade, Game Controller

References

• O Electus Distribution - Home

Manuals+,