




# DIGITECH XC5169 Mini Sound Bar User Manual

[Home](#) » [Digitech](#) » DIGITECH XC5169 Mini Sound Bar User Manual 

## Contents

- 1 [DIGITECH XC5169 Mini Sound Bar](#)
- 2 [Specifications:](#)
- 3 [Packing List:](#)
- 4 [Power On/Off:](#)
- 5 [Wireless Connection:](#)
- 6 [Music Play:](#)
- 7 [Mode Switch:](#)
- 8 [Radio Mode:](#)
- 9 [Charging:](#)
- 10 [Specifications:](#)
- 11 [FAQ](#)
  - 11.1 [Q: How long does the Mini Sound Bar's battery last?](#)
  - 11.2 [Q: How long does it take to fully charge the Mini Sound Bar?](#)
  - 11.3 [Q: What is the maximum supported capacity for Micro SD/USB?](#)
- 12 [Documents / Resources](#)
  - 12.1 [References](#)
- 13 [Related Posts](#)

**DIGITECH XC5169 Mini Sound Bar**



### **Specifications:**

- Playback Time: 4-5 Hours
- Charging Time: Approx. 3 Hours
- Built-in Lithium Battery Voltage: 3.7V
- Charging Voltage: 5V 1A
- Frequency Response: 60HZ-20KHZ
- Battery Capacity: 1200mAh
- Power: 5W\*2
- Maximum Supported Micro SD/USB: 32GB
- Size: 390(W) x 55(D) x 70(H)mm

### **Packing List:**

- 1 x Rechargeable Mini Sound Bar
- 1 x USB Charging Cable
- 1 x Product Manual

### **Power On/Off:**

**Power on:** Toggle Power switch to the ON position then the speaker will turn on and indicate blue lights flashing.

**Power off:** Turn the toggle switch to the OFF position then the speaker will power off.

### **Wireless Connection:**

Power on, the speaker will enter Wireless BT mode with blue light flashing and is now ready for pairing; the

speaker's Bluetooth® Name is XC5169.

The speaker will automatically connect with the device that was connected last.

## **Music Play:**

When playing music, Short click the PLAY & PAUSE BUTTON to pause the music and then click button again to play;

When playing music, press “-” to play the previous song;

When playing music, press “+” to play the next song;

Long press “-”, the volume will decrease;

Long press “+”, the volume will increase.

## **Mode Switch:**

The speaker will enter Wireless BT mode when powered on. Insert the Micro SD card/USB then will automatically enter the Micro SD card/USB playback. Click the M button to switch between Micro SD Card/Aux/FM Radio/Wireless BT Mode.

## **Radio Mode:**

When powered on, insert the supplied charging cable into the micro USB port to act as the external antenna. The speaker enters the Wireless BT mode. Press the “M” button to enter the radio mode. Short press the pause button to enter the automatic search mode. After the search is completed, press +/- to change the radio channel.

## **Charging:**

The product has built in non-removable rechargeable battery, which can be charged by USB cable. When Speaker Charging, the red light on. The light will turn off when it is fully charged.

## **Specifications:**

Playback Time: 4-5 Hours

Charging Time: Approx. 3 Hours

Built-in Lithium Battery Voltage: 3.7V

Charging Voltage: 5V 1A

Frequency Response: 60HZ-20KHZ

Battery Capacity: 1200mAh

Power: 5W\*2

Maximum Supported Micro SD/USB: 32GB

Size: 390(W) x 55(D) x 70(H)mm

## **Distributed by:**

Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

[www.electusdistribution.com.au](http://www.electusdistribution.com.au)

Made in China

## **FAQ**

**Q: How long does the Mini Sound Bar's battery last?**

A: The Mini Sound Bar has a playback time of 4-5 hours.

**Q: How long does it take to fully charge the Mini Sound Bar?**

A: It takes approximately 3 hours to fully charge the Mini Sound Bar.

**Q: What is the maximum supported capacity for Micro SD/USB?**

A: The Mini Sound Bar supports a maximum capacity of 32GB for Micro SD/USB.


---

## Documents / Resources



**[DIGITECH XC5169 Mini Sound Bar](#)** [pdf] User Manual  
XC5169 Mini Sound Bar, XC5169, Mini Sound Bar, Sound Bar, Bar

## References

- [E Electus Distribution - Home](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.