



digitech XC5169 Rechargeable Mini Sound Bar Instruction Manual

[Home](#) » [Digitech](#) » digitech XC5169 Rechargeable Mini Sound Bar Instruction Manual 

Contents

- [1 digitech XC5169 Rechargeable Mini Sound Bar](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Power On/Off](#)
- [5 Wireless Connection](#)
- [6 Music Play](#)
- [7 Mode Switch](#)
- [8 Radio Mode](#)
- [9 Charging](#)
- [10 Specifications](#)
- [11 Packing List](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

digitech

digitech XC5169 Rechargeable Mini Sound Bar



Product Information

- **Product Name:** Rechargeable Mini Sound Bar
- **Model:** XC5169
- **Power On/Off:** Toggle Power switch to the ON position to turn on the speaker. The speaker will indicate blue lights flashing.
- **Wireless Connection:** The speaker will automatically connect with the device that was connected last.
- **Music Play:**
 1. To pause the music, short click the PLAY & PAUSE BUTTON. Click the button again to resume playing.
 2. To play the previous song, press -.
 3. To play the next song, press +.
 4. To decrease the volume, long press -.
 5. To increase the volume, long press +.
- **Mode Switch:** The speaker enters Wireless BT mode when powered on. Insert the Micro SD card/USB to automatically enter Micro SD card/USB playback. Click the M button to switch between Micro SD Card/Aux/FM Radio/Wireless BT Mode.
- **Radio Mode:** When powered on, insert the supplied charging cable into the micro USB port to act as the external antenna. Press the M button to enter radio mode. Short press the pause button to enter automatic search mode. Use +/- to change the radio channel.
- **Charging:** The product has a built-in non-removable rechargeable battery that can be charged using a USB cable. When charging, a red light will be on, and it will turn off when fully charged.

Product Usage Instructions

1. To turn on the speaker, toggle the Power switch to the ON position.
2. To turn off the speaker, toggle the Power switch to the OFF position.
3. The speaker will automatically connect with the last connected device.
4. **When playing music:**
 - To pause the music, short-click the PLAY & PAUSE BUTTON. Click the button again to resume playing.
 - To play the previous song, press -.
 - To play the next song, press +.
 - To decrease the volume, long press -.
 - To increase the volume, long press +.
5. To switch between different modes (Micro SD Card/Aux/FM Radio/Wireless BT Mode), press the M button.
6. In radio mode, insert the supplied charging cable into the micro USB port to act as an external antenna. Press the M button to enter radio mode. Short press the pause button to enter automatic search mode. Use +/- to change the radio channel.
7. To charge the speaker, connect it to a power source using the USB charging cable. The red light will indicate that it is charging, and it will turn off when fully charged.

Specifications:

- **Playback Time:** 4-5 Hours
- **Charging Time:** Approx. 3 Hours
- **Built-in Lithium Battery Voltage:** 3.7V
- **Charging Voltage:** 5V 1A

- **Frequency Response:** 60HZ-20KHZ
- **Battery Capacity:** 1200mAh
- **Power:** 5W*2
- **Maximum Supported Micro SD/USB:** 32GB
- **Size:** 390(W) x 55(D) x 70(H)mm

Packing List:

- 1 x Rechargeable Mini Sound Bar
- 1 x USB Charging Cable
- 1 x Product Manual

Distributed by: Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere NSW 2116 Australia

Website: www.electusdistribution.com.au

Made in China.

Power On/Off

- **Power on:** Toggle Power switch to the ON position then the speaker will turn on and indicate blue lights flashing.
- **Power off:** Turn the toggle switch to the OFF position then the speaker will power off.

Wireless Connection

1. Power on, the speaker will enter Wireless BT mode with blue light flashing and is now ready for pairing; the speaker's Bluetooth® Name is XC5169.
2. The speaker will automatically connect with the device that was connected last.

Music Play

1. When playing music, Short click the PLAY & PAUSE BUTTON to pause the music and then click button again to play;
2. When playing music, press “-” to play the previous song;
3. When playing music, press “+” to play the next song;
4. Long press “-”, the volume will decrease;
5. Long press “+”, the volume will increase.

Mode Switch

The speaker will enter Wireless BT mode when powered on. Insert the Micro SD card/USB then will automatically enter the Micro SD card/USB playback. Click the M button to switch between Micro SD Card/Aux/FM Radio/Wireless BT Mode.

Radio Mode

When powered on, insert the supplied charging cable into the micro USB port to act as the external antenna. The speaker enters the Wireless BT mode. Press the “M” button to enter the radio mode. Short press the pause button to enter the automatic search mode. After the search is completed, press +/ – to change the radio channel.

Charging

The product has built-in non-removable rechargeable battery, which can be charged by USB cable. When Speaker is Charging, the red light on. The light will turn off when it is fully charged.

Specifications

- **Playback Time:** 4-5 Hours
- **Charging Time:** Approx. 3 Hours
- **Built-in Lithium Battery Voltage:** 3.7V
- **Charging Voltage:** 5V 1A
- **Frequency Response:** 60HZ-20KHZ
- **Battery Capacity:** 1200mAh
- **Power:** 5W*2
- **Maximum Supported Micro SD/USB:** 32GB
- **Size:** 390(W) x 55(D) x 70(H)mm

Packing List


- 1 × Rechargeable Mini Sound Bar
- 1 × USB Charging Cable
- 1 × Product Manual

Distributed by:

Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere NSW 2116 Australia.
www.electusdistribution.com.au.

Made in China.

Documents / Resources

	digitech XC5169 Rechargeable Mini Sound Bar [pdf] Instruction Manual XC5169, XC5169 Rechargeable Mini Sound Bar, Rechargeable Mini Sound Bar, Mini Sound Bar, Sound Bar
---	--

References

- [E Electus Distribution - Home](#)

