

digitech

XC5233 2-CHANNEL
SOUNDBAR SPEAKER
WITH BLUETOOTH



digitech XC5233 2 Channel Soundbar Speaker with Bluetooth Instruction Manual

[Home](#) » [Digitech](#) » digitech XC5233 2 Channel Soundbar Speaker with Bluetooth Instruction Manual 

Contents

- 1 [Digitech XC5233 2-Channel Soundbar Speaker with Bluetooth](#)
- 2 [Specifications](#)
- 3 [Product Usage Instructions](#)
- 4 [BEFORE FIRST USE](#)
- 5 [SAFETY](#)
- 6 [BOX CONTENTS](#)
- 7 [PRODUCT DIAGRAM](#)
- 8 [OPERATION](#)
- 9 [REMOTE CONTROL](#)
- 10 [TROUBLESHOOTING](#)
- 11 [SPECIFICATIONS](#)
- 12 [FAQ](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)

digitech

Digitech XC5233 2-Channel Soundbar Speaker with Bluetooth



Specifications

- Model: XC5233
- Power: 15VDC
- Channels: 2 Channel

Product Usage Instructions

Connection and Setup

1. Connect the mains power adaptor to the rear power socket of the soundbar and plug it into a wall socket.
2. Connect audio devices using the appropriate input ports (3.5mm, Optical TOSLINK, HDMI ARC).
3. Adjust volume settings on both the speaker and your device.

TOSLINK Optical Input

1. Insert a TOSLINK optical cable into the corresponding port on the soundbar and connect the other end to your audio device.
2. Ensure TV audio settings are configured for TOSLINK/Optical output.
3. Adjust digital audio output format to PCM if needed.

3.5mm Audio Input 1 & 2

1. Use a 3.5mm auxiliary cable to connect your audio device to the soundbar.
2. Auxiliary mode will automatically start playing once connected.

HDMI ARC Input

1. Connect a HDMI cable to the HDMI ARC input port on the soundbar and your TV or monitor.
2. HDMI ARC mode will start playing automatically upon connection.

BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

SAFETY

- Do not open the case of the speaker to avoid damage and injury.
- Keep the speaker away from high temperatures as it may cause damage to the speaker and battery.
- If using a replacement or third party mains power adaptor; make sure the voltage and current match the specifications as 15VDC.

BOX CONTENTS



1x 2 Channel Soundbar Speaker



1x Infrared Remote Control



1x Mains Adaptor

PRODUCT DIAGRAM



#	Feature	Description
1	Mounting Bracket/Feet	Used to mount the soundbar on a wall or place on a flat surface
2	DC Power Socket	Connect to the 15VDC mains power adaptor
3	3.5mm Audio Input 2	Connect to an audio device such as a smart- phone using the 3.5m m audio cable
4	3.5mm Audio Input 1	Connect to an audio device such as a smart- phone using the 3.5m m audio cable
5	Optical TOSLINK Input	Connect to a TV or monitor
6	HDMI ARC Input	Connect to a TV or monitor using a HDMI ARC Input
7	Infrared Port	Used to operate the remote control
8	LED Status Indicator	Displays the current mode and Bluetooth® status
9	Power/Play/Pause Button	Press and hold to power the soundbar on and off Press once to play or pause the current audio
10	Previous Track/Volume Down	Press and hold to skip to the previous track Press to adjust the volume down
11	Next Track/Volume Up	Press and hold to skip to the next track Press to adjust the volume up
12	Mode Button	Switch between Bluetooth®, HDMI ARC, TOS- LINK optical and aux in modes Press and hold to disconnect the paired device

OPERATION

Bluetooth® Pairing

1. Connect the plug of the mains power adaptor to the rear power socket of the sound bar. Connect the opposite side of the mains power adaptor to a standard 240VAC wall socket
2. Press and hold the power button for up to 2 seconds to turn the unit on. The sound bar will automatically enter Bluetooth® mode and the LED will begin to flash.
3. Open the settings of your TV, smart phone or tablet and ensure Bluetooth® is turned on.
4. Once your Bluetooth® is enabled; scan for devices and the Bluetooth® name XC- 5233 should appear. If the name doesn't appear then please ensure the speaker is correctly powered on and the correct mode is selected.

Bluetooth® Name: XC-5233

5. Select the XC-5233 on the Bluetooth® device list and your TV, smartphone or tablet should show that it is now connected.
6. You can now start playing audio from your TV, smartphone or tablet. The volume can be adjusted from both the speaker and your device. The LED will stay blue once connected.

NOTE: If the speaker can't be connected; then please restart the speaker or the device and try again. Press and

hold the mode button to disconnect the current device connected.

TOSLINK Optical Input

1. Insert a TOSLINK optical cable (not included) to the TOSLINK optical audio input socket located at the rear of the speaker.
2. Insert the opposite end of the TOSLINK optical cable to an audio device such as your TV or monitor.
3. The TOSLINK optical mode will automatically start playing once the device has been inserted.
4. Depending on your brand of TV or monitor being used; you may need to adjust the audio settings of your TV for the device to be picked up.
5. Make sure that your output sound settings are set on TOSLINK/Optical so that it's playing correctly.
6. Open the advanced settings and find the digital audio output format and change to PCM which should start playing straight away. The settings will differ depending on the brand of TV.

3.5mm Audio Input 1 & 2

1. Insert a 3.5mm to 3.5mm auxiliary cable (not included) to the 3.5mm audio input 1 or 2 sockets located at the rear of the speaker.
2. Insert the opposite end of the 3.5mm to 3.5mm auxiliary cable to an audio device such as a smartphone, tablet or computer.
3. The Aux mode will automatically start playing once the device has been inserted. You can now play, pause or skip tracks from your audio device.

HDMI ARC Input

1. Insert a HDMI cable (not included) to the HDMI ARC input socket located at the rear of the speaker.
2. Insert the opposite end of the HDMI cable to your TV or monitor that is equipped with a HDMI ARC port.
3. The HDMI ARC mode will automatically start playing once the device has been inserted.

NOTE: Your TV or monitor must be equipped with HDMI Audio Return Channel (ARC) in order for this mode to work.

REMOTE CONTROL



Feature	Description
Power On/Off	Press to switch the power on or off
Mode	Press to switch between Bluetooth®, HDMI ARC, TOSLINK Optical and Aux In modes
Previous Track	Press the previous track button once to skip to the previous music track
Play/Pause	Press the play/pause button to pause or resume the current music track
Next Track	Press the previous track button once to skip to the next music track
Unpair	Disconnects the current Bluetooth® device paired
EQ	Adjusts the different equalizer settings of the speaker
Mute	Press to mute the sound of the device
Vol –	Press to turn the volume down
Vol +	Press to turn the volume up

TROUBLESHOOTING

Problem	Solution
No Audio	Ensure the volume is correctly turned up on the speaker.
	Ensure the volume is correctly turned on your audio device if connected in Bluetooth® mode.
	Try a different audio source or mode; it may be your device not transmitting audio.
Bluetooth® Will Not Pair	Restart the speaker and audio device.
	Type in the password “0000” if it asks you for one.
	Make sure the mode of the speaker is selected to “BT” and the Bluetooth® is turned on from your device.

SPECIFICATIONS

Bluetooth® Version	5.0+EDR
Transmission Range	Up to 10m
Inputs	1 x Optical TOSLINK, 2 x 3.5mm Aux, 1 x HDMI ARC
Output Power	2 x 14WRMS
Driver	2 x 2", 4W
Frequency Response	120Hz-18KHz
Distortion	≤10%
Remote Control Battery	2 x AAA
Power	15VDC, 2A
Dimensions	780(L) x 62(H) x 61(D)mm

WARRANTY INFORMATION

- Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
- If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
- This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
- To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
- Any expenses relating to the return of your product to the store will normally have to be paid by you.
- The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766


Ph. 1300 738 555

FAQ

Q: What should I do if the speaker cannot be connected?

A: Restart the speaker or the device and try connecting again. Press and hold the mode button to disconnect the current device.

Documents / Resources

	<p>digitech XC5233 2 Channel Soundbar Speaker with Bluetooth [pdf] Instruction Manual XC5233 2 Channel Soundbar Speaker with Bluetooth, XC5233, 2 Channel Soundbar Speaker with Bluetooth, Soundbar Speaker with Bluetooth, Speaker with Bluetooth, Bluetooth</p>
--	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.