



Dimplex DCTF81R 81cm Tower Fan with Remote Instruction Manual

[Home](#) » [Dimplex](#) » Dimplex DCTF81R 81cm Tower Fan with Remote Instruction Manual 

Dimplex DCTF81R 81cm Tower Fan with Remote



IMPORTANT

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

Note also the information presented on the appliance

Contents

- 1 Warning**
- 2 Specification**
- 3 Parts**
 - 3.1 Remote**
- 4 Assembly**
 - 4.1 Base Assembly**
- 5 Operation**
 - 5.1 Button Controls**
 - 5.2 LED Display**
- 6 Mode Description**
- 7 Cleaning**
- 8 Maintenance**
- 9 Warranty**
- 10 Documents / Resources**
 - 10.1 References**
- 11 Related Posts**

Warning

CAUTION: FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY AND/OR DAMAGE AND MAY INVALIDATE YOUR WARRANTY

Please read the operating instructions carefully before using your fan for the first time and keep them in a safe place.

WARNING – This appliance must not be used in a bathroom.

WARNING – Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.

- If the mains lead is damaged it must only be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- Never immerse the appliance in water or other liquids.
- Operate this unit only on a firm, flat surface.
- Do not place on soft, unstable or non-horizontal/angled surfaces.
- Never operate the appliance if a cable or connector has been damaged, after appliance malfunction or if the appliance was dropped or is otherwise damaged.
- Please ask a professional service agent to repair the product. Improper repair may cause danger to users.
- Disconnect the appliance from mains power whenever it is not in use, before relocating it, and before cleaning.
- Operate the appliance only at the voltage specified on the rating label.
- Only connect the unit to a properly installed and easily accessible socket so that you can quickly disconnect the plug if necessary.
- Do not connect this product to the mains using an extension lead.
- This fan is only intended for **INDOOR RESIDENTIAL** applications. This fan should not be used for commercial or industrial or leisure applications or in small enclosed spaces.
- Never use the mains lead as a carrying strap or pulling lead.
- To avoid a fire or electrocution hazard, NEVER put the cord near heat registers, radiator, stoves or heaters.
- DO NOT cover cord with carpeting, throw rugs, runners, or similar coverings.
- DO NOT route cord under furniture or appliances. Take care to position the cord away from traffic areas and where it will not be a tripping hazard.
- DO NOT use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- Only operate this appliance with a minimum of 50cm clearance all around i.e. away from walls, furniture and overhanging objects such as curtains or a shelf.
- **WARNING:** To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.
- NEVER drop or insert any object or fingers into any openings.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use bug sprays or other flammable cleansers/vapour sprays on or around the unit.
- Always switch off the unit and take the plug out of the socket:
 - If you are not using the unit
 - Before you clean or carry out maintenance on the unit
 - If a fault occurs
 - In the event of an electrical storm.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electrical appliances such as televisions & radios.

WARNING – KEEP BATTERIES OUT OF REACH OF CHILDREN

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 (in Australia) or 0800 764 766 (in New Zealand) for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened.
Do not use if the compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.



Using the Remote Control

1. Open the battery cover of the remote control, and insert a CR2025 battery.
2. Please point to the receiver and be within 10m when using the remote control.
3. When the battery voltage starts to become low, please open the battery cover and replace with a new battery (CR2025). Then replace the battery cover.



Exposed to the weather outdoors



Near water



If the power cable wires are frayed or cut



Where small children may be left unattended



If an extension lead may become overloaded



Where the power cable may be damaged



On a slope or uneven surface



Where there is risk of fire or close to a naked flame



Where it may be damaged by chemicals



Where there is a risk of interference by foreign objects



This product is not made for DIY repair



 
If there is a risk of water falling on the unit

Specification


| | |
|------------------------|-------------------|
| Model no. | DCTF81R |
| Colour | Black |
| Power supply | 220-240V~, 50Hz |
| Rated power | 45W |
| Speed settings | 3 |
| Modes | 3 |
| Timer | 0-7.5 hours |
| Air volume | 18.10m /min |
| Oscillating | 70 degrees |
| Controls | Button or remote |
| Cord storage | N |
| Noise level (MAX) | 54dB(A) |
| Weight (net) | 1.9kg |
| Dimensions (w x d x h) | 240 x 240 x 810mm |

- For greater precision, please always refer to the rating label placed on the product.

Parts

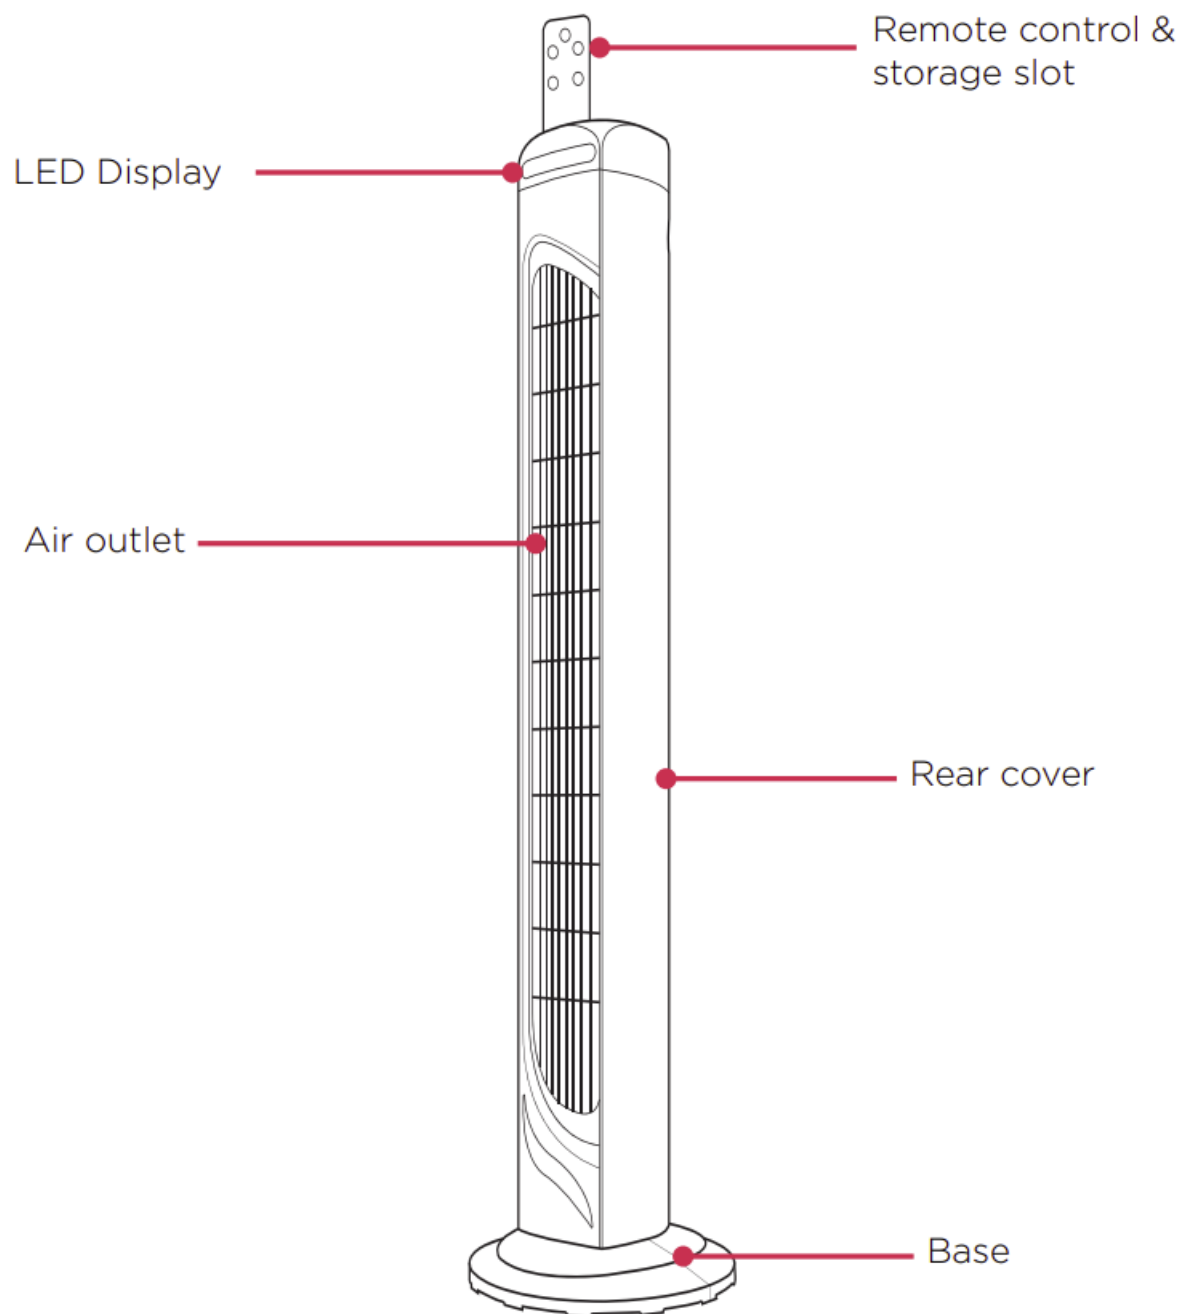

Remote


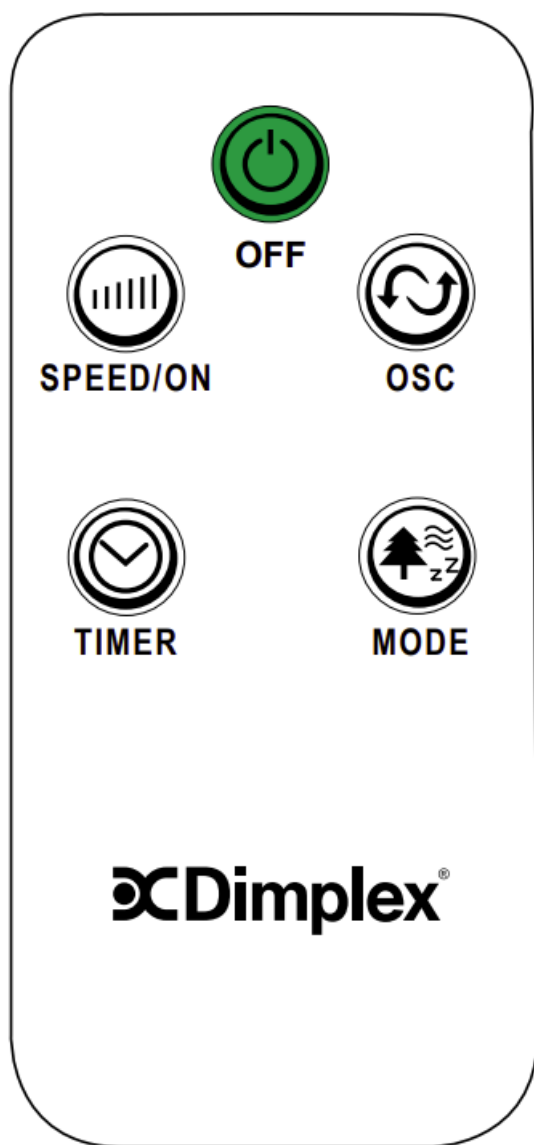 


Assembly

Please refer to the below instructions & diagram to assemble the base to the body of the tower fan.

1. Remove the base locking collar (4) (twist anti-clockwise).
2. Position the two base shells together (2 & 3) and feed the power cord (1) through the opening.
3. Close the base together by firmly tightening the 4 screws provided.
4. Attach the base onto the bottom of the tower fan by aligning the locking tabs with the corresponding slots.
5. Secure it into position by twisting the base locking collar (clockwise direction).
6. Plug into an appropriate power supply

  
Base Assembly

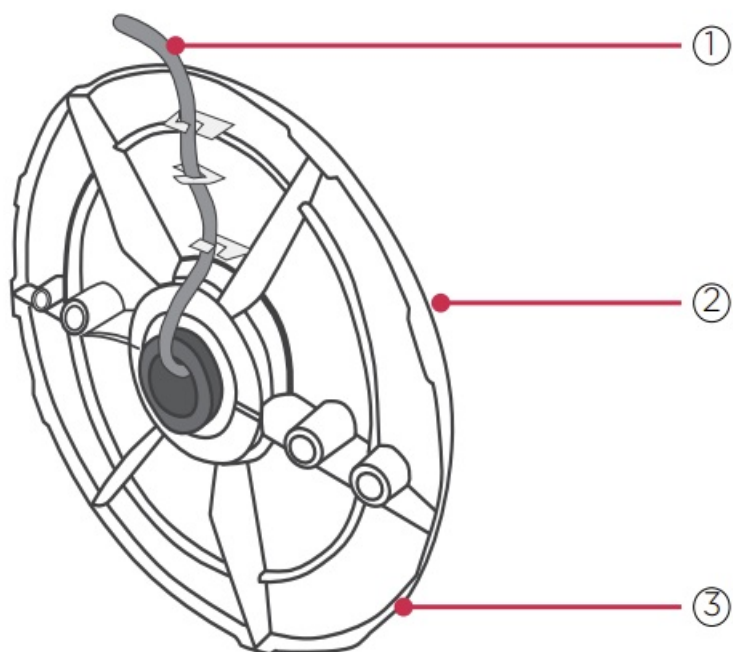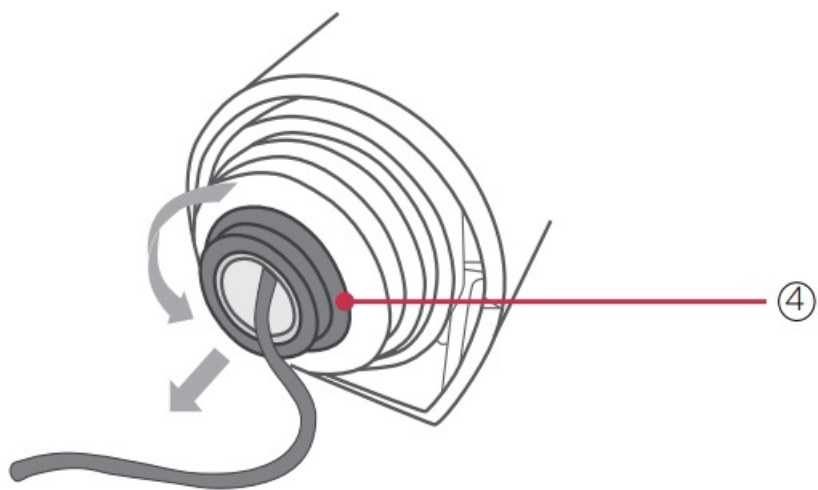


Operation

This tower fan can be operated by the control panel or remote control. Please refer to the below diagrams for descriptions.

 Button Controls

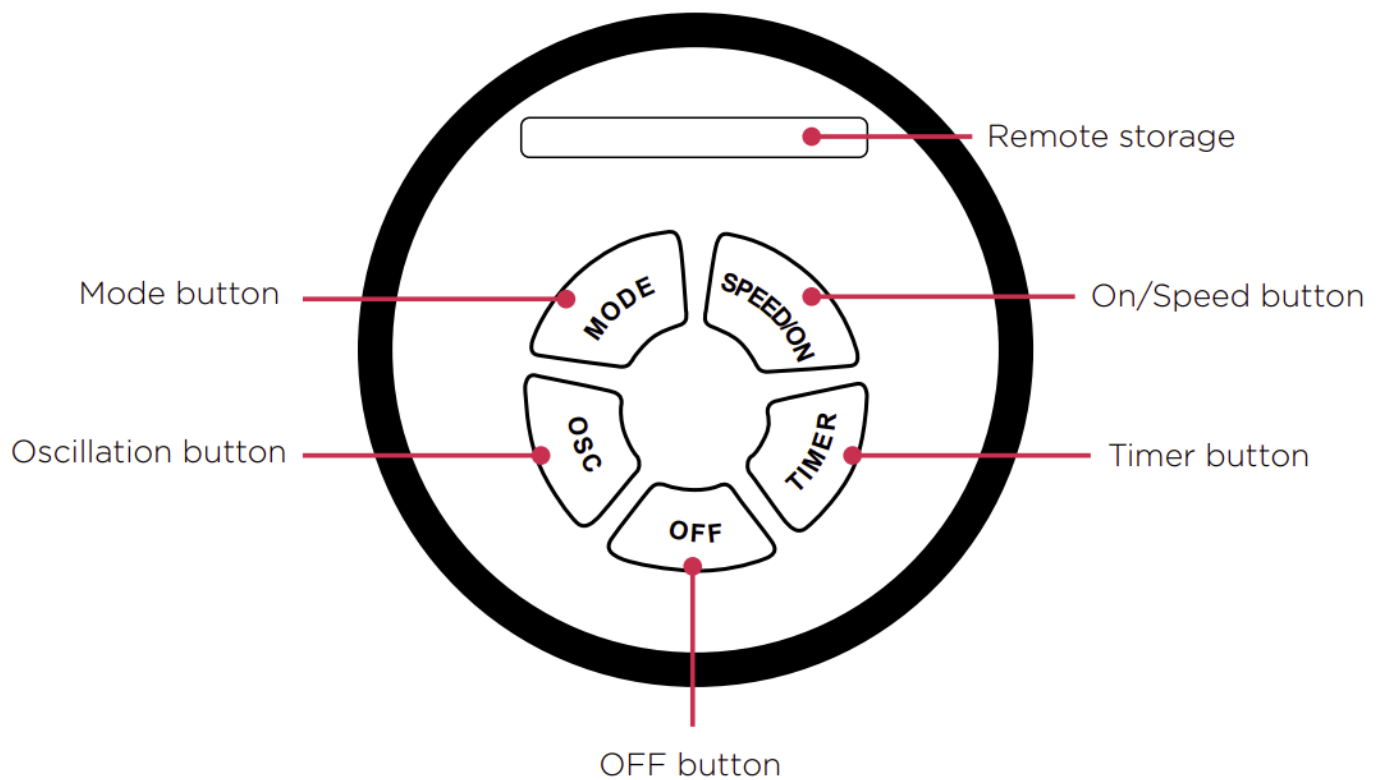

LED Display

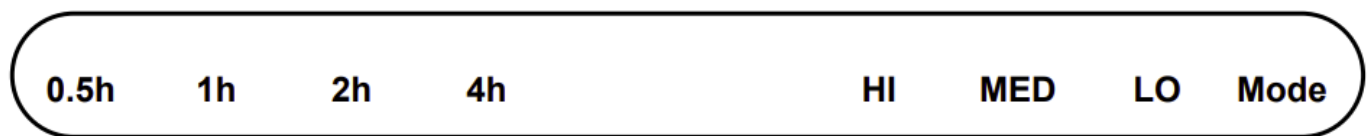 

Note: All functions of the unit can be operated by the control panel or remote control.

1. Place the fan on a flat stable surface and plug into a power outlet.
2. Press the **SPEED/ON** button to turn the unit **ON** and select the desired speed setting.
3. There are 3 **SPEED** settings – 1 (Low), 2 (Medium) and 3 (High).
4. Press the **TIMER** button the set the auto-off timer in 0.5 hour increments, up to a maximum of 7.5 hours.
5. Press the **MODE** button to select either Normal, Natural, or Sleep modes.

Note: The **MODE LED** indicator light changes color depending on the **MODE** selected.

Red = Normal mode, Green = Natural mode & Yellow = Sleep mode.

6. Press the **OSC** button to start/stop the left to right oscillation function.
7. Press the **OFF** button to turn the unit off.

Mode Description

Normal: When this mode is selected, the fan will operate as normal, in the settings selected (red indicator light).

Natural: This mode cycles through Low, Medium, High for 5 seconds each (green indicator light).

Sleep: The sleep mode varies depending on what speed the fan is working in at the time of selection (yellow indicator light). Refer to the below examples:

Low Speed – the fan will work at this speed without change until it is turned off (either manually or by the timer).
Medium speed – the fan will work at medium speed for 30 minutes, then switch to low speed until it is turned off.
High Speed – the fan will work at high speed for 30 minutes, then switch to medium speed for 30 minutes, and finally work in low speed before it is turned off.

Cleaning

Over time, dust can accumulate on the fan grille, which can affect the fans performance. It is recommended to clean the fan at least once a month.

1. Turn the unit OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush.
3. Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

Do not use abrasive sponges, scouring pads, or a stiff brush to clean the unit.

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.

Storage

If not using the unit for an extended period of time, after cleaning please:

- Turn the unit off, unplug and take care of the mains lead & plug.
- Cover the unit and store it upright in a location where it will not receive direct sunlight. NB- Prolonged exposure to direct sunlight will discolour the enclosure.

Maintenance

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

Warranty

 
Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd

8 Lakeview Drive, Scoresby 3179, Victoria Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd

38 Harris Road, East Tamaki Auckland 2013 New Zealand
Ph: 0800 666 2824

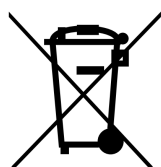

Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.

 


Customer Care: 1300 556 816
customer.care@glendimplex.com.au
www.dimplex.com.au

Supplied by Glen Dimplex Australia
8 Lakeview Drive, Scoresby, Victoria, 3179

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.

Documents / Resources
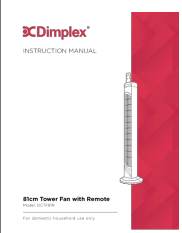
| | |
|---|--|
|  | <p>Dimplex DCTF81R 81cm Tower Fan with Remote [pdf] Instruction Manual DCTF81R 81cm Tower Fan with Remote, DCTF81R, 81cm Tower Fan with Remote, Tower Fan with Remote, Fan with Remote</p> |
|---|--|

References

- [Dimplex Welcome to Dimplex Australia | Dimplex](#)

Manuals+