

# D440-1700 LED Color On Dinan Module User Manual

Home » DINAN » D440-1700 LED Color On Dinan Module User Manual



#### **Contents**

- 1 D440-1700 LED Color On Dinan
- Module
- 2 MODULE
- 3 Troubleshooting
- 4 Documents / Resources
- **5 Related Posts**



#### D440-1700 LED Color On Dinan Module



LED Color On Dinan Module	Meaning	
NO LED	Device is in bypass mode or not powered, and will not adjust pedal sensitivity	
Solid Green	Amp'd 2.0 has learned your vehicles accelerator pedal and can adjust pedal sensitivity . No Mobile device is currently connected.	
Solid Red	A Mobile device is connected to the Dinan Module	
Solid Orange	A Mobile device is connected to the DinanModule, has learned your vehicles accelerat or pedal and can adjust sensitivity	
Flickering RED	Mobile device is communicating with the Dinan Module	
Blinking RED	If the Red LED is continuously blinking slowly, The device may not be able to read the calibration EEPROM.	

## **Troubleshooting**

	ut a Mobile Phone connected to the Dinan N	
Symptom	Possible cause	Recommended Action
	Dinan harnesses are not fully connected	Confirm the harnesses are securely connected to the vehicle harness, accelerator pedal and the Dinan module.
Dinan module LED is not Green	A pedal relearn has not been completed	Complete a pedal relearn. See the quick start guide for instruction
Dinan module LED is not Orange when a m obile device is connected	A pedal relearn has not been completed	Complete a pedal relearn.
Wireless switch is not turning on	Batteries may be installed incorrectly	Reinstall batteries. The positive side of the batteries should be visible when in the battery tray.
Wireless switch is not changing the pedal se nsitivity	Wireless switch has not been connected to the DinanModule	Follow the quick start guide instructions for connecting your wireless switch.
	Wireless switch has not been connected to the Dinan Module	Reset switch pairing with the Mobile app. F ollow the quick start guide instructions for connecting your wireless switch.
	A pedal relearn has not been completed	Complete a pedal relearn. See the quick start guide for instruction
Dinan module LED is slowly blinking RED	Device cannot read the calibration EEP ROM	Hard Reset the device by disconnecting, le ting it rest for apprx. 10 seconds, and recornecting the harnesses.

Troubleshooting with a Mobile Phone connected to the Dinan Module			
Symptom	Possible cause	Recommended Action	
	Dinan harnesses are not fully connected	Confirm the harnesses are securely connected to the vehicle harness, accelerator pedal and the Dinan module.	
Dinan module LED is not Red	A mobile device is not linked to the Dina n module	Follow the in App instruction for linking a m obile device.	
	The Dinan device cannot be found	Confirm the harnesses are securely connected to the vehicle harness, accelerator peda I and the Dinan module.	
	The Dinan device cannot be found	Follow the in App instruction for linking a m obile device.	
Mobile device will not I ink to the Dinan modul e	Bluetooth is not enabled on the mobile d evice	Enable Bluetooth connection for the Dinan mobile app.	
	Location services are not enabled on the e mobile device	Enable location services for the Dinan mobile app.	
Mobile device is not c hange the pedal sensitivity	A pedal relearn has not been completed	Complete a pedal relearn. Follow the in app instructions from the devices page (the LED on the Dinan module will be orange when c omplete)	
Dinan module LED is slowly blinking RED	Device cannot read the calibration EEP ROM	Hard Reset the device by disconnecting, let ting it rest for apprx. 10 seconds, and reconnecting the harnesses.	

### **Documents / Resources**



### <u>DINAN D440-1700 LED Color On Dinan Module</u> [pdf] User Manual

D440-1700 LED Color On Dinan Module, D440-1700, LED Color On Dinan Module, Color On Dinan Module, Dinan Module, Module

