



## DIRECTV RC66RX Universal Remote Control User Guide

[Home](#) » [DirecTV](#) » DIRECTV RC66RX Universal Remote Control User Guide 

### DIRECTV RC66RX Universal Remote Control



RC83V remote works in IR and Bluetooth interface. The remote uses Bluetooth 2-way communication to C71KW. Bluetooth eliminates the need for the remote and the paired devices to be in line of sight to each other. Voice Recognition is available in the RC83V Remote. Voice search will only work when the remote is paired to the C71KW.

## Contents

- [1 Pairing your remote to Set top Box](#)
- [2 Clearing Pairing](#)
- [3 RESTORING FACTORY DEFAULT SETTINGS](#)
- [4 COMPLIANCE WITH FCC RULES AND REGULATIONS](#)
- [5 SETUP CODES FOR TV's](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## Pairing your remote to Set top Box

To pair the DIRECTV remote control to the STB, perform the following steps:

1. Press and HOLD Rewind and Fast Forward at the same time for 3 second until the visible LED's starts flashing.
2. Enter digits 961 follow by CH up key.
3. Using the number keys enter the last six digits of the RID number located behind the STB.
4. Press and release ENTER key (the green light flashes twice).

## Clearing Pairing

Press and hold Dash and APPS at the same time for 3 seconds until the LED's flash. The RCU will unpair from the STB.

## RESTORING FACTORY DEFAULT SETTINGS

To reset all the functions of the remote control to the factory default settings following these steps:

1. Press and hold MUTE and Exit at the same time until the RED LED turns ON.
2. Using the number keys, enter 9-8-1. (The feedback flashes 4 times).

## COMPLIANCE WITH FCC RULES AND REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Consult the dealer or an experienced radio/TV technician for help.

The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

## SETUP CODES FOR TV's

AOC	1365,	240 2				
Apex Digital	2397					
Audiovox	1564					
Aventura	0171					
Coby	2306,	231 4,	231 5,	2344,	234 8,	34 78
Commercial Solutions	1447					
Curtis	2397					
Durabrand	0178,	017 1				
Dynex	2049					
Element	1886					
Emerson	1394,	188 6,	017 8,	0171		
Envision	1365					
ESA	0171					
Funai	0171					
GE	1447,	017 8				
GFM	1886,	017 1				
GoldStar	0178					
Haier	2293					
Hallmark	0178					
Hitachi	1643					
iLo	1394					

Insignia	2049,	142 3,	156 4,	0171,	151 7,	27 51
LG	1423,	144 7,	017 8			
LXI	0156,	017 8				
Magnavox	1867,	145 4,	237 2,	0171,	136 5	
Marantz	1454					
Matsushita	0250					
Megatron	0178					
Memorex	0178,	015 0				
MGA	0178,	015 0				
Mitsubishi	1250,	017 8,	015 0,	1797		
NAD	0156,	017 8				
NEC	1797					
Nikko	0178					
Norcent	1365					
Optimus	0250					
Panasonic	1480,	025 0,	129 1			
Penney	0156,	017 8				
Philco	1394,	017 1				
Philips	1867,	145 4,	237 2,	1394,	017 1,	06 90
Pioneer	1457					
Proscan	1447					
Proton	0178					
Quasar	0250,	129 1				
RadioShack	0178					
RCA	1447,	243 4,	274 6			

Realistic	0178				
Samsung	2051,	0178			
Sansui	0171				
Sanyo	1142				
Scotch	0178				
Scott	0178				
Sears	0156,	0178,	0171		
Seiki	0178				
Sharp	0818,	2402			
Sony	0810				
Soundesign	0178				
Squareview	0171				
Sylvania	1394,	1886,	0171		
Symphonic	1394,	0171			
TCL	2434				
Technics	0250				
Teknika	0150				
TMK	0178				
Toshiba	1524,	0156			
Vidtech	0178				
Viewsonic	2049,	1564,	0885, 1365		
Vizio	1758,	2757,	0885		
Wards	0156,	0178			
Waycon	0156				
Westinghouse	0885,	2195,	2293, 2499		
Wyse	1365				
Zenith	1423,	0178,	1365		


Scotch	0178			
Scott	0178			
Sears	0156,	017 8,	0171	
Seiki	0178			
Sharp	0818,	240 2		
Sony	0810			
Soundesign	0178			
Squareview	0171			
Sylvania	1394,	188 6,	0171	
Symphonic	1394,	017 1		
TCL	2434			
Technics	0250			
Teknika	0150			
TMK	0178			
Toshiba	1524,	015 6		
Vidtech	0178			
Viewsonic	2049,	156 4,	0885, 1365	
Vizio	1758,	275 7,	0885	
Wards	0156,	017 8		
Waycon	0156			
Westinghouse	0885,	219 5,	2293, 2499	
Wyse	1365			
Zenith	1423,	017 8,	1365	



# DIRECTV

---

## Documents / Resources

 <p>9</p>	<p><a href="#">DIRECTV RC66RX Universal Remote Control</a> [pdf] User Guide RC66RX Universal Remote Control, RC66RX, Universal Remote Control, Remote Control</p>
--	---