

DIRECT WICKER Instructions

Home » DirectWicker » DIRECT WICKER Instructions



Contents

- 1 Care Instruction
- 2 Documents / Resources
- **3 Related Posts**

Care Instruction

- Before using, wipe down with a clean, dry cloth.
- Do not use bleach or other solvents.
- When not in use, store furniture in a cool, dry place.

- If your set includes cushions or mesh fabrics, they may be cleaned by hand with a mild solution of soap and water. Rinse cushion cover thoroughly and allow dripping dry.
- Do not machine wash or tumble dry, as cushions may shrink.
- Do not use bleach or solvents on fabrics. When cleaning the table top, make sure to use a soft, clean cloth that does not bleed color as well.



Documents / Resources



<u>DirectWicker DIRECT WICKER</u> [pdf] Instructions DirectWicker, DIRECT WICKER

Manuals+