

**DISCOUNT
DELIGHTS**

T3105 Basic Cell Phone
with Large Buttons



Discount Delights T3105 Basic Cell Phone with Large Buttons User Manual

[Home](#) » [Discount Delights](#) » Discount Delights T3105 Basic Cell Phone with Large Buttons User Manual 

Contents



- [1 Discount Delights T3105 Basic Cell Phone with Large Buttons](#)
- [2 OVERVIEW](#)
- [3 Menu introduction](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

**DISCOUNT
DELIGHTS**

Discount Delights T3105 Basic Cell Phone with Large Buttons



OVERVIEW

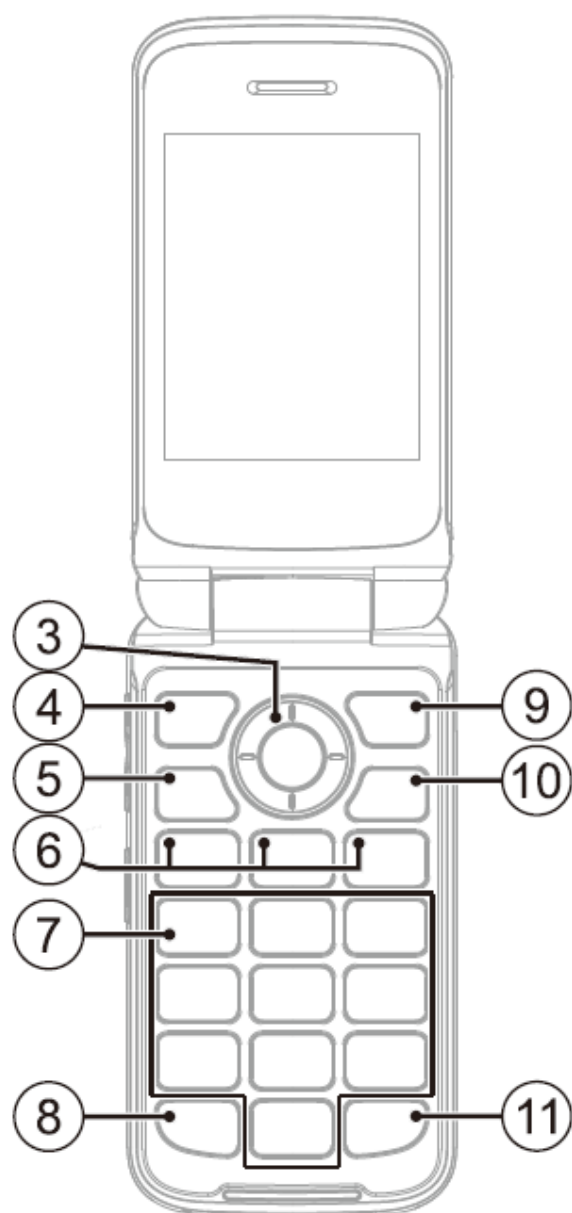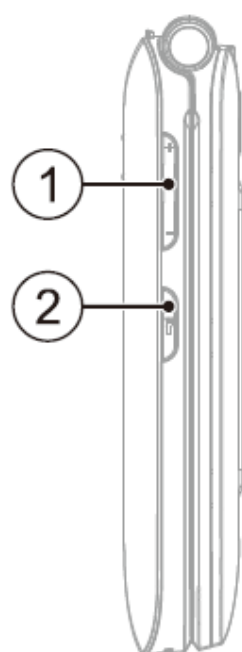

1	Volume key	To adjust the volume Up and down
2	Torch key	Press and hold the key for 2S to turn on / off the Torch
3	Navigation & OK key	These keys allow you to scroll through phone menu options and provide shortcut to phone functions in standby mode.
4	Left-Soft- key	Performs the function indicated at the left bottom of the screen
5	Call key	Press it to make or receive a call.
6	Function key	Press M1 / M2 to call the contact which pre-set directly. Press SOS key to call the emergency contacts
7	Alphanumeric key	Use these keys to enter numbers, letters and some special characters.
8	Star key *	Enter the * & + character for calling features Press it in text mode to input symbols

9	Right-Soft- key	Performs the function indicated at the right bottom of the screen, Mostly it preform to go back to the previous interface
10	Power key / End key	Press and hold this key for a few seconds to power the phone on or off. Press it to reject an incoming call ; Press it to end the call. Press it in other interface to backward to the idle interface quickly.
11	Pound Key #	In text mode, press it to change the input method. Press and hold # to change profile mode in idle.

Menu introduction

Messages

- Write message: To create a SMS or MMS, then send it to a contact
- Inbox: Received Messages are listed in this menu
- Outbox: The messages which are sent failed are stored in the Outbox
- Drafts: Draft messages are listed in this menu
- Sent-box: Sent messages are listed in this menu
- Templates: You can create pre-defined messages in this interface
- Voice mail server: You can set voice mail through this function
- Settings: To set the parameters of message.
- Message capacity: To check the capacity of message in phone or SIM card.

FM Radio

It will search and save the FM channels automatically when first launching.

Press [OK] key to play or pause the FM, [LEFT] and [RIGHT] key for previous and next channel. Left-Soft-key to access more parameters; press Right-Soft-key to exit.

Call log

- All call logs: There are the lists of all calls recorder
- Missed calls: There are the lists of missed incoming calls
- Dialed calls: There are the lists of outgoing calls
- Received calls: There are the lists of received incoming calls
- Rejected calls: There are the lists of rejected incoming calls
- Delete call: To delete all call logs
- Call timers: It display the calling duration time.

Tools

- Calendar: It show the calendar monthly by default. You can add events in some day to remind you at that day.
- Calculator: The calculator can add, subtract, multiply and divide
- Bluetooth: To set Bluetooth parameter here
- File manager: To view all the files in the phone and Micro SD card
- World clock: To set and view different time zone or city
- Internet: To view websites via this browser.

Multimedia

- Camera: Press [OK] key to take a photo, Left-Soft-key to access to "Options" to change parameter.
- Video recorder: Press [OK] key to record a video, press it again to pause; Left-Soft-key to stop or access to "Options"
- Audio player: it will search all the audio files in the phone and Micro-SD card when launching. Press [OK] key to play or pause, [LEFT] and [RIGHT] key for previous and next file.
- Video player: it will search all the video files in the phone and Micro-SD card when launching. Press [OK] key to play or pause, [LEFT] and [RIGHT] key for previous and next file.
- Sound recorder: Press [OK] key to start / pause to record, press Right-Soft-key to stop and save the audio.
- Image viewer: To view the picture in the phone or Micro-SD card.

Alarm

To set up to 10 alarm

You can access this menu by press [DOWN] key in idle mode directly.

Settings

Profiles

There are three profiles mode in the phone: General, Silent and Meeting.

In idle mode, you can change the profiles by pressing [#] key for 3 seconds; or press [RIGHT] key to access profiles menu to choose.

Here are the sub-menu in Option:

- Add: To add a new profile as you need.
- Delete: To delete a profile which set by yourself. The pre-set profile cannot be deleted
- Settings:
 - Rename: To rename the profiles
 - Ring settings: To change the ringtone for incoming call or message.
 - Adjust volume: To adjust the volume for calling / message / alarm etc.
 - Ring type: To change the ring type
 - Other alert rings: To change the ring for other alert

Call settings

- Flight mode: To set Flight mode on / off
- Dual-SIM: To set parameter for both SIM cards
- Flip to answer: If enable this function, you can flip the phone to answer an incoming call
- Call divert: To set to divert to a contact or phone number when you need.
- Call waiting: After the function is activated, the network will inform you that new incoming call when you are on a call. You can hold on the current call and answer another call
- Call barring: To limit calling function in some condition.
- **Others:**
 - Auto redial: When enable this function, if you call someone and get no answer, the phone will call the number again automatically.
 - Auto record voice call: When enable this function, the phone will take a voice record for the calling automatically.
- **Phone settings**
 - Date & time: To set date and time
 - Language settings: To change language as you need.
 - Input method settings: To set default input method.
 - Shortcut settings: To change shortcut for navigation keys.
 - Auto power on/off: To set time to power on / off.
 - Restore factory settings: To restore all phone settings to original status. The default password is 0000.
- **SOS settings**
 - SOS status: To turn on / off the SOS function.
 - SOS numbers: To set up to 5 contacts as emergency calling.
 - Emergency sms active: To turn on / off the emergency SMS function.

- Emergency sms: To set a message content to be sent
- Emergency alert: To turn on / off the alert for SOS function.

- **Display settings**

- Wallpaper settings: To change the wallpaper.
- Brightness: To adjust the LCD brightness by using [RIGHT] / [LEFT] key.
- Backlight: To set the LCD backlight time.
- Keypad backlight time: To set the backlight time for keypad.

- **Security**

- Modify privacy password: To change the phone password, the original password is 0000.
- Blacklist: To set contacts or numbers as blacklist that these number cannot reach you again.
- Whitelist: To set contacts or numbers as whitelist that only these number can reach you.

- **Speed dial:** To set the keys of M1 / M2 / 2-9 for speed dial. When you done to set it, press and hold the keys (M1 / M2 / 2-9) to call the contact directly.

- **Connections:** To set the network parameters

Contacts

There are some sub-menu in “Options”

- New: To add contacts to the phone or SIM cards
- Write message: To write a SMS or MMS to the contact
- Call: To make a call to the contact
- Delete: To delete a contact
- Delete multiple: To delete more contacts in the same time
- Import / Export : To import or export the contact from or to the phone
- Send vCard: To send a contact information to other via SMS / MMS / BT
- Others
 - **Speed dial**
To set the keys of M1 / M2 / 2-9 for speed dial. When you done to set it, press and hold the keys (M1 / M2 / 2-9) to call the contact directly.
 - **Memory status**
To check the status of contact capacity in phone and SIM cards.

Documents / Resources

<p>T3105 User Manual</p> <p>Ver: TDWPS-1.0</p>	<p>Discount Delights T3105 Basic Cell Phone with Large Buttons [pdf] User Manual 4G Senior Mobile Phone, Unlocked Senior Mobile Phone, T3105 Basic Cell Phone with Large Buttons, T3105, Basic Cell Phone with Large Buttons, Phone with Large Buttons, Large Buttons, Buttons</p>
--	--

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.